



This manual has been scanned by the
Vickers MG Collection & Research Association

www.vickersmg.org.uk

Please support the work of the Association.

Click on the image to donate through PayPal:



Or regularly support us through Patreon:



A not-for-profit company, limited by guarantee, registered in England, Company Registration Number 07855202

61
W.H.
M.M.

W.H. M.M.
[When Copyright Reserved]

HANDBOOK

FOR THE

303 IN. VICKERS MACHINE GUN

(MAGAZINE RIFLE CHAMBER)

Mounted on Tripod Mounting, Mark IV.

W.H. M.M.
Nov 1917
W.H. M.M.



LONDON:
PUBLISHED BY HIS MAJESTY'S STATIONERY OFFICE,

25, ABINGDON STREET, LONDON, E.C. 4.
PRINTED BY THE STATIONERY OFFICE, LONDON, E.C. 4.
PRINTED BY THE STATIONERY OFFICE, LONDON, E.C. 4.
PRINTED BY THE STATIONERY OFFICE, LONDON, E.C. 4.
PRINTED BY THE STATIONERY OFFICE, LONDON, E.C. 4.

1917.

Price 6d. Net.



(As to prices in brackets, see top of page 2.)

Equipment Regulations—continued.

Part 2. Details—continued.

Sect.	Sect.
e. Mountain Artillery with B.L. 2.75-inch Equipment. Mountain Battery and Ammunition Column. Mule Transport. (Regular Army.) 1914. Provisional. 6d. (6d.)	XV. Camel Corps School, Egypt (Regular Army). 1914. 2d. (2d.)
XIIa. Royal Garrison Artillery (Regular Army). 1914. 2s. 6d. (1s. 11d.)	XVI. Special Reserve. 1913. 4d. (4d.)
XIIIa. Royal Garrison Artillery Siege Artillery, Movable Armament, and Machine Guns in Armaments. 1913. 1s. (10d.)	XVII. Officers Training Corps. 1912. 3d. (3d.)
	Practice Batteries and Drill Guns (Fixed Mountings) of the Royal Garrison Artillery. (Part 2, Secs. XIIa and XVI, and Part 3.) 1909. 1s. 6d. (1s. 2d.)

Part 3. Territorial Force. 1914. 6d. (6d.)

Do. Details:—

Sec. IX. Artillery. 1912.

Do. Amendments. April 1912; Feb. 1914. Each 1d. (1d.) (Out of print)

Sec. X. Engineer. 1912. 3d. (3d.)

Amendments to Part 1. Feb. 1916. 1d. (1d.)

Amendments to Part 2. Feb., July (two issues), Aug. 1914. Each 1d. (1d.)

Amendments to Parts 1, 2 and 3. Nov. 1913. 1d. (1d.)

Amendments to Parts 1, 2 and 3. March, July 1913; April, Aug. 1914. Each 2d. (2d.)

European War, 1914-17. (See also PICTURE POSTCARDS) —

Despatches (Naval and Military) relating to Operations in the War:—

I. Sept., Oct., and Nov. 1914. With List of Honours and Rewards Conferred. With Sketch Map. 2d. (3d.)

II. Nov. 1914 to June 1915. With Names of Officers mentioned, and Awards of the Victoria Cross. 6d. (7d.)

III. July to Oct. 1915. With Names of Officers and Men mentioned, and Awards of the Victoria Cross. 3d. (3d.)

IV. Dec. 11, 1915. From General Sir Ian Hamilton, G.C.B., describing the Operations in the Gallipoli Peninsula, including the Landing at Suvla Bay. 2d. (2d.)

V. Jan. to April 1916. With Names of Officers and Men mentioned, and Awards of the Victoria Cross. 6d. (7d.)

VI. May to Dec. 1916.

(In the press)

Examination Papers (all published papers of which the dates are omitted are out of print):—

Qualifying Certificates. Sept. 1905; March 1906; Sept. 1909; March, Sept. 1910; March, Sept. 1911; March 1912. Each 6d. (6d.)

Entrance: R.M. Academy, R.M. College, Qualifying Test for Commissions. Nov.-Dec. 1913. 1s. (11d.)

(8)

40
W.O.
3096

[Crown Copyright Reserved.]

HANDBOOK

FOR THE

303-IN. VICKERS MACHINE GUN

(MAGAZINE RIFLE CHAMBER)

Mounted on Tripod Mounting, Mark IV.

1917.



LONDON:

PUBLISHED BY HIS MAJESTY'S STATIONERY OFFICE.

To be purchased through any Bookseller or directly from
H.M. STATIONERY OFFICE at the following addresses:
IMPERIAL HOUSE, KINGSWAY, LONDON, W.C. 2, and 28, ABINGDON STREET, LONDON, S.W. 1;
37, PETER STREET, MANCHESTER; 1, ST. ANDREW'S CRESCENT, CARDIFF
23, FORTH STREET, EDINBURGH;
or from E. PONSONBY, LTD., 116, GRAFTON STREET, DUBLIN;
or from the Agencies in the British Colonies and Dependencies,
the United States of America and other Foreign Countries of
T. FISHER UNWIN, LTD., LONDON, W.C. 2

1917.

Price Sixpence Net.

CONTENTS.

PART I.—THE GUN

	PAGE
Nomenclature	5
General Description—	
Non-recoiling Portion	7
Recoiling Portion	14
Action of Mechanism—	
Loading	18
Effect of the Force of the Explosion of the Charge and of the Fusee Spring	19
Firing Action... ..	22
Unloading	23
Sight, Fixed (battlesight)	23
Sights, Luminous	24
Condenser, Steam	24
Hyposcopes and Handles, Auxiliary	25
Machine Filling Belts	27
Instructions for Cleaning, and Points to be Observed when the Gun is in use... ..	29
Points to be attended to before Firing... ..	31
" " " " during "	33
" " " " after "	34
Stoppages	34
General Instructions for Maintenance and Preservation	47
Examination, Repairs and Adjustments—	
Examination	49
Stripping	51
Assembling	53
Local Repair of Barrel Casings	54
Stripping various Components	55
Renewal of Packing... ..	56
Instructions for fitting Washers to Connecting Rod	57

(B 12486) Wt. 11522—947 20M 7/17 H & S P. 16/839 (S)

CONTENTS.

3

	PAGE.
Spare Parts and Tools	59
Box Spare Parts with Case and Wallet	62
Explanation of Plates of Gun I, to VIII	63

PART II.—THE MOUNTING, &c.

Mountings—	
Description—	
Tripod, Mark IV	67
Tripods, List of Component Parts, &c.	69
" Auxiliary, Marks I and II	71
Cases, 303-inch Vickers gun	72
Chest, Vickers or Lewis 303-inch Guns, Mark II	73
Case, Spare Gun Barrel and Cleaning Rod, Maxim or Vickers	74
Wagon, Limbered, G.S.—	
Description	74
Spare Parts and Wagon Equipment Stores	75
Dimensions, Weights, &c.	75
Packsaddlery, M.G.—	
Mark IV Tripod	77

(B 12486)

A 2

PLATES.

PART I.

GUN.

- I. Section Breech Casing Parts, Side Elevation.
- II. Plan " " " Cover removed.
- III. Complete Section of Gun, Longitudinal.
- IV. Recoiling portion of Gun.
- V. Positions of Lock.
- VI. Parts of the Lock.
- VII. Various Parts.
- VIII. Feed Block.
- IX. Machine Filling Belts.

PART II.

MOUNTING, &c.

- X. } Mounting, Tripod .303-inch Maxim Gun Mark IV.
- XI. }
- XII. - Wagon, Limbered, G.S.

GUN, VICKERS, .303-INCH.

NOMENCLATURE OF PARTS OF GUN.

1. The following is the nomenclature of parts of the gun:—

Lock.—Consisting of casing; side levers, axis bush and split keeper pin; extractor levers right and left; extractor; gib; gib spring and cover; sear and spring; trigger and axis pin; tumbler and axis pin; firing pin; lock spring.*

Block, feed.—Consisting of body†; slide; top and bottom levers and split fixing pin; top and bottom pawls (front and rear), springs and axis pins.

Rear crosspiece.—Consisting of body; T-fixing pin; joint pin, check nut and keeper pin; firing lever with pawl and axis pin; trigger bar lever; safety catch, axis pin, spring with piston; milled heads with oil brushes and leather washers.

Box, fusee spring.—

Spring, fusee.—Including fittings.

Screw adjusting fusee spring.—Including vice pin

Fusee.—With chain and fixing pin.

Plate, side, right.—Including side plate spring.

Plate, side, left.—Including side plate spring.

Crank.—Including crank pin and fixing pin.

Rod, connecting.—Including adjusting nut and six washers; three No. 1 (.003-inch); three No. 2 (.005-inch).

Handle, crank.—Including fixing pin.

Barrel.—With asbestos packing.

* Either No. 1 or 2.

† Supplied both in steel and gunmetal. The latter are marked "V .303-in." on the top side.

Sight, tangent.—Consisting of stem; graduated plate* and upper and lower fixing screws; slide; pinion; pawl and fixing pin; slide spring; milled head and fixing screw; axis pin; tangent sight spring and piston.

Cover, rear.—Consisting of cover; cover lock, axis pin and spring; trigger bar and spring; cover joint pin with check nut and keeper pin.

Cover, front.—

Casing, barrel.—Consisting of casing ; steam tube with slide valve and keeper screw ; packing gland† ; asbestos packing ; two screwed plugs each with link, S-hook and stud ; protector for condenser boss with chain and swivel ; plug, cork, with chain and two S-hooks.

Sight, fore.—

Casing, breech.—Consisting of casing; check lever † and keeper pin; sliding shutter with catch, keeper pin, spring and plunger; slide left; slide right with roller, collar and split fixing pin; front cover catch, keeper pin, plunger, plug and spring.

Muzzle attachment for ball-firing.—Consisting of casing, outer, with split keeper pin, chain, S-hook and stud; disc; cone, front (end cover)§; cup, muzzle, with clamping screw; and gland.

N.B.—Casings, breech and barrel, are riveted together and cannot be separated.

* No. 1 Mark I for Mark VI ammunition.

† When the muzzle attachment is used this is kept in the spare parts box.

† Earlier pattern Mark I were fitted with a piston and spring. The latter are now obsolescent.

§ A Mark II front cone has now been introduced. This requires a Mark II end cover.

GENERAL DESCRIPTION.

2. Weight of gun $28\frac{1}{2}$ lbs. (including muzzle attachment weighing about 1 lb.); $38\frac{1}{2}$ lbs. with water in casing. Guns of later manufacture in which a number of the lightening operations are omitted weigh about $32\frac{1}{2}$ lbs. and $42\frac{1}{2}$ lbs. respectively.

3. The gun may be considered to be divided into two portions, the non-recoiling and the recoiling. It is worked automatically by two forces (1) the explosion of the charge (2) a strong spring (called the fusee spring).

NON-RECOILING PORTION.

4. The non-recoiling portion consists of the barrel casing and breech casing, and is attached to the mounting by the crosshead and elevating joint pins.

5. The *barrel casing* is of steel with longitudinal corrugations the interior being tinned to prevent rust. It has three openings, one on the upper right side near the breech for filling, one underneath near the muzzle for drawing off the water, and the third (also near the muzzle) for allowing the steam, but not the water, to escape. The first two are closed with screwed plugs; the last is open and connected with the steam tube.

6. A *cork plug* is provided which can be inserted in the steam escape hole when the gun is travelling, in order to prevent waste of water from jolting. The plug should always be taken out before commencing to fire, and put in again before the gun changes position. The cork plug fits into a special fitting made to receive the tube connected with a condenser. This fitting is provided with a protector to be used when the condenser is not connected to the gun.

7. The front end of the barrel casing contains a *gunmetal guide* to lead the barrel through the front of the barrel casing, when the barrel is being replaced after stripping. It forms a bearing for the barrel, and at the same time a seating for the asbestos packing. Guns of later manufacture have leading up to this guide and extended rearwards a brass trough which fits into the bottom central corrugation of the casing, being riveted to the casing at each end of the corrugation. A few guns have a short trough at the front end only. The object of the trough is to facilitate assembling and to prevent the tinned surface of the casing from being scratched off by the muzzle of the barrel.

8. To prevent the escape of water, there is at the forward end of the barrel casing *asbestos packing*, which is held in position round the barrel by the packing gland. At the rear end of the barrel there is a cannellure, also filled with asbestos packing, which prevents the escape of water.

9. The *steam tube*, which is of brass, consists of a fixed tube and an outer tube, termed the slide valve, so arranged as to slide freely along the fixed tube. In the fixed tube there is a hole near each end, and a third hole in the threaded portion in front, which connects with the steam escape hole by a tube attached to the interior of the barrel casing. The steam tube is screwed into the front end of the barrel casing, and is retained in position by a keeper screw, which ensures that the third hole coincides with the steam escape hole. At the breech end it fits into a thimble fixed to the rear end of the barrel casing.

If the gun is fired with elevation, the valve slides backwards and, closing up the hole at the rear end of the tube, prevents the water entering; at the same time it leaves the front hole uncovered, which, being above the water level, allows the steam to enter the tube and escape through the steam escape hole in the barrel casing. Similarly, if the gun

is fired with depression, the valve slides forward and allows the steam, but not the water, to escape through the rear hole. When the gun is horizontal, either one or both holes are uncovered by the valve.

10. The *foresight* is blade-shaped in design. It is protected by side wings formed on the block fixed to the barrel casing, in which the foresight dovetails. There is an opening in the right wing through which the foresight is assembled, and a punch hole in the left wing for adjusting and removing.

11. The *breech casing*, which is riveted to the barrel casing, consists of two outside plates (right and left) and a bottom plate. It is closed at the top by the two covers, front and rear, and at the end by the rear crosspiece.

There is an opening in the bottom plate through which the empty cartridge cases fall to the ground. This opening has a sliding shutter which, when shut, prevents dirt, &c., entering the gun. *The shutter must be moved to the rear before the gun can be loaded.* If the shutter is closed after loading, one shot only can be fired, but the empty case will remain in the breech casing and another cartridge will be fed up; the extractor dropping on to the shutter will prevent the lock going forward.

There is a seating for ejection on the bottom of the barrel casing which ensures the empty case being knocked off the extractor should it fail to drop off before the extractor is in a position to rise.

12. To the outside of the right plate is riveted the *check lever bracket*, on the outside stud of which the check lever pivots. There are two patterns of brackets, Mark I and Mark II. The Mark I bracket is grooved on the inside face to fit over the rib on the lightened pattern of plate, whilst on the Mark II two studs are formed for engagement in holes bored in the unlightened plate. A few brackets of

the Mark II pattern have only one stud; these have not proved very satisfactory, some having been found to work loose. Such should be replaced where necessary by the later pattern, which requires fitting by an armourer or artificer in accordance with para. 17743, L. of C. The early pattern of Mark I bracket has a second stud on the outside, which was provided as a bearing for a check lever piston with spring.* In brackets of later manufacture this second stud is omitted. The check lever is secured to the outer stud by a keeper pin, the stud being grooved for the pin, necessary clearance being allowed for the movement of the check lever and pin.

13. On the outside of the left-hand plate are two *studs* for holding the front end of the fusee spring box. There is also on the underside an *elevating stop*, without which it is possible for the bracket head of the mounting to damage the fusee spring box. Both plates have openings in the rear end, partly closed by *slides*, in which the crank bearings move.

The right slide carries the roller, collar, and split fixing pin; the left slide has a stud for holding the rear end of the fusee spring box.

14. On the inside of both plates are *cams*, which control the path of the extractor. These cams have a step cut in each, on the rear sloping surface. These steps are for the purpose of preventing the lock going forward if, owing to insufficient recoil, the recoiling portions do not come back far enough to allow the extractor to drop. They are also the means of hanging the lock (*see* para. 57).

15. The outside plates are connected at the rear end by the *rear crosspiece*, which is hinged at the bottom by a

* Earlier Mark I pattern check levers were fitted with a piston and spring now obsolescent. A Mark II pattern is now supplied. This is longer and heavier at its upper end.

screwed joint pin. This piece is fitted with handles of wood, inside which are steel cylinders for carrying oil closed by milled heads fitted with brushes; firing lever with thumb piece; trigger bar lever; safety catch; and safety catch piston and spring, which also actuates the trigger bar lever.

The upper end of the rear crosspiece is fixed in position by a T-shaped screwed pin, which passes through the outside plates from left to right. The pin acts also as an axis pin for the trigger bar lever and a tool for stripping the lock and other parts of the gun. The trigger bar lever draws back the trigger bar by the action of a pawl on the firing lever which presses forward its lower end.

16. The two *covers* are both hinged on one joint pin attached to the outside plates just behind the feed block. The pin is secured by a check nut with a keeper pin. The joint also forms a tie for the outside plates.

17. The front cover is secured by a *catch* which must be turned up to open it. This catch, when down, is kept in position by a plunger and spring. There is on the underside of the front cover at its rear end an extractor stop. This, together with the stop on the lock casing, prevents the extractor from rising too high.

18. On the top of the rear cover, about $\frac{1}{2}$ -inch from the rear end of the breech casing, is the *tangent sight* which is positioned by a piston and spring. The sight, when down, rests on a bridge, which is solid with the rear cover and strengthens it. The sight is of "U" pattern.

The tangent sight consists of stem,* a plate graduated up

* Later pattern tangent sight stems (Mark II) are provided with an aperture fixed sight formed on the left of the semicircular flange at the rear end. It is sighted for a range of 400 yards, and is for use with the stem in a horizontal position. Guns fitted with Mark I stems are provided with an independent fixed sight, *see* page 23.

to 2,900 yards (Mark VI ammunition, 2,800 yards), and slide. Running through the centre of the slide is a pinion, the teeth of which work in the rack on the stem. A pawl is secured to the pinion by a fixing pin. On the underside of one end of the pawl are teeth, which engage in the circular rack on the slide.

When the slide is at rest the stud on the inside of the milled head (nearest the slot for the slide spring) bears on the stud on the pawl immediately over the teeth, being actuated by the slide spring, and thus forcing the teeth into the circular rack. This keeps the slide stationary on the stem. On rotating the milled head, this stud is partly disengaged from the stud on the pawl, thus permitting a second stud on the milled head to press on one side of the V-shaped ramp at the other end of the pawl. This action releases the teeth sufficiently to permit of the pawl being moved round the circular rack by the action of the stud bearing on one side of the V-shaped ramp on the pawl; this moves the slide along the stem. On releasing the milled head, the spring positions the cover, thus causing the stud on the pawl to become once more engaged with the stud on the milled head and to force the teeth into the rack.

A Mark II slide has been approved in which a pinion wheel working in the rack on the stem is used to raise and lower the slide. The slide has a saw-cut which allows it to be clamped to the stem, to prevent its jarring down during firing. A clamping nut is provided for this purpose.

The Mark II slide is interchangeable with the Mark I, and no alteration to the stem is required.

19. The *rear cover lock* is actuated by a flat spring on the inside of the cover and has to be lifted to open.

20. The rear cover and rear crosspiece are grooved to fit over the edges of the breech casing, so that when the rear crosspiece screwed T-fixing pin is home and the cover locked

these, with the assistance of the screwed cover joint pin, keep the casing and cover rigid.

21. The *trigger bar* slides inside the rear cover. It has a lug on the right, against which the trigger bar spring bears, and a projection on its rear end which engages the bent of the trigger bar lever. In its front end is a slot which allows the top of the trigger to pass when the lock is moving backward and forward. The block which closes the front end of the slot engages with the top of the trigger and draws it back when the trigger bar is drawn backwards by pressure on the firing lever.

22. There are also two *ramps* fixed inside the rear cover which force the extractor down on recoil, and guides, which assist in keeping the lock down.

23. The *muzzle attachment for ball firing* is provided to assist recoil. It is screwed into the packing gland seating at the front end of the barrel casing, the end portion acting as the gland.

The outer casing is a hollow cylinder screwed internally at the front end to receive the front cone and bored and grooved at the rear end to form an inner divided flange for the connection and retention of the gland which has an outer flange correspondingly divided for engagement.

Vent holes for the escape of gases are cut near the front end of the casing.

A split pin is attached to the outer casing by means of a chain connection. The pin can be entered in either of three holes bored equi-distantly in the outer casing for engagement with either of three corresponding holes in the gland when the casing is home in position on the gland.

The disc is placed in the front end of the outer casing and is pressed home and held in position by the front cone.

The muzzle cup is bored at the rear end to fit on to the end of the barrel. This end of the cup is split and is arranged to receive a transverse clamping screw for fixing

the cup rigidly to the barrel. When placing the muzzle cup on the barrel the screw must coincide with the flat on the muzzle to allow the cup to pass. After the cup has been pushed home it must be given a half turn to bring the clamping screw into the cannellure and away from the flat. It must then be screwed firmly up with the combination tool. Neglect of this will lead to the cup being broken or blown off.

A Mark II muzzle cup has been approved which is attached to the barrel by a screw thread. When assembling this it must be seen that it is screwed firmly home on the barrel by the combination tool.

Barrels for the Mark II muzzle cup have a screw thread at the muzzle end. They have "Mark II" stamped on the upper and lower surfaces of the trunnion block.

Mark II cups cannot be used on Mark I barrels, nor Mark I cups on Mark II barrels.

The gland and front cone have flanges which are grooved to receive the combination tool provided for assembling and stripping purposes.

A Mark II front cone has been introduced. This is bullet proof. Unlike the Mark I, it is conical at the front in order that, if struck, the bullets may glance off. The bullet exit hole in the front end of the front cone should be covered when not actually firing, to prevent the entrance of mud, &c., by the end cover, a pattern of which is provided for each type of front cone, viz., Marks I and II respectively. The end cover is attached to the S-hook of the existing chain connection by a second chain and S-hook.

RECOILING PORTION.

24. The recoiling portion (which is mounted inside the non-recoiling portion) consists of a barrel and two side plates, which carry the crank and lock, with connecting rod.

25. The barrel is browned and has a groove round it near

the muzzle for the clamping screw of the muzzle attachment, a flat being cut in front of the groove to allow the attachment to be assembled. At the breech end it is formed with a square block, from which project two studs (one at each side) called the barrel trunnions. By means of these trunnions the barrel is connected to the side plates.

The front of the barrel block bears against the face of the barrel bearing in the barrel casing.

26. The *side plates* are both bored to receive the barrel trunnions, and have guides, along which the flanges of the lock move. These guides have two interruptions on each side to enable the lock to be lifted out. In addition, each side plate has a bearing through which the crank passes, thus connecting the latter with the barrel; these bearings move in slots in the breech casing.

27. Both side plates are fitted with *side plate springs* to ensure that the horns of the extractor do not drop below the solid cams during the backward movement of the lock when there are no cartridges on the extractor.

28. The left side plate is prolonged to the front, and has a recess in which the bottom lever of the feed block engages.

29. The *crank* is fitted with a connecting rod, which is free to rotate on the crank pin, and, outside the breech casing on the right, with a curved handle, the upper surface of which bears on the roller when the gun is firing. On the left it is fitted with a fusee to which is attached a chain of two links, by means of which it is connected to the fusee spring.

30. The *connecting rod* is attached to the crank by means of an axis pin called the crank pin, and is arranged to take the lock by means of an interrupted flange, thereby connecting the crank and lock. It has an adjusting nut and washers are provided which enable its length to be increased. By this means the space between the extractor and the barrel for the base of the cartridge is kept within safe limit, thus preventing separations.

31. On the left of the breech casing there is a strong spiral spring called the *fusee spring*, the rear end of which is connected by the fusee chain and fusee with the crank; the front end is attached to the breech casing by means of the fusee spring box and adjusting screw, which passes through the front end of the fusee spring box and through the nut at the front end of the spring.

The fusee spring can be adjusted without removing the box, as the vice pin of the screw is loose. This screw is kept in position by two nibs which enter recesses in the front end of the fusee spring box and are retained by the tension of the fusee spring. The fusee is attached to the crank by means of a stem and lugs and is easily removed.

32. The *lock* is attached to the connecting rod by the side lever head, and when in the firing position closes the breech. In this position it is held by the side levers, the crank (fixed in bearings in the side plates), and the connecting rod, which are all slightly below the horizontal to prevent the breech being opened at the moment of firing. The lock has a reciprocating motion communicated to it by the rotation of the crank, and is kept in position during its backward and forward movements by means of flanges working along guides on the side plates, and by the guides on the underside of the rear cover.

33. The *lock casing* has a piece riveted inside at the top of the front face, which acts as a guide for the lock spring when assembling, and also forms a seating for the spring. Its sides are drilled for the various axis pins, and on its underside it has flanges which work on the guides on the side plates. The lower of these flanges has interrupted portions to agree with those in the guides and allow the lock to be removed from the gun.

34. The *extractor* is attached to the front end of the lock by guide ribs, upon which it slides, and contains the gib.

The projections on the gib, together with the cartridge

grooves, form recesses which retain the cartridge in position.

35. The extractor is moved upwards by means of the *side* and *extractor levers*. The upward and downward movements of the extractor are regulated by guide ribs and stops; the top stop on the face of the lock casing acting in conjunction with the stop on the underside of the front cover limits the upward travel of the extractor, while the bottom stops, formed on the sides of the lock casing, limit its downward travel by intercepting the extractor levers.

36. The *feed block* fits under the front cover into a recess cut in the breech casing. It is provided with a slide to which are attached two pawls with spring for the purpose of moving the cartridges from right to left. These pawls are made with finger pieces and can be pressed down together, releasing the pawls from the belt. The slide has a transverse motion given to it by means of two levers which are fitted together; the top lever has a stud which engages a slot on the slide, and on the bottom lever is a stud which engages in the recess in the left side plate; by this means the slide is connected with the recoiling portion. The feed block has also two stationary lower pawls which are connected by a finger piece, and which engage under the succeeding cartridge and prevent the belt slipping backwards during firing. The feed block is provided with guides fitted above and below in the cartridge way, which ensure the cartridges coming to the exact position where they can be gripped by the extractor; they are prevented from being pushed too far through to the left by means of the cartridge and bullet stops, which are inside the feed block.

37. The gun is supplied with cartridges from a *belt* which passes from right to left through the feed block. This belt is formed by two pieces of webbing connected together by eyelets and brass strips of two lengths the projecting strips

showing how far the cartridge should be inserted ; the belt is made thick at the edge next the bullets by being folded over a piece of cord, so that the cartridges may be kept parallel in passing through the feed block, and lie evenly in the ammunition belt boxes.

ACTION OF MECHANISM.

38. It is not alone sufficient for a high standard of knowledge of mechanism to be reached ; it must also be maintained, and therefore instruction should be continuous throughout the year, for it is easily forgotten if neglected.

39. A theoretical knowledge of the mechanism is not sufficient. Instruction must be so thorough and practical as to ensure that all mechanical operations are performed correctly from force of habit, so that they will be carried out instinctively in moments of excitement.

Note.—(i) A belt and dummy cartridges will invariably be used for purposes of instruction. (ii) A service lock must always be in the gun, when firing either ball or blank ammunition. For instructional purposes, when ammunition is not being fired the D.P. (instructional) lock should be used in the gun whenever possible.

40. The following is the correct sequence in which instruction in mechanism should be given ; each stage must be thoroughly understood before proceeding to the next.

LOADING.

41. *To Load the Gun.*—(a) Pass the tag end of the belt through the feed block from the right side ; (b) with the right hand pull the crank handle on to the roller ; (c) with the left hand pull the belt through to the left front as far as

it will go ; (d) let go the crank handle. The first cartridge will then be gripped by the extractor. Repeat the above and, when this has been done, the first cartridge will be in the chamber, and another gripped by the upper part of the extractor. The gun is then ready for firing.

42. On raising the safety catch and pressing the thumb piece of the firing lever the gun will fire automatically until pressure is released. The lock will then be home, and the extractor will be gripping (a) a live cartridge in the feed block and (b) a live cartridge in the chamber.

EFFECT OF THE FORCE OF THE EXPLOSION OF THE CHARGE AND OF THE FUSEE SPRING.

43. Suppose the gun to have just fired the first cartridge in the belt ; the extractor will be gripping the second live cartridge in the feed block and the empty case, which has just been fired, in the chamber ; the explosion will cause the recoiling portion to move backwards through a distance of about one inch, thereby extending the fusee spring.

This backward movement is due partly to recoil and partly to the effect of the ball-firing attachment which acts as follows—The powder gases which escape from the muzzle after the exit of the bullet strike violently against the front cone and rebound on to the front face of the muzzle cup, driving it and the barrel, to which it is attached, backwards. The gases then escape into the air through the openings in the outer casing.

44. *Action in the Feed Block.*—The recess in the prolongation of the left side plate by means of the stud actuates the bottom lever of the feed block. The bottom lever acts on the top lever, which moves the slide and the top pawls to the right, to engage behind the cartridge held in place by the bottom pawls.

45. *Rotation of the Crank.*—The backward movement of recoil causes the tail of the crank handle to roll against the roller, thereby rotating the crank. The rotation of the crank draws back the lock and causes the fusee to wind the fusee chain, thus further extending the fusee spring. The continued rolling of the crank handle against the roller assisted by the fusee spring forces the whole of the recoiling portions forward again, with the exception of the lock, which continues its backward movement for a short distance before it joins in the forward movement. As the recoiling portions go forward, the recess in the prolongation of the left side plate actuates the bottom lever of the feed block. This bottom lever acts on the top lever, which moves the slide and the top pawls to the left, the pawls thus bringing the third cartridge in the belt to a position against the cartridge and bullet stops, ready to be gripped by the extractor. The belt, as it moves to the left, slides over the bottom pawls, which are depressed as the cartridge passes over them, and rise behind the fourth cartridge, holding the belt in position and preventing it from sliding back after the third cartridge has been withdrawn by the extractor.

46. *The Lock.*—As the lock moves backwards the extractor withdraws the empty case from the chamber and a live cartridge from the belt in the feed block. The horns of the extractor move along the upper surface of the solid cams until the cartridge is clear of the belt. When the extractor arrives at the rear end of the cams it is forced down by the ramps in the cover, thus bringing the cartridge drawn from the feed block in line with the chamber, and causing the empty case drawn from the chamber to fall off the extractor. The live cartridge is prevented from slipping down the face of the extractor by the bottom projection of the gib. (If the empty case does not fall off when the extractor drops, it will be forced off by the seating for ejection on the bottom of the barrel casing when the extractor rises.)

47. *Cocking Action.*—The rotation of the crank gives an upward motion to the connecting rod and side lever head, which latter, bearing on the tail of the tumbler, rotates it on its axis, and thus forces the firing pin to the rear. The long arm of the lock spring acts on the projection of the firing pin, while the short arm bears against the nose of the trigger; consequently the withdrawal of the firing pin compresses the lock spring by drawing the long arm towards the short arm. As the tumbler rotates, the nose of the trigger is forced by the short arm of the lock spring under the bent of the tumbler, and the continued motion of the tumbler forces the firing pin still further back, until the bent of the sear (which is actuated by the sear spring) is forced into the bent of the firing pin and retains it: The firing pin is thus prevented from flying forward.

48. *Action of the Fusee Spring.*—When the force of the explosion is expended, the action of the fusee spring comes into play, continuing the forward movement of the barrel and side plates, and unwinding the fusee chain from the fusee. This gives the crank a rotary motion, which forces the connecting rod and side lever head downwards, causing the lock to continue the forward movement (*see* para. 45) and place the live round in the chamber. The extractor is moved upwards by the side levers acting on the extractor levers. The bottom projection of the gib slides over the base of the live cartridge in the chamber and the top projection of the gib slides over the base of the cartridge which has been automatically moved up into position in the feed block. The firing pin hole is thus brought opposite the cap.

49. As soon as the extractor reaches its highest position, the side plate springs engage in grooves in its sides to prevent the horns falling below and fouling the front end of the solid cams in the breech casing at the commencement of the backward movement, when (a) the side levers are

released from the extractor levers (*b*) the side or extractor levers are worn. This, however, can only occur when there are no cartridges on the face of the extractor.

50. The further downward movement of the connecting rod and side lever head, causes the lock to be forced slightly further forward, and the breech is then closed. During this movement steps on the side levers travel over bents on the extractor levers.

51. *Firing Action.*—(*a*) For the first shot. As the side lever head is brought slightly below the horizontal, it depresses the sear, thereby disengaging it from the firing pin, which then moves slightly forward until the bent of the tumbler engages the nose of the trigger. If the safety catch is raised and the thumb piece on the firing lever pressed, the pawl near the bottom of the firing lever pushes forward the bottom of the trigger bar lever. This, being pivoted in the centre, causes the top to come to the rear, engaging a projection on the trigger bar and drawing it to the rear. As the trigger bar is drawn backwards, the front end of the slot engages and draws back with it the tail of the trigger, thereby releasing the tumbler. The long arm of the lock spring then propels the firing pin on to the cap and the cartridge is exploded.

(*b*) For subsequent shots. The firer, by maintaining pressure on the thumb piece, holds back the trigger bar. Therefore, each time the lock goes forward the front end of the slot holds back the tail of the trigger before the lock is quite home. By this means the nose of the trigger is prevented from engaging in the bent of the tumbler. When the lock is home, the side lever head depresses the sear, thus permitting the long arm of the lock spring to carry the firing pin on to the cap, and the charge is exploded.

The depression of the sear is so timed that the firing pin cannot be released until the lock is in the firing position

52. On releasing the thumb piece, the short arm of the lock spring forces the nose of the trigger under the bent of the tumbler, so that, when the sear is depressed, the nose of the trigger engages in the bent of the tumbler, and the firing pin is unable to go forward.

UNLOADING.

53. *To unload the Gun.*—Pull the crank handle on to the roller twice in succession (without pulling the belt), letting it fly forward to the check lever each time; release the top and bottom pawls and remove the belt from the feed block—then release the lock spring.

SIGHT, FIXED.

54. *Description.*—A certain number of fixed sights have been provided for use with guns supplied with tangent sight stems of Mark I pattern, which, unlike the Mark II pattern, are not fitted with a fixed sight, on the foot of stem, in order that these guns also may be used at short ranges without raising the tangent sight stem.

There are two patterns of fixed sight, known as Mark I and Mark II. The Mark I is arranged to slide on to the end of the tangent sight stem, and to be fixed by the upper graduated plate screw, one of the latter being supplied with each sight in addition to the existing screw in the stem. Some of the Mark I sights have a "U" cut in the bar, and some have a "V." The former are marked "400 yards" and with the letter "V," and the latter "Vickers battle-sight, 400 yards." The Mark II sight has an aperture, and is arranged to assemble under the arch of the tangent sight bridge on the rear cover of the gun, in cases where there are a series of arches in the second from the tangent sight joint. It is fixed in position by a nut, which, engaging a

short screwed stem on the sight, is screwed up to the arch, thus causing the base of the sight to be firmly pressed down on to the cover. This sight is marked "400 yards" and "Gun, Vickers, '303-inch."

SIGHTS, LUMINOUS.

55. *Description.*—These sights are provided for use in night firing. The foresight consists of a small steel block, which has a vertical blade in which is fixed, by means of a brass plate, a glass tube containing radio-active material. A spring clip is affixed to each side of the block. The foresight is assembled to the outside of the foresight protecting wings on the gun by being sprung on from the end which faces the breech of the gun. The backsight consists of a small steel block, which has a rectangular aperture on each side of which is fixed horizontally, by means of a brass plate, a glass tube of radio-active material. Affixed to the block is a spring clip formed for engagement with the tangent sight slide on the gun. The backsight is assembled to the gun by being sprung on to the blade on the left side of the tangent sight slide, in which the "U" is cut.

CONDENSER, STEAM.

56. *Description.*—The steam condenser is provided in order that the escaping steam, which is produced after about 600 rounds rapid fire, may be made as invisible as possible.

It consists of (1) a 6-ft. length of flexible metallic tubing on one end of which a ferrule is soldered; (2) a union nut which is arranged to engage with the ferrule and to screw on to the condenser boss on the barrel casing of the gun, and thus connect up the steam escape hole with the tubing; (3) a canvas bag of nose-bag type, capable of holding water,

which is provided with a carrying strap and with a small strap for closing the mouth of the bag.

When required for use the joint end of the tubing is assembled to the gun, whilst its free end with any form of rag wound tightly around it, leaving the opening clear, is inserted into the mouth of the bag; the latter, having been about half filled with water, is then closed over the wound end and placed in the desired position.

Note.—The tubing should be disconnected from the gun when not required for use and when possible during transit in order to prevent injury.

HYOSCOPES AND HANDLES, AUXILIARY.*

57. *Description.*—Hyposcopes and auxiliary handles are provided in order that the gun may be handled and the sights and objective seen from a level below that of the gun level, the gunner thereby being less exposed to the fire of the enemy.

Hyposcopes of earlier design were combined with auxiliary handles. Of these there were two patterns: (1) of wood box design suitable for both Maxim and Vickers guns (by adjustment) and fitted with ordinary rectangular plate glass mirrors. It was clamped to the handles of the rear crosspiece of the gun and was provided with an independent hand lever for operating the safety catch and firing lever of the gun. This pattern is known as Hyposcope, Maxim and Vickers '303-inch guns, Mark I; (2) of metal consisting of auxiliary handles with firing mechanism and adjustable periscope fitted with oval patent glass mirrors with caps, &c. The auxiliary handles are made of cycle tubing, and the ends of each of the tubes forming the handles are fitted with ordinary cycle grips. Its designation is Hyposcope, Vickers '303-inch gun, Mark I. The auxiliary

* Now obsolescent

handles of this hyposcope are used with the later patterns of hyposcope subsequently referred to.

Hyposcopes of later design are prismatic (Youlten's Patent). There are two patterns for the Vickers gun known as Hyposcope, Vickers '303-inch gun, Mark II, and Hyposcope, Maxim and Vickers '303-inch guns, Mark II, respectively. The glass prism with its fittings is common to both marks, the only difference being in the method of attachment to the gun.

The prism is fitted in a metal casing and to the casing is screwed a bracket (or collar) with clamp screw.

The special features of the Vickers pattern Mark II consist of a fixed stem which projects vertically from the gun bracket to carry the prism. The gun bracket is arranged to clamp to the upper arm of the left handle of the rear crosspiece, the lower half of the bracket being hinged to the upper portion and secured by means of a clamping screw which is pivoted and retained in the lower half of the bracket.

The Maxim and Vickers Mark II pattern which has been approved for future supply is suitable for both Maxim and Vickers guns.

It is in the form of a plate which bridges the handles of the rear crosspiece and is secured by means of the existing milled heads. The plate is slotted in order that it may be assembled without removing the milled heads. On the plate is formed a joint for the stem, the latter being hinged in the joint and positioned vertically or horizontally, as required, by a flat spring screwed to the upper surface of the plate and acting upon the lower end of the stem. When it is necessary to open the rear breech casing cover of the gun with the hyposcope assembled, the stem with prism can be swung out of the way to the left.

Handles, auxiliary, Vickers '303-inch gun, are provided

for use with these patterns of hyposcope. They are identical with the handles of the same description which form part of the Mark I hyposcope.

MACHINE, FILLING BELTS, MAXIM '303-INCH, MARK II.*

(Plate IX.)

BELT-FILLING MACHINE.

58. *Description.*—The belt filling machine is designed to place the cartridges expeditiously and evenly in the ammunition belts, and is constructed so that it may be readily clamped on to the most convenient place.

The chief parts are the bed plate, pocket opener, removable crank handle with fixing pin and chain, crank, connecting rod, cam bar, hopper, traversing gear, hinged loading tray, and hinged leg.

In the Mark I machine the crank handle is not made removable; also the loading tray and leg are not made to fold in the centre.

Weight of machine complete with hopper, 19 lbs.

" " loading tray and leg, 4½ lbs.

59. *Instructions for use.*—The machine must be fixed, so that the crank handle can be worked with the right hand. The loading tray and the leg should be unfolded. The leg should be made rigid by turning up the keeper plate on to the pin catch, and the loading tray secured to the left of the bed plate by means of the pin, which is attached by a chain to the former. Turn the steel guide plate on the bed plate outwards; see that the pocket opener is back far enough

* The machine cannot be used with metallic belts.

to clear the belt; place the belt behind the roller and into the belt guide, the edge of the belt to be touching the side of the guide, the projecting ends of the long brass strips to point away from the cartridge plunger and to pass under the steel guide. The pawl lies on the top of the belt. Turn the steel guide plate into position again, and draw the belt through with the left hand until the first pocket is opposite the pocket opener. Fill the hopper with cartridges, and replenish as required. On revolving the crank handle, the pocket opener will enter the first pocket and open it; on continuing the motion, the pocket opener will be withdrawn, and the cartridge plunger will push the lowest cartridge from the column of cartridges into the pocket, the pawl will then feed the belt along, and these motions will be repeated until the belt is filled.

A light pressure should be kept on the belt with the left hand until the weight of the filled portion of the belt is sufficient to assist the pawl. The angle of inclination of the loading tray is an important factor in this, and requires careful adjustment.

N.B.—Great care should be taken to see that the pocket opener enters the pocket each time, otherwise it may pierce and spoil the belt. On this account the crank handle should be held lightly and not turned too fast.

It is advisable to check the crank handle momentarily at the point where the pocket opener is about to enter a pocket.

In the event of the plunger not carrying the cartridge far enough into the belt, the machine must be sent to the armourer to have an additional piece soldered to the plunger.

INSTRUCTIONS FOR CLEANING AND POINTS TO BE OBSERVED WHEN THE GUN IS IN USE.

60. *To clean the Mechanism*, a mixture of equal parts of G.S. oil, lubricating, and oil, mineral, burning, should be used. If any parts are clogged with dried oil, spirits of turpentine should be used to remove it. After cleaning each part, it should be thoroughly dried and slightly oiled with G.S. oil, lubricating. Very little oil should be used for this purpose, as it is apt to catch the dust and clog.

61. The plan of *hanging* the lock and moving the recoiling portion by pulling on the crank handle, affords a ready means of oiling the recoiling portion and the bearing parts of the barrel, viz., (a) just in front of the trunnion block (which can be got at by removing the feed block), and (b) at the muzzle end, in front of the packing gland.

The lock is hung as follows:—Pull the crank handle slowly backwards till the horns of the extractor drop into the steps on the rear face of the solid cams. The barrel and side plates can now be moved backwards by placing the thumb behind the knob of the crank handle and the two first fingers on the tail of the handle and rotating it.

62. *To clean the Barrel*.—Open the cover, pull the crank handle over against the roller, raise the lock and let it go forward slowly and rest upon the top of the breech casing. Take off the outer casing and muzzle cup of the ball-firing attachment. Place a piece of flannelette, about 4 inches by 2 inches in each eye* or slot of the cleaning rod, care being taken that the latter is surrounded with the flannelette, which should be well oiled; then insert the rod into the muzzle of

* The Mark II cleaning rod has one eye only, and is shorter than the Mark I. It has no retaining shoulder for the bush.

the barrel, placing the movable bush on the muzzle, and pass it up and down till the barrel is clean; replace the oiled flannelette by dry pieces, and finally pass freshly-oiled pieces through, leaving the barrel well oiled. If the flannelette is tight, and is pushed through the breech, it is necessary to reverse it before pulling it back, otherwise it will jam.

63. When ball ammunition has been fired, daily cleaning of the barrel is necessary for at least ten days afterwards. Subsequent cleaning must depend on the discretion of the officer in charge of the gun; in a dry climate once a week should be sufficient, but in situations where the barrel is exposed to a moist atmosphere it may be necessary daily. The bore should at all times be left coated with oil.

64. When the D.P. barrel has been used for firing blank ammunition it should be thoroughly cleaned as soon as possible and left coated with oil. Subsequent weekly cleaning should suffice, but this also must depend on local conditions.

65. *To use the Double Pull-through.*—If slight rust or metallic fouling is present, take off the outer casing and muzzle cup of the ball-firing attachment. Remove the barrel, place the muzzle protector in position, and, having thoroughly oiled the gauze, drop the weight through the bore from the breech end. Fix the barrel in a vice or have it held firmly by two men and, with the assistance of another man, pull the cord backwards and forwards until the fouling or rust is loosened; the barrel can now be cleaned with the cleaning rod and flannelette as described above. When the gauze fits too loosely to clean the grooves of the barrel, its diameter can be increased by inserting under each side narrow strips of flannelette or paper. When the gauze is worn out, it should be replaced by one of the spare pieces which are issued with each double pull-through.

Note 1.—When reassembling the barrel, care must be taken to see that it is properly packed, and that the packing gland is screwed right home to the barrel casing.

Note 2.—When reassembling the muzzle cup, care should be taken to follow the instruction in para. 23.

POINTS TO BE ATTENDED TO BEFORE LEAVING CAMP OR BARRACKS FOR FIRING.

66. (a) The surfaces on which all movable parts work should be thoroughly well oiled with petroleum, especially the following:

Bearing parts of the barrel and all recoiling portions.

The lock guides on the side plates, also the working parts of the lock itself, especially the levers and extractor.

Face of the feed block and the edges of the guides inside the feed block.

Bearings of the crank, the extractor stop on the front cover, the curved ramps, lock guides and trigger bar on the inside of the rear cover, and the check lever.

(b) In order to see that the recoiling portion works freely, cock the lock, remove the fusee spring box and spring, turn the crank handle upwards, take hold of it with the right hand and the fusee with the left, move the recoiling portion, with the gun horizontal, backwards and forwards, to see that it works freely and also that the barrel goes close home forward. The weight necessary to move the recoiling portion should not exceed 4 lb.

(c) Replace the fusee spring and weigh it with the spring balance as follow: take out the lock, place the loop of the spring balance over the knob of the crank handle, and, standing on the left side of the gun, press down the check

lever with the left hand. Pull the balance vertically upwards, resting the wrist on the breech casing; the reading indicated when the crank handle *commences* to move will be the weight of the fusee spring. This weight should be between 7 and 9 lbs. If the spring is over, or not up to weight, adjust by means of the vice pin; generally six clicks (three revolutions) make a difference of about $\frac{1}{2}$ lb. Turning the vice pin in the direction of the hands of a watch decreases the weight, and *vice versa*. The tension of the fusee spring should always be kept as high as possible, consistent with maintaining the normal rate of fire of 500 rounds per minute.

(d) Examine the barrel by means of the mirror reflector to see that the bore is clear. Examine the lock, feed block, firing lever and safety catch. See that the muzzle cup is correctly assembled and firmly screwed up.

(e) See that the barrel casing is filled with water. To fill casing, remove the screwed plug at the breech end, and also the cork plug, pour in the water, and replace the plugs. In climates where the temperature is likely to fall much below freezing point not more than about 5 pints of water should be put into the barrel casing; and 20 per cent. of glycerine or 33 per cent. of glycerine residue, whichever is available, mixed with the water will prevent it from freezing quickly.

(f) Ensure that the handles have been filled with oil; ascertain that the case, spare parts box, and its contents, and the cleaning rod, are with the gun.

(g) Examine the belts, inspect the brass strips, see that the belts are correctly filled and packed carefully in the ammunition belt boxes. Keep the belts dry if possible; should they get wet, lay them out to dry. New or stiff belts should be well plugged.

(h) Should the water in the barrel casing become frozen solid, on the gun being fired the barrel will probably not recoil far enough to work the gun, and will remain back. To

remedy this, pull the crank handle on to the roller, then bring it back to a vertical position and force the barrel to the front, pulling the belt if necessary; let the crank handle return to the check lever and fire the gun. This should be repeated until the barrel recoils correctly.

POINTS TO BE ATTENDED TO DURING FIRING.

67. (a) See that a sufficient supply of water is kept in the barrel casing so that the barrel is never uncovered.

The water in the barrel casing begins to boil when the gun has fired about 600 rounds with the greatest rapidity; after this, if the firing is continued, the amount of water evaporated is about $1\frac{1}{2}$ pints for each 1,000 rounds. When the barrel casing is filled with water about 2,000 rounds may be discharged at short intervals without replenishing, but this depends upon the rapidity with which the gun is fired.

(b) The belt is on no account to be pulled when the gun is firing.

(c) During a temporary cessation of fire, oil the lock and all frictional parts, remove a partly used belt and replace it by a full one. See that the clamps of tripod legs have not worked loose.

(d) Keep the belt always in line with the feed block and the ammunition box, if possible, up to, but not above, the cross head-joint pin.

(e) See that belts are refilled without delay.

POINTS TO BE ATTENDED TO AFTER FIRING.

68. (a) See that the gun is unloaded.
 (b) See that the chamber and bore are well oiled *immediately* after firing.
 (c) See that the lock spring is released.
 (d) See that any live cartridges that happen to be among the cases are collected.

69. On return to barracks the gun and barrel should be thoroughly cleaned as soon as possible. The water must be drained out of the barrel casing. The lock should be examined to ensure that it is not damaged. The barrel must be removed and carefully dried and oiled, the outside of the barrel being oiled as well as the bore. Ammunition belts should be examined and if wet or damp should be hung up to dry.

STOPPAGES.

70. Stoppages in the automatic action of the gun during firing may be classed under two main headings :—

- (i) *Temporary*, which are due to :—

(a) Failure of some part of the gun of which a duplicate is carried and which therefore can be easily and quickly replaced, or faulty ammunition.

(b) Some cause which can generally be avoided by a high standard of training and a thorough knowledge of their gun by the detachment. These are generally due to neglect on the part of the detachment of some of the points to be observed before, during, and after firing.

- (ii) *Prolonged*, which are due to failure of some part of the gun which cannot, as a rule, be put right by the detachment under fire or without skilled assistance. These necessarily put the gun out of action for a more or less prolonged period.

71. On the knowledge and training of the detachment depends the rapidity with which "temporary" stoppages can be overcome.

72. The following table of temporary stoppages, set out under five columns, gives a clear indication of the method to be employed in teaching the detachment the practical side of the mechanism. Column I shows the four positions of the crank handle when the gun stops firing. The first three positions may vary slightly, as shown by the dotted lines. These positions, which afford a ready indication of the cause of stoppage—and therefore of the correct "immediate action" to be performed—must be recognised clearly before the instruction proceeds.

At this stage the detachment should not be required to know what these four positions indicate. The indication given below the diagram will be explained when the probable causes of the stoppages are being taught.

Column II gives a detailed description of the "immediate action" to be performed by the firer (sometimes with the assistance of No. 2) as soon as the position of the crank handle has been recognised after the gun has stopped firing.

Column III deals with the probable causes of these stoppages, but it is of first importance that the instructor does not proceed to this stage until he is assured that every "immediate action" can be correctly and immediately carried out without the slightest hesitation or forethought.

A thorough knowledge of the causes of temporary stoppages will not only give the detachment a practical knowledge of the working of the gun, but will also be a help in the

discovery of the cause of any unusual breakdown which may occur.

In Column IV is given the method for preventing the recurrence of certain stoppages, the cause of which may be only temporarily cured by the immediate action. It will sometimes be possible to carry out these preventions in two or three minutes; at other times their execution may cause the gun to be temporarily out of action for a longer period; but in either case, no skilled assistance or special appliances other than those carried with the machine gun section will be required.

Column V shows how the various temporary stoppages can be simulated for instructional purposes. It is unnecessary to teach these methods of preparation to the machine gunner, but every instructor must have a thorough knowledge of this column in order to teach the correct "immediate action" for any temporary stoppages.

73. Whenever instruction is being carried out, a belt and dummy cartridges will be *invariably* used, and in order to simulate the various stoppages, empty cases, bulged dummy cartridges, separated cases, and dummy cartridges with the rims thickened, will be required by the instructor.

The instructor must also see that a spare lock, feed block, belt, and a clearing plug, are by the gun, without which the correct immediate action cannot always be carried out.

74. As the clearing of a stoppage often knocks the sights off the aiming mark, the instructor should lay stress on the importance of re-laying the gun, and for this purpose the instructional machine gun or landscape target will be used.


In addition to the instructions conveyed in the table, the following points should be observed:

(i) If, when the cover is opened to investigate the cause of stoppage, it is seen that the extractor is not quite up, no attempt should be made to raise it. On the contrary it

should be first pushed down before the crank handle is turned over to the roller, as by this means all risk of breaking the projecting cartridge guides on the extractor and firing a cartridge accidentally is avoided.


(ii) When a temporary stoppage necessitates the employment of a spare lock, feed block, &c., the part which has been removed should be repaired as soon as possible, so as to make it again available as a reserve.

(iii) Should it ever be necessary to release the lock spring with the lock out of the gun, this should be done with the extractor fully up, and the firing pin hole opposite the firing pin.

Position of Crank Handle and its Indication.	Immediate Action.	Probable Cause.	Prevention of Recurrence.	Method of Preparation for Instructional Purposes.
<p>I.</p>  <p><i>Indication.</i> — The lock is unable to come back far enough to allow the extractor to drop.</p>	<p>(i) Turn the crank handle on to the roller, pull the belt to the left front, and let go the crank handle.</p> <p>(ii) If failure recurs lighten fusee spring by 3 "clicks."</p>	<p>The extractor has not dropped. This may be due to:—</p> <p>(a) Too heavy fusee spring.</p> <p>(b) Excessive friction, due to want of oil; grit, or tight pockets in the belt, or excessive packing in the caning in the caning, or packing in the gland.</p> <p>(c) Partial loss of the force of the explosion due to:—</p>	<p>(b) Clean and oil working parts. Examine the belt, which should be dried if damp; or if stiff belt, the pockets should be plugged. If due to excessive packing, examine, and re-packing, and re-packing of packing gland.</p> <p>(c) (i) The barrel should be examined at the first opportunity, and, if</p>	<p>Perform half the loading motions; pull the crank handle slowly back until the horns of the extractor have engaged with the cams on the solid steps on the belt to the left front, and let go the crank handle.</p> <p><i>For Range Purposes.</i>—Increase the weight of the fusee spring.</p>

PART I.

STOPPAGES.

	(i) Worn barrel.	(ii) Defective ammunition.	
<p>II.</p>  <p><i>Indication.</i> — The lock is unable to go fully home after recoil.</p>	<p>(i) Force the crank handle to the rear; open the rear cover and examine the cartridge on the face of the extractor. If a damaged cartridge, or an undamaged cartridge with the front portion of a separated case adhering to it, clear the face of the extractor and reload.</p> <p>(ii) If an undamaged cartridge, with no front portion of separated case adhering to it is found on the face of the extractor, clear the face of the lock, replace the extractor, keep the crank handle on the roller.</p>	<p>(i) Damaged cartridge. The cartridge is unable to enter the chamber completely although it has commenced to do so.</p> <p>(b) Separated case with front portion adhering to undamaged cartridge.</p> <p>(c) Separated case. The front portion of the case causes an obstruction and prevents the next cartridge from going into the chamber.</p>	<p>(a) Bulge the leading dummy cartridge in the belt and load.</p> <p><i>For Range Purposes.</i>—Place a bulged dummy cartridge in the belt.</p> <p>(b) Perform half the loading motions. Open the rear cover, withdraw and lift up the lock. Place the front portion of a separated case over the bullet of the extractor. Replace the lock, close the rear cover, pull the belt, and let the crank handle go slowly forward.</p>

much worn in the lead, should be changed.

(b) If a succession of separated cases occur the connecting rod must be lengthened (see para. 92).

II—continued.

Position of Crank Handle and its Indication.	Immediate Action.	Probable Cause.	Prevention of Recurrence.	Method of Preparation for Instructional Purposes.
	Take the clearing plug (seeing that the centre pin is back) and insert it into the chamber. Push the pin well home by allowing the lock to go forward. Then, keeping a firm pressure on the crank handle, give the clearing motion; withdraw the lock; lever back the handle; of the clearing plug and withdraw it (seeing that the front portion of the separated case is on the clearing plug) and reload.			<i>For Range Purposes.</i> —File a cartridge about one inch from the base, and insert in the belt. Care must be taken that the cartridge is not filed too far through, as there is the danger of the bullet being left in the barrel.

PART I.

III.



Indication.—The extractor is unable to rise to its highest position.

If the feed block slide is jammed, there is a fault in feed.

(i) Strike the crank handle on to the check lever by a glancing blow with the palm of the hand.	(i) Excessive friction.	(i) Clean and oil working parts.	(i) Perform the correct loading motions, except that when completing the loading the crank handle must be eased forward gently until it is in the 3rd Position (see diagram, col. 1).
(ii) If (i) fails, slightly raise the crank handle, pull the belt to the left front, let go the crank handle, and then strike it down on the check lever.	(ii) A cartridge is fed up slightly crosswise or a long brass strip is bent.	(ii) Carefully examine the belt.	<i>For Range Purposes.</i> —Lighten the fusee spring.
(iii) A. If (i) and (ii) fail, examine feed block slide: if jammed, No. 1 pulls the crank handle on to the	(iii). A. (i). Badly-filled belt with worn or loose pockets. The cartridges.	(iii). A. (i). Carefully examine belt.	(ii) Perform half the loading motions. Pull the crank handle on to the roller. Open the rear cover, pull a cartridge half way into position in the feed block and hold it there, and let the crank handle go slowly forward. Close the cover. <i>For Range Purposes.</i> —Bend a long brass strip.
			(iii). A. (i). Pull out the fourth cartridge in the belt about $\frac{3}{8}$ -inch. Perform half the load-

STOPPAGES.

Position of Crank Handle and its Indication.	Immediate Action.	Probable Cause.	Prevention of Recurrence.	Method of Preparation for Instructional Purposes.
	<p>roller, (*) holds it there and unlocks the front cover. No. 2 opens the front cover, and with the assistance of No. 1 raises the feed block sufficiently to allow the recoiling portions to go home. He releases the top and bottom pawls from the belt, which now withdraws until the top cartridge is clear of the feed block and rectifies the belt or cartridges if necessary. He replaces the feed block, pushing the slide over to the left, and lowers the front cover. No. 1 locks the front cover, pulls the belt to the left front, and releases the crank handle.</p>	<p>projecting unevenly from the belt prevent it entering or passing freely through the feed block.</p>		<p>ing motions; pull the crank handle slowly back until the horns of the extractor have engaged with the steps on the solid cams. Draw the recoiling portions to the rear by forcing the knob of the crank handle forward, at the same time pulling the belt to the left. Allow the recoiling portions to go forward. Bring the crank handle on to the roller and let go.</p> <p><i>For Range Purposes.</i>—Fill a belt badly.</p>

PART I.

STOPPAGES.

<p>(*) <i>N.B.</i>—In order to do this, it may sometimes be necessary for No. 2 to open the front cover and force down the horns of the extractor.</p>	<p>(iii). A. (ii). <i>For Range Purposes.</i>—Place the belt box at an angle to the feed block.</p>	<p>(iii). A. (ii). See that the belt box is in line.</p>	<p>(iii). A. (ii). <i>For Range Purposes.</i>—Damage the rim of a dummy cartridge, and place it in the belt.</p>
<p>(iii). B. If free, No. 2 opens the front cover and forces down the horns of the extractor. No. 1 clears the face of the extractor, and removes the lock. He changes the cartridge in position in the feed block and reloads.</p>	<p>(iii). B. (1) Damaged cartridge grooves. (2) Broken gib spring. (3) Broken gib. In these cases, the extractor is prevented from rising to its</p>	<p><i>Note.</i>—The effect of a fault in feed is that the top pawls, being engaged behind a cartridge in the belt, are held fast, when some obstruction, such as above, prevents the belt from passing freely through the feed block. The recoiling portions, being connected by the top and bottom levers to the slide, are arrested and prevented from going home. The distance from the point held back depends upon the point at which the obstruction asserts itself.</p>	<p>(iii). B. Damage the rim of the second dummy cartridge in the belt. Proceed to load. <i>For Range Purposes.</i>—Damage the rim of a dummy cartridge, and place it in the belt.</p>

Position of Crank Handle and its Indication.	Immediate Action.	Probable Cause.	Prevention of Recurrence.	Method of Preparation for Instructional Purposes.
		highest position. It may be necessary sometimes to slide the cartridge upwards when clearing the face of the extractor. Thick-rimmed cartridge.		<i>Notes.</i> — (1) As damage to the extractor has to be simulated by damaging a cartridge rim, this cartridge must be removed before reloading. (2) This stoppage should seldom be practised <i>on the range</i> , since the thickened rim may cause damage to the grooves.
		<i>Note.</i> —If it is apparent that the stoppage is due to a thick-rimmed cartridge, it will not be necessary to change the lock.		

PART I.

IV.



Indication. — That there has been no explosion, or, if any, that there has been little or no recoil, the lock remaining in its forward position.

(a) Turn the crank handle on to the roller, pull the belt to the left front and let go the crank handle.
(b) If (a) fails, place crank handle on to the roller twice, change the lock and reload.

(a) (1) No cartridge in the chamber.
(2) Defective ammunition.
(b) (1) Broken or damaged firing pin.
(2) Broken lock spring.

(a) Load and press the thumb pieces.
For Range Purposes. — Place a dummy cartridge in the belt.
(b) *For Range Purposes.* — The effect of these will be simulated by placing two dummy cartridges in the belt.

STOPPAGES.

Note.—Worn or damaged side or extractor levers may result in the extractor being unable to rise, or, if the side levers are bent, there may be either a succession of separated cases, or the lock may become jammed.

75. The causes of *prolonged* stoppages are so varied that they cannot be set out in detail. The following is, however, of importance, and should be known by all men of the detachment.

Parts of the locks damaged, no spare part being available.—The gun will fire without the sear, or if the bents of the sear or firing pin are badly worn or broken off, but only single shots, and only by pressing and releasing the double button quickly.

The gun will also fire if the nose of the trigger or bent of the tumbler is badly worn or broken off, but only rapid firing. In this case the gun will fire the instant the crank handle reaches the check lever, although the double button has not been pressed.

The gun can be worked as follows :—

(a) Group the cartridges in the belt, say 20 or 30 rounds each group.

(b) Lay the gun before commencing to load, pull crank handle on to roller, pull belt to left and let handle go; repeat, but before allowing the handle to reach check lever and the gun to fire, grip the rear crosspiece with left hand to control gun in the ordinary way.

If necessary firing can be stopped by throwing the filled end of the belt over the breech casing to the left. When the firing has been stopped as above described, hold the crank handle with the right hand, open the rear cover, press down the horns of the extractor, draw the lock back, and, if there is a live cartridge on the face of the extractor, remove the feed block and belt, close the cover and allow the lock to fly forward, when the live cartridge, which is on the face of the extractor, will be fired automatically. The lock can then be changed with safety. On no account should the lock be allowed to fly forward until the feed block has been removed and the cover closed. If, on drawing the lock back, it is

found that there is no live cartridge on its face, the lock may be changed at once, and the necessity for removing the feed block, and the subsequent precautions, will not arise.

GENERAL INSTRUCTIONS FOR THE MAINTENANCE AND PRESERVATION OF GUNS.

76. The manner in which machine guns are dealt with as equipment in the Land Service is laid down in Equipment Regulations as under :—

Regular Army, Parts 1 and 2.
Special Reserve, Part 1, and Section XVI, Part 2.
Territorial Force, Part 3.

77. For cleaning and oiling guns and mountings in the hands of the troops, the following stores are allowed per annum in peace, for one gun and its mounting :—

Dubbing	1 lb.
Flannelette, Mark III	11 yards.
Linen or cotton, old	3 lbs.
Oil, Mineral, burning	$\frac{1}{2}$ pint.
Oil, G.S., lubricating	8 pints.
Turpentine... ..	1 pint.
Soap, yellow	4 bars.

78. When guns are returned to store, packed for transmission, or stowed away in any place where they cannot be readily examined, the barrels and unpainted parts should be coated with "Composition, preserving, arms." The mixture is to be made hot, and a piece of flannel dipped in it, with which the exterior parts will be dabbed. To coat the inside of the barrels, draw a bunch of lamp cotton, well saturated

with the mixture, through from both ends. The lamp cotton is to be attached to a piece of twisted copper wire.

79. In frosty weather the working parts of the gun should only be slightly oiled with a lightly-oiled rag.

80. *History sheet.* (Will not be issued during war unless already available with gun.)—A memorandum of examination or history sheet accompanies each gun when issued. It will be carefully preserved and will be handed over with the gun to which it belongs whenever the gun is transferred from the charge of one officer to that of another, particulars being duly recorded. An immediate record will be made in the sheet of any accident which may happen to the gun, and of the result of each official examination it may undergo. On every occasion on which ball ammunition is fired, the number of rounds fired will be shown, the number of the barrel being inserted in the column of remarks.

81. *Barrels.*—A new or part-worn, but serviceable, barrel, is issued as a part of each gun. This barrel is only to be used for firing ball ammunition.

An old barrel, marked D.P., is also issued, to be used only for drill purposes. A second old barrel, marked D.P.B., is issued, to be used only for firing blank ammunition. Its chamber is bushed to take the special blank ammunition. On mobilization these three barrels are to be returned to store. In addition, two new barrels are issued with each gun and are to be kept in store and only taken into use on mobilization, one in the gun and one spare. New barrels in store are distinguished by a band of white paint round the centre.

EXAMINATION, REPAIRS AND ADJUSTMENTS.

EXAMINATION.

82. The following are the principal points to be observed in the examination of guns without using gauges :—

Recoiling portion.—See this moves freely. Pull not to exceed 4 lbs. See that the gland of the muzzle attachment is screwed right home to the front of the barrel casing and that the muzzle cup is correctly assembled (see para. 23).

Foresight.—See that the blade is in good condition.

Tangent sight.—See that the top edge and U on slide are in good condition, and that the slide works correctly.

Safety catch.—See the spring and catch act automatically when the firing lever is released.

Firing lever.—Test the firing lever by seeing that the trigger bar does not release the trigger before the safety catch is clear, and also see that the trigger is released before the stop on the lever bears against the stop on the rear crosspiece.

Connecting rod.—Test whether correct length with both locks as follows : Take off the fusee spring. Raise the cover and turn the crank handle back. The extractor being down, insert, through the opening in the underside of the breech casing, the *special armourers machine gun dummy cartridge in the bottom end of the extractor over the firing pin hole. Push the extractor right up to the upper stop, and, still retaining hold of the cartridge, see that the barrel is home ; then turn

* In the absence of this an armourer's "gauge, distance of bolt from end of chamber, .064-inch," may be used.

the crank handle over towards the check lever, at the same time guiding the cartridge into the chamber. Push the check lever back just clear of the crank handle and let the crank handle gently down towards rest. If the connecting rod is correct for length, a check will be felt. If no pressure is required, it shows that the lock is not fully home (*i.e.*, the connecting rod is not long enough). In this event the connecting rod must be lengthened by the addition of washers Nos. 1 or 2, or both, as may be required (*see* para. 92).

No. 1 washer (.003-inch) has one hole punched in the rim and No. 2 (.005-inch) two holes in the rim.

Barrel.—See to the condition of bore, rifling, lead and exterior.

Lock.—Test the extractor and side levers by bringing the crank handle gently on to the check lever. If the levers are correct, the extractor will be right up. Test the bents of the sear and firing pin. To do this, pull the crank handle on to the roller, then bring the crank handle gently down on to the check lever. The extractor should be well up to the top position before the sear is released. Examine the face of the extractor for burrs and flaws, at the gib gap and firing pin hole. Try the grooves with a dummy cartridge (armourers' dummies must be used for this purpose) to see the gib holds the cartridge horizontally. See that the nose of the trigger and bent of the tumbler are not too much worn. See that the point and bent of the firing pin are in good condition. A broken firing pin can be recognized without stripping the lock by releasing the lock spring with the extractor up. If correct, the firing pin will then protrude from the firing pin hole and can be withdrawn by raising the tail of the tumbler. If it does not protrude, or, if protruding, the point is not

withdrawn when the tail of the tumbler is raised, the firing pin is broken.

General.—See that all axis pins are correct.

REPAIRS AND ADJUSTMENTS.

83. *Stripping the gun.*—The gun is stripped in the following order, the gun being on the mounting.

Note.—Operations marked with an asterisk will *only be performed by an armourer.*

Lock.—Clear the extractor by revolving the crank handle twice; raise the rear cover, pull the crank handle on to the roller; see that the extractor drops, place the finger between the extractor and stop and lift the lock—at the same time allowing the crank handle to move slowly forward until the lock is released from the side plates. Give the lock $\frac{1}{6}$ turn and lift it out.

Block, feed.—Raise the front cover and lift out.

Box, fusee spring.—With the right hand at the rear and the left hand at the front, press the box forward until clear of the lugs and remove. Disconnect the fusee chain and remove the box and the spring.

Fusee.—Turn the fusee to the rear until the lugs on the stem are free to be withdrawn.

Ball-firing attachment.—Withdraw the split pin. Give the outer casing $\frac{1}{6}$ turn and remove it. Remove the end cover and unscrew the front cone. Loosen the clamping screw of the muzzle cup and revolve the cup till the clamping screw coincides with the flat on the barrel. Remove the muzzle cup.† Unscrew and remove the gland and packing.

Recoiling portion.—Raise the rear cover, unscrew the rear crosspiece T-fixing pin, and hinge down the rear crosspiece; remove right and left slides, and draw out

† With Mark II cup unscrew and remove the cup.

the recoiling portion. Disconnect the side plates from the barrel (removing the left one first).

* If necessary, by taking out the fixing pin, the crank handle can be driven off with a drift and hammer, but as a rule this should not be stripped.

Roller.—Remove split fixing pin, collar and roller.

* *Lever, check.*—Drive out the keeper pin from the underside, and take off the check lever. To remove the piston and spring, turn the piston—by using a screwdriver in the slot—until its lugs are free to pass along the slots, when the piston will be forced out by the pressure of the spring.†

Sight, tangent.—Unscrew the axis pin and force it out. Remove tangent sight, piston and spring.

Lock, cover, rear.—Unscrew the axis pin and force it out. Remove the cover lock and spring.

Trigger bar.—Remove the spring and withdraw the trigger bar.

* *Covers, front and rear.*—Remove the keeper pin and check nut, and force out the joint pin.

* *Catch, cover, front.*—To remove the spring and plunger, force the plug forward and give $\frac{1}{4}$ turn by means of a screwdriver, when the plug will be forced out by the spring. Before removing the plunger it must be turned so that the slots are free to pass the lugs in the catch. If necessary, by taking out the keeper pin the catch can be taken out, but as a rule it should not be removed.

* *Rear crosspiece.*—Remove the keeper pin and check nut, and force out the joint pin.

* *Sight, fore.*—The position of the foresight should first be carefully marked; drive the foresight out of the

† See footnote to para. 12.

dovetail seating through the right-hand opening in the protector.

Take out elevating and crosshead joint pin and remove the gun from the mounting.

Steam tube.—Up-end the gun so that it stands on the rear end of the breech casing.

Remove the keeper screw and unscrew the steam tube. (This should not be removed if the valve is free.)

Shutter, sliding.—Press in the catch and force the shutter to the front until it is against the stop, then press in the plunger with the No. 3 punch and further force the shutter forward until it is clear of the breech casing.

84. *Assembling the gun.*—Reverse all the foregoing operations with the exception that the recoiling portion must be replaced before the front packing and gland.

Care must be taken when re-assembling the steam tube that the acorn end is inserted into its seating in the barrel casing.

This is more easily assured by keeping the acorn end in contact with the adjacent channel formed by corrugation of the barrel casing.

The tube should screw home freely when in the correct position.

When replacing the muzzle cup on the barrel the screw must coincide with the flat on the muzzle to allow the cup to pass. After the cup has been pushed home it must be given a half turn to bring the clamping screw into the cannellure and away from the flat. It must then be screwed firmly up with the combination tool. Neglect of this will lead to the cup being broken or blown off.†

When replacing the gland of the muzzle attachment care must be taken to see that it is screwed right home to the

† Mark II cup requires screwing home only.

barrel casing. When not home the gland is liable to foul the muzzle cup when the barrel recoils, and thus cause damage to the cup. The split pin which fixes the outer casing of the attachment to the gland should be placed in the lowest hole.

LOCAL REPAIR OF BARREL CASINGS WHICH HAVE BEEN PIERCED BY BULLETS, &C.

85. In the event of the barrel casing being pierced by bullets, &c., thus putting the gun out of action, repairs will be carried out locally in accordance with the following methods to enable the gun to again take its place in the firing line with the least possible delay :—

(a) Temporary "first aid" repair to be carried out by the gun detachment ;

(b) Semi-permanent repair to be carried out by an armourer when opportunity occurs.

To effect (a), a pad of plasticine, preferably wrapped in a piece of flannelette or cloth to prevent it being squeezed through the hole or holes, is pressed over the latter and covered with an oiled pad of flannelette. The whole is then bound round with flannelette, folded in two to increase its strength, the flannelette being tied to make it fast. This, whilst not entirely preventing leakage, should do so sufficiently to enable the gun to be kept fit for action.

(b) The jagged edges of each hole should be hammered level with the casing and the casing cleaned around the hole. A piece of sheet tin, .02-inch thick, sufficient to overlap the hole considerably, should then be shaped, by means of a hammer and a piece of hard wood, to conform to the corrugations of the barrel casing, and to fit evenly over the hole. It should then be soldered in position. This, when properly done, makes a thoroughly sound repair.

The methods described will not remedy a hole in the end cap into which the tubular portion of the casing is screwed.

The following stores are supplied to enable repairs to be carried out :—

For (a) :

Plasticine (in tin boxes)	ozs.	6	Per gun, Maxim and Vickers, to be carried in the spare parts box.
Flannelette, 4 in. wide	yds.	8	

Section 13—C.

For (b) :

Tin, sheet, DXX, 17 in. × 12½ in.	sheets	10	Per Ordnance Depot.
Shears, tinmans, snip	pair	1	

Section 3.

Section 7.

STRIPPING VARIOUS COMPONENTS.

86. *To strip the lock.*—See that the lock is cocked ; force out the side lever split pin and axis bush ; remove side levers, extractor levers and extractor. Release the lock spring and push out the trigger and tumbler axis pins ; remove trigger, tumbler, lock spring, firing pin and sear with spring.

To strip the extractor : Push out the gib spring cover and remove spring and gib.

To assemble the lock : Reverse the above, except in the case of the lock spring, which must be forced home, long arm towards the extractor, when the lock is in the fired position, and when all the other parts are assembled.

NOTE.—The firing pin should never be released unless the extractor is up to the top stop.

87. *To strip the feed block.*—Force out the split pin and separate the top and bottom levers, take out the slide and remove pawls and spring.

Draw out the bottom pawl axis pin and remove spring and pawls.

To assemble, reverse the above.

* 88. *To strip the rear crosspiece.*—Unscrew the firing lever axis pin and remove the firing lever with pawl. Unscrew the safety catch axis pin; remove the safety catch and spring with piston; lift out the trigger bar lever.

To assemble, reverse the above. (See that the pawl engages the trigger bar lever.)

* 89. *To strip the tangent sight.*—Remove the fixing screws, graduated plate, milled head and slide spring; drive out the pawl fixing pin; take off the pawl; push out the pinion and remove the slide.

To assemble, reverse the above.

90. *To renew the packing at the breech end of the barrel.*—Should the gun leak at the breech, empty the barrel casing. Draw out the recoiling portion as directed above. Wind a strand of asbestos (part of a 5 yards piece) in the cannellure of the barrel, pressing it together with a thin piece of wood or the point of a screwdriver or knife, until the cannellure is full, then oil the asbestos and re-assemble the parts.

91. *To renew the packing at the muzzle end of the barrel.*—Should the gun leak at the muzzle, stand the gun on the rear crosspiece, remove the ball-firing attachment, unscrew the gland and repack, or, if necessary, replace the asbestos, having first oiled it, by winding it loosely round the barrel, and whilst winding, push it in with punch No. 2, a piece of wood, or any blunt-ended instrument which will fit; screw the gland home, return the gun to a horizontal position, hang the lock, and work the recoiling portion backwards and forwards to ensure that it moves freely. If the packing is

found to press too hard on the barrel, the gland should be removed and one or two strands taken out of the asbestos.†

92. *Instructions for fitting washers to connecting rod when required.*—Take off the fusee spring. Raise the cover, turn the crank handle back and remove the lock. Determine the number of Nos. 1 or 2 washers (or both as the case may be) required to make the length correct by first placing a No. 1 on the outer face of the adjusting nut on the connecting rod, replacing the lock and re-testing the length (see para. 82) adding the washers and again re-testing as may be necessary. When the correct length has been determined, the washers which have been placed on the outer face of the adjusting nut must then be assembled permanently on to the shoulder of the connecting rod and be secured by the nut. In order to do this turn the connecting rod back on to the trigger bar lever, then with the combination tool unscrew and remove the adjusting nut; place the washers on the connecting rod and screw the adjusting nut tightly home on to the washers. Re-test the connecting rod to ensure that the adjustment is correct.

NOTE.—Care should be taken to see that any washer or washers which may have been previously assembled are replaced in the case.

93. *Instructions for fitting spare discs for the ball-firing attachment.*—Remove the end cover and unscrew the front cone. Cut the front bevel of the disc across with a chisel, driving sufficient metal up to provide a hold for the pliers. Remove the disc and replace it with a new one. When assembling a new disc it may be necessary to tap the front cone lightly while screwing the disc home.

94. *Instructions for removing a barrel which has bulged in advance of the gland.*—Remove the outer casing of the

† See para. 84 regarding assembling of gland.

muzzle attachment from the gland and the muzzle cup from the barrel, and with "File, regular cut, 12-inch" (supplied to the armourer), file off the enlarged portion produced by the bulge. Remove the barrel and replace by a new one; re-assemble muzzle cup and outer casing of muzzle attachment.

95. *Instructions for the use of the tool for repairing fabric belts.*—Remove the damaged strips and eyelets. If a long strip requires fitting, first join the two portions as follows:—Place an eyelet in the hole of the dished end. Insert the punch of the tool into the unopened end of the eyelet, the opened end to rest upon the die, and gently press the handles together. Then put the punch in the other end of the eyelet and press the handles; then, keeping the belt horizontal, move the handles of the tool backwards and forwards in a circular direction with the punch of the tool as the centre, so as to shape the head of the eyelet nicely.

Put the strips into position on the belt, insert the eyelets, and repeat the above operation.

Short strips are fitted in a similar manner except that they do not require joining at one end previous to placing them upon the belt.

Care must be taken to press the eyelets as far through the strips as possible before using the tool in order to form a good head.

When firing Mark VI ammunition from a gun sighted for Mark VII up to 600 yards an addition of 200 yards should be made to the observed range. Above that distance 250 yards should be added. The results should in all cases be checked by observation.

RANGE TABLE FOR MARK VII AMMUNITION.

Range in Yards.	Angle of Elevation.		Range in Yards.	Angle of Elevation.	
	Degrees.	Minutes.		Degrees.	Minutes.
100	—	3	1,600	2	35
200	—	7	1,700	2	57
300	—	11·5	1,800	3	21
400	—	16·5	1,900	3	47·5
500	—	22	2,000	4	16·5
600	—	28	2,100	4	48
700	—	35	2,200	5	22·5
800	—	43	2,300	6	—
900	—	52	2,400	6	41·5
1,000	1	2	2,500	7	27
1,100	1	13·5	2,600	8	16·5
1,200	1	26·5	2,700	9	11
1,300	1	41	2,800	10	10·5
1,400	1	57	2,900	11	15
1,500	2	15			

SPARE PARTS AND TOOLS.

A filled spare part box, containing the following, is issued with each gun:—

	Carried in	
	Box.	Case.
Balance, spring	—	1 (a)
Block, feed	—	1
Boxes, tin, for small parts	2	—
Bushes, axis, side levers	1	1 (a)
Can, oil	—	1
Case, spare part box...	1	—
Collar, roller	1	—

(a) In wallet.

							Carried in	
							Box.	Case.
Corks	1	1 (a)
Cup, muzzle attachment	3	—
Discs, muzzle attachment	5	1 (a)
Eyelets, long	ozs. $\frac{1}{2}$	—
Funnel	—	1
Fusees with chains	1	1 (a)
Gibs	1	1 (a)
Hammer	1	—
Lever, extractor, left	1	—
" " right	1	—
Lock	—	1
Packing, asbestos, 5 yds. (pieces)	2	—
Pins, axis, trigger	1	1 (a)
" " tumbler	1	1 (a)
" firing	1	1 (a)
" fixing, crank handle	2	—
" split, fixing collar roller	2	—
" " keeper, bush axis, side levers	1	1 (a)
" " check nuts, long	4	—
" " muzzle attachment	1	—
Pin-T, fixing rear crosspiece	—	1 (a)
Pliers, cutting (pair)...	—	1 (a)
Plug, belt	1	—
" clearing	—	1 (a)
" cork	1	—
" screwed	1	—
Plugs, front cover catch	2	—
Plunger, front, cover catch...	2	—
Protector, muzzle	—	1 (a)
Pullthrough, double	—	1 (a)

(a) In wallet,

							Carried in	
							Box.	Case.
Punch, No. 3	—	1 (a)
" No. 5	—	1 (a)
Reflector, mirror	—	1 (a)
Roller	1	—
Screw, clamping, cup, muzzle attachment	3	—
Screwdriver, large	1	—
" small	—	1 (a)
Sear, with spring	—	1 (a)
Sight, fore	1	—
" tangent	1	—
Spanner, shifting	1	—
Spring, bottom pawl...	2	—
" cover lock	2	—
" front cover catch	1	—
" fusee with fittings	1	1 (a)
" gib	3	1 (a)
" lock	2	—
" safety catch with piston	2	—
" sear	2	—
" sliding shutter catch	2	—
" tangent sight	2	—
" " slide	1	—
" top pawl	2	—
" trigger bar	25	—
Strips, long	25	—
" short	—	1 (a)
Tool, combination	1	—
" repairing belt	—	1 (a)
Trigger	—	1 (a)

(a) In wallet

	Carried in Box. Case.
Tumbler	— 1 (a)
Wallet, case, spare parts box	— 1
Washers, adjusting, No. 1—.003-inch	— 3 (a)
" " No. 2—.005-inch	— 3 (a)
Wire gauze, pieces	— 2 (a)

In addition, the following are supplied to complete the equipment:—

Barrels	See paragraph 81.
Belts, ammunition... ..	See Equipment Regulations.
Lock, skeleton, brass	
Lock D.P. (instructional)... ..	
Rod, cleaning	

BOX, SPARE PARTS AND TOOLS, .303-INCH VICKERS GUN, LEATHER (MARK I).

The box is of leather of the following dimensions:—13 inches by $8\frac{1}{4}$ inches by $5\frac{1}{2}$ inches (approximately). Internally it is fitted with partitions, loops, and straps, to take the stores enumerated on pp. 59-61. It is closed with a lid which is secured by a strap. Carrying straps, with handle, are provided. The box also carries the spare part case.

BOX, SPARE PARTS AND TOOLS, .303-INCH VICKERS GUN, WOOD (MARKS I AND II).

These wood boxes are supplied as alternative to the leather box before described. They are fitted to take the same complement of spare parts and tools and the same pattern of leather spare part case as carried in the leather box. The lid is hinged and is secured by means of a spring catch, and carrying straps, with handles, are provided.

(a) In wallet.

The dimensions of the boxes are as follows:—

	Mark I.	Mark II.
Length over all	$19\frac{3}{6}$ in.	$15\frac{1}{2}$ in.
Depth "	$7\frac{1}{2}$ "	8 "
Width "	$9\frac{1}{2}$ "	$9\frac{1}{2}$ "

*CASE, SPARE PART BOX, .303-INCH VICKERS GUN (MARK I).

The case is of leather, $8\frac{1}{2}$ inches by 5 inches by 4 inches. It contains the wallet, and stores enumerated on pp. 59-61. It is closed by a lid secured by a strap. A shoulder strap 66 inches long passes round the case through loops at the sides.

*WALLET, CASE SPARE PARTS BOX, .303-INCH VICKERS GUN (MARK I).

The wallet is of leather, and when opened out measures $11\frac{1}{2}$ inches by $8\frac{1}{4}$ inches. It is provided with a double pocket to take the stores enumerated on pp. 59-61. When folded it is secured by a strap. The wallet is carried in the spare part case.

.303-INCH VICKERS GUN.

Explanation of Plates I to VIII.

Similar numbers indicate corresponding parts in all the plates.

- | | |
|------------------------|-----------------------|
| 1. Casing, barrel. | 6. Cover, front. |
| 2. Tube, steam. | 7. Cover, rear. |
| 3. Bracket, foresight. | 8. Sight, tangent. |
| 4. Gland. | 9. Bar, trigger. |
| 5. Casing, breech. | 10. Lock, rear cover. |

* The case with wallet forms a first aid gun kit and should always accompany the gun when in action, the box being left in the wagon line.

11. Rear crosspiece.
12. Lever, firing.
13. Lever, trigger bar.
14. Catch, safety.
15. } Plugs, screwed.
16. }
17. Protector, screwed, condenser boss.
18. Plug, cork.
19. Guide, front, barrel bearing.
20. Crosshead.
21. Cams, right and left.
22. Steps of cams, right and left.
23. Catch, front cover.
24. Pin, screwed, joint cover.
25. Pin-T, fixing, rear crosspiece.
26. Pin, screwed, fixing, crank handle.
27. Slides, right and left.
28. Roller.
29. Pin, screwed, joint, rear crosspiece.
30. Bracket, check lever.
31. Lever, check.
32. Bracket, elevating joint.
33. Stop, mounting.
34. Plate, bottom, breech casing.
35. Shutter, sliding.
36. Hooks of front cover catch.
37. Hole for keeper pin, front cover catch.
38. Lever of catch, front cover.
39. Grooves in front cover catch to clear "36."
40. Plunger, front cover catch.
41. Bridge, rear cover.
42. { Spring tangent sight.
43. } Piston
44. Grooves in "rear cover" for ribs on "5."
45. Ramps, rear cover.
46. Spring, rear cover lock.
47. Spring, trigger bar.
48. Lug on trigger bar for "46."
49. Base of tangent sight stem.
50. Hooks of rear cover lock.
51. Lug on rear cover lock for "45."
52. Slot in trigger bar for "86."
53. Lug on trigger bar for "13."
54. } Thumbpiece, sliding shutter catch.
55. } Plunger, sliding shutter catch.

56. Arms of rear-cross-piece.
57. Grips, rear-crosspiece.
58. Pawl, firing lever.
59. Spring, safety catch, with piston.
60. Pin, screwed, axis, safety catch.
- 60a. Finger grips, safety catch.
61. Pin, screwed, axis, firing lever.
62. } Thumbpiece, firing
63. } lever.
64. Pin, keeper, check lever.
67. Barrel.
68. Casing, lock.
69. Plate, side, right.
70. Crank.
71. Handle, crank.
- 71a. Tail of crank handle.
- 71b. Knob of crank handle.
72. Rod, connecting.
- 72a. Stem of connecting rod.
73. Fusee.
- 73a. Chain, fusee.
74. Spring, fusee
- 74a. Hook, fusee spring.
75. Box, fusee spring.
- 75a. Screw, adjusting, fusee spring.
76. Block, feed.
- (B 12486)
77. Cannelure in "67" for asbestos packing.
78. Trunnion block, barrel.
79. Lock.
80. Levers, side (pair).
81. Socket of side levers for "72a."
82. Extractor.
83. Gib.
84. Spring, gib.
85. Cover, gib spring.
86. Trigger.
87. Lever, extractor, right.
88. Tumbler.
89. Spring, lock.
90. Pin, firing.
91. Sear.
92. Spring, sear.
93. Flanges of lock casing.
94. Interruptions in flanges of lock casing.
95. Slots in lock casing for "99."
96. Bearings on lock casing for "80."
97. Upper extractor stop of lock casing.
98. Bent of extractor lever for "80."
99. Lugs on side levers for "95."

- 100. Bush, axis, side levers.
- 101. Pin, split, keeper, bush, axis, side levers.
- 102. Horns of extractor.
- 102a. Grooves in extractor for "79."
- 103 Shoulders of extractor for "87."
- 104. Grooves in extractor for side plate springs.
- 105. Hole in extractor for "90."
- 106. Recess in extractor for "83."
- 107. Pin, axis, trigger.
- 108. Pin, axis, tumbler.
- 109. Key of pin, axis, tumbler.
- 110. Projection on firing pin for "89."
- 111. Lever, top, feed block.
- 112. Lever, bottom, feed block.
- 113. Pins, split, fixing, top and bottom levers, feed block.
- 114. Stud of top lever for feed block slide.
- 114a. Slide, feed block.
- 115. Pawl, top, feed block, rear.
- 115a. Thumb grips of "115" and "116."
- 116. Pawl, top, feed block, front.
- 117. Spring, top pawls, feed block.
- 118. Pawls, bottom, feed block (pair).
- 119. Pin, axis, bottom pawl, feed block.
- 120. Finger plate of bottom pawls, feed block.
- 121. Spring, bottom pawls, feed block.
- 122. Cup, muzzle attachment.
- 123. Casing, outer, muzzle attachment.
- 124. Cone, front, muzzle attachment, Mark I.
- 125. Gland, muzzle attachment.
- 126. Screw, clamping, cup, muzzle attachment.
- 127. Disc, muzzle attachment.
- 128. Vent, bullet, muzzle attachment.

PART II.

MOUNTING, TRIPOD, .303-INCH MAXIM GUN,
MARK IV.*(Plates X and XI.)*

The mounting consists principally of a crosshead (*a*), elevating gear (*b*), and socket (*c*), mounted on three legs.

It is constructed to give 13 degrees elevation and 25 degrees depression at heights varying from 14½ inches† to 30 inches from the axis of the gun to the ground. By arranging the position of the rear and front legs respectively, elevation may be given up to about 43 degrees and depression to 55 degrees. An all round traverse can be obtained.

The crosshead (*a*), to which the gun is pivoted, is formed with a pivot to fit into the socket (*c*) and an arm (*d*) which carries the elevating gear (*b*).

In cases where it is found that, owing to the position of the web of the crosshead, the Vickers gun cannot be brought down so that the stop on the gun will rest on the web without bringing the fusee spring box of the gun in contact with the curved arm of the crosshead, a stop piece will be riveted to the front of the internal crossweb by an armourer or an artificer in accordance with the drawing in para. 17289, War Office L. of C.

The elevating gear, which is actuated by a handwheel (*v*), consists of an inner and outer screw (right and left-handed) and a nut working within a tumbler (*g*). The tumbler is

† See Plate XI.

(B 12486)

c 2

split and provided with a jamming bolt (*h*), by which the wear may be taken up. A chain secures the inner screw to the crosshead to prevent loss while travelling.

The socket (*c*) is bored to receive the crosshead and is provided with three lugs (*n*), to which the legs are hinged; a jamming block and screw with handle (*f*) is attached to the front to secure the crosshead in any desired angle of traverse; the block works in a recess in the upper portion of the crosshead and prevents it from rising. Both faces of the rear lug and one face of each front lug are fitted with clutch plates having radial serrations to correspond with similar serrations on the faces of the leg joints. Joint studs with disc spring and jamming handle (*s*) are fixed to the front lugs, by which the legs are securely clamped to the socket in the required position.

The legs (*j*, *k*) are of tubular steel, the lower ends being fitted with shoes (*m*) to steady the mounting on the ground, and the upper ends having a joint with radial serrations mentioned above. The rear leg is provided with a joint pin with nut and jamming handle (*t*).

On a portion of the periphery of the leg joints numbers are stamped at regular intervals so that when read in conjunction with a zero mark the relative position of the legs to their normal position may be readily seen.

A strap is fixed to the rear leg to secure the three legs during transport.

When firing, the ammunition box is placed on the ground on the right side of the gun, or, alternatively, is placed in the "carrier, ammunition, belt box." The carrier is a steel frame, and is fitted with three hangers by which it is attached in position to the crosshead on the right side.

Weight of mounting 48 lbs.

The Vickers gun can be fired from service mountings.

MOUNTINGS, TRIPOD, 303-INCH MAXIM GUN, MARK IV.

LIST OF COMPONENT PARTS, ETC.

DESIGNATION.	DETAILS.	Number.
COMPONENTS.		
Bolt, jamming elevating gear	steel	1
Bush, handwheel, elevating	M.B., with nut and steel feather	1
Chain elevating screw, Mark IV,	...	1
Tripod mounting	steel	1
Crosshead	M.B. (also pivot) with keep pin	2
Handles, jamming, front leg	steel	1
front, left	steel, tubular; with shoe and serrated joint	1
front, right	steel, tubular; with shoe and serrated joint	1
rear	steel, tubular; with shoe and forked serrated joint	1
elevating	steel, with handle	1
jamming rear leg	M.B.	1
screw, jamming pivot	steel, with steel securing cord with ring and keep pin	1
elevating gear	steel, with steel securing cord with loop	1
crosshead	...	1

MOUNTINGS, TRIPOD, .303-INCH MAXIM GUN, MARK IV—continued.

DESIGNATION.	DETAILS.	Number.
	—continued.	
Pins { joint, rear leg...	steel ...	1
{ tumbler ...	steel ...	2
Plates, inscription ...	G.M., with screws ...	1
Screws { elevating, No. 22 ...	steel in 2 parts (inner and outer) ...	1
{ clamp checking traverse ...	steel, with handle, M.B. nut and jamming block ...	1
Socket ...	M.B., with steel clutch plates (for pivot of crosshead) ...	1
Straps, securing 1-inch x 36-inches ...	leather (for housing legs) ...	1
Studs, joint, front legs ...	steel, with nut and keep pin ...	2
Tumbler, elevating gear ...	M.B., with nut ...	1
Wheel, hand elevating ...	M.B. ...	1
STORES ISSUED AS PART OF MOUNTING.		
Holder, joint pins ...	leather, with attachment straps ...	1

MOUNTINGS, TRIPOD, AUXILIARY, .303-INCH MACHINE GUN, MARKS I AND II.

This auxiliary mounting which is not intended to replace the Mark IV tripod, is for use as an alternative to it, and will in future be issued on the scale of 1 per machine gun, to cavalry and infantry units.

The mounting consists of the following parts :—

- (1) Three legs, each fitted at one end with a joint for attachment to the crosshead pivot, and at a short distance from the opposite end with a shoe which gives stability to the mounting when firing. The pivot receives a bronze crosshead to which the saddle of the rear gun band is connected by trunnion screws. The under side of the saddle is so formed that by the action of a spring plunger which passes through the centre of the pivot, it admits of the legs being folded down in one direction, but held rigidly in the opposite direction.

A hinged clip—provided with a clamping screw and wing nut—with saddle, completes the rear gun band to which is secured a leather lining for gripping the gun.

- (2) Front gun band—the front gun band which is of steel (leather lined), is formed with two free ends (leather covered) these ends clip the legs of mount when folded down. It is provided with a clamping screw and wing nut for securing it to the barrel casing of the gun in such a position that the legs

of the tripod when folded up shall protrude about 1-inch beyond the spring clip.

- (3) Two leather straps are provided for transporting the gun with the tripod.

Lubricating Holes.

2 in bracket arms for elevating.

2 in trunnion block for traversing.

Weight of tripod about ... 8-lbs.

A certain number of auxiliary tripod mountings have been issued to the Service with the front gun band differing from that on the above-mentioned mounting. These will be known as Mark I.

For replacement purposes a front gun band of a Mark II mounting could be issued for use with a Mark I mounting, interchangeability is not affected.

CASE IN .303-INCH VICKERS GUN, MARK II.

The case is used to convey the gun in the G.S. limbered wagon on the line of march; it is made of leather with a lid secured by three quick release straps, and is fitted to hold the stores detailed below:—

To contain:—

Gun	1
Gun barrel	1
Rod, cleaning	1
Weight	28 lbs. (approximately).

The case differs from the previous mark in being made longer in order to take the blank, or ball, muzzle attachments, the wood chocks are differently arranged to prevent injury to the gun and the position of the cleaning rod is arranged so that the handle is on the right-hand side.

The Mark I case when modified so that the gun with muzzle attachment can be carried, will be designated Mark I*.

CHEST, VICKERS OR LEWIS, .303-INCH GUNS, MARK II.

The chest is issued as an alternative to the leather case before described. It is made of wood. The lid is hinged, and is fastened with two hasps and turnbuckles. A rope handle is attached to each end of the chest by a cleat. The chock which is provided for the point end of the gun is made reversible in order to meet the difference in size of the barrel casing of the Vickers gun and the radiator casing of the Lewis gun respectively. A small number of chests of Mark I pattern have been made. These differ only in the depth, which is $\frac{1}{4}$ inch greater.

The chests take the contents for the Vickers gun as shown for the case.

The weight empty is about 38 lbs.

" filled " 76 "

Note.—In cases where the G.S. limbered wagon has fittings to take the gun, the case and chests will be required only for transit purposes to and from store. The chest is preferable for this latter service.

CASE, SPARE GUN BARREL AND CLEANING ROD.

.303-INCH M.G., MARK II.

The case is a leather tube 34.5 inches long by 1.6 inch diameter (internal measurements) pointed at one end, and fitted with a leather cap and strap at the other. The case is also provided with two straps with buckles for securing it to the tripod hanger of .303-inch M.G., packsaddlery.

WAGON, LIMBERED, G.S. { FORE, MARK I.
HIND, MARK II.

The wagon consists of fore and hind portions, connected by a perch, mounted on wheels, 2nd class C, No. 200 A or 206. A certain number of wagons have been issued with 2nd class C, No. 43, and some with No. 198 wheels.

The fore portion consists of a framework, fitted with side and front boards and a hinged tail board, a limber hook, No. 27, a 2nd class C axletree, No. 141, and the following draught fittings:—

Pole, draught, No. 17, Mark III.

Bar supporting draught pole, No. 3, Mark II.

Swingletrees, No. 13, Mark I.

A locker—fitted to carry spare parts, &c., as shown in the table below—is attached outside the near side board. Two clips for the carriage of a rifle in canvas case are fitted to the front board and two on the off side board.

The hind portion is generally similar to the fore, but it has no locker, or clips for rifles, is fitted with a removable perch (in place of fittings for draught), a folding seat at the back and a brake which is applied from the rear and acts on the front of the wheels.

Fittings (with suitable lashings) are provided on the perch and front board to carry a spare wheel, and under the wagon to enable a spare pole (No. 18) to be carried.

Both portions are provided with a canvas cover.

The wagon is fitted to carry the following spare and wagon equipment stores.

Stores.	Fore.	Hind.	Where carried.
Grease, lubricating (in grease box) lb.	3	3	} Off side.
Spanner, No. 181†	2	1	
Blocks, brake, field and transport (spare)	1	...	
Board, inventory, wood	1	...	
Collar, adjusting, 2nd class C, capped wheels...	1	...	} Locker, near side.
Screwdriver, G.S., 6-inch	1	...	
Hammer, claw, 16 or 14-oz.	1	...	
Pincers, carpenters' ... pair	1	...	
Pins, lynch, 2nd class C, capped wheels (spare)	1	...	} Near side.
Spanner, adjustable 11-inch	1	...	
Washer, drag, 2nd class C, capped wheels (spare)	1	...	
Brush, water carriage...	1	...	
Buckets, water, G.S. leather	2	...	} Under.
Cordage, spun yarn, hemp, tarred, 3 thread lb.	5	...	
Ropes, drag, light, G.S. ... pair	1	...	} Off side.
Valise, horse shoes ... (1)	
			As convenient.

† Component of wagon.—Wagons provided with No. 43 wheels carry a No. 93 spanner.

The following are the dimensions, weights, &c.:—

Fore and hind portions limbered up.—	ft.	ins.
Length over all—with pole	22	10
without pole	13	9
Height	4	8
Width	6	4
Track	5	2
Distance between axletrees	7	10½
Diameter of turning circle	25	8½
Angle of lock	85.75 degrees.	

Floor space, each portion	...	4ft. by 3ft. 4ins.
Fore portion—		ft. ins.
Length—with pole	...	13 11
without pole	...	4 10
Hind portion—		
Length—with perch	...	9 1
without perch	...	5 4
Wheel, 2nd class C, No. 198 A., Mark I.—		
Diameter	...	4 8
Width of tire	...	0 2½
Weights without cover and spare parts—	cwts. qrs. lbs.	
Fore portion	...	5 2 0
Hind portion	...	5 0 3
Tonnage for shipment—		Tons.
Fore and hind portions without wheels, pole and perch	...	4.201
Wheels, No. 198 A. (4)	...	1.458
Pole032
Perch017
Boat transport—		
Dimensions—13ft. 5in. by 6ft. 4in. by 4ft. 8in.		
Tonnage	...	9.913

COVERS.

The covers, both "Fore" and "Hind," are of waterproof canvas, 77½ inches by 69½ inches; they are secured to the wagon by 2 lines on each side and straps at the corners.

Weight, each ... 9lb. 11ozs.

WHEEL, 2ND CLASS "C," No. 198A.

The wheel is 4ft. 8ins. in diameter, has a manganese bronze nave with a removable pipe box and a 2½-inch steel tire. The nave consists of two flanges which are connected by 12 bolts; the pipe box passes through the flanges and is secured by a small bolt; a dust cap is screwed to the outer flange. The outer end of each spoke fits into a steel socket secured to the felloe.

Weight ... 1cwt. 14lb.

The Nos. 198 and 206 wheels are generally similar to the above (the No. 206 wheel has a steel nave of a different form). The No. 200 wheel has plain steel flanges and no dust cap. The No. 43 wheel differs principally from the above in being of double spoke construction and has a 3-inch tyre.

The No. 200 A wheel, which is now issued with the wagon, differs from the above (198 A) as follows:—The wheel is stronger in construction, the flanges of the nave are of steel, and there are no sockets spoke.

Weight ... 1 cwt. 2 qrs. 3 lbs.

Any of these wheels may be used with the wagon, limbered, G.S.

PACKSADDLERY.

INTRODUCTORY.

It is desirable that animals for Machine Gun Packsaddlery purposes should be carefully selected. Those with abnormally broad hips are unsuitable, and should not be chosen.

There are two methods of carriage on packsaddles for this machine gun:—

1. When used with Cavalry.
2. When used with Infantry.

In both methods the sets of packsaddlery comprise certain articles of General Service Packsaddlery, supplemented by other articles of Machine Gun Packsaddlery, either common to both methods of carriage, or special to either.

The composition of cavalry or infantry sets are as shown in the tables which follow, as also a brief description of each article.

DETAIL OF SETS.

CAVALRY.

Articles.	Number for each		
	Gun set.	Tripod set.	Ammunition set.
<i>Section No. 2A.</i>			
Ropes, head, hemp, with ring ...	1	1	1
<i>Section No. 5A.</i>			
HARNESS, P.D., G.S.			
Cases, horseshoe, modified (a) ...	1	1	1
<i>Section No. 5B.</i>			
PACKSADDLERY, G.S.			
Bits, bridoon ...	1	1	1
Breechings, Mark V ...	1	1	1
Collars, breast, Mark V ...	1	1	1
Collars, head, Mark IV ...	1	1	1
Cruppers, Mark V ...	1	1	1

(a) Or cases, horseshoe, with sword frog.

Detail of Sets—continued.

Cavalry—continued.

Articles.	Number for each		
	Gun set.	Tripod set.	Ammunition set.
Packsaddlery, G.S.—continued.			
Girths, Mark V ... pairs	1	1	1
Girths, leather... ...	—	1	1
Girths, leather, straps extending ...	—	1	—
Pannels, Mark V ... pairs	1	1	1
Straps, girth, Mark II ...	4	4	4
PACKSADDLERY, MACHINE GUN,			
303-INCH.			
Bottles, water, leather ...	—	1	—
Caps, shovel, Mark II* ...	—	—	2
Girths, web, rack and hanger, Mark II ...	1	—	—
Hangers, Vickers' gun, cavalry ...	1	—	—
Hangers, tripod, sling ...	—	1	—
Racks, ammunition - in - belt, Mark III ...	1	1	2
Sticks, leading... ...	1	—	—
Straps, detachable, shovel ...	—	—	2
Straps, suspending, shoe-case ...	1	1	1
Straps, detachable, waterbottle ...	—	2	—
Trees, adjustable, Vickers' gun, cavalry ...	1	1	1
<i>Section No. 6A.</i>			
SADDLERY, UNIVERSAL.			
Reins, bit ...	1	1	1

Detail of Sets—*continued.*

INFANTRY.

Articles.	Number for each		
	Gun set.	Tripod set.	Ammunition set.
<i>Section No. 5A.</i>			
HARNESS, P.D., G.S.			
Cases, horseshoe	1	1	1
<i>Section No. 5B.</i>			
PACKSADDLERY, G.S.			
Bits, bridoon	1	1	1
Breechings, Mark V	1	1	1
Chains, collar, G.S., Mark III	1	1	1
Collars, breast, Mark V	1	1	1
Collars, head, Mark IV	1	1	1
Cruppers, Mark V	1	1	1
Frames, wood, Mark II	—	1	—
Girths, leather	—	—	1
Girths, Mark V pairs	1	1	1
Pannels, Mark V pairs	1	1	1
Reins, bridoon	1	1	1
Straps, girth, Mark II	4	4	4
Trees, adjustable	1	1	1

Detail of Sets—*continued.*Infantry—*continued.*

Articles.	Number for each		
	Gun set.	Tripod set.	Ammunition set.
PACKSADDLERY, MACHINE GUN, 303-INCH.			
Bands, belly	1	1	—
Bands, belly, straps, long	1	1	—
Bands, belly, straps, short	1	1	—
Bands, belly, straps, supporting	2	2	—
Bottles, water, leather	—	1	—
Caps, shovel, Mark II*	1	1	—
Hangers, gun, sling	1	—	—
Hangers, tripod, sling	—	1	—
Racks, boxes, ammunition-in-belt, Infantry Pattern	1	1	2
Straps, detachable, pick and helve... ..	—	3	—
Straps, detachable, shovel	1	1	—
Straps, detachable, waterbottle	—	2	—

DESCRIPTION.

Case, horseshoe.

This is the pattern formerly used for harness purposes. It mainly differs from the saddlery pattern in that no tube for the sword exists, and that the shoe case strap is permanently affixed, and is not detachable as in the case of the saddlery shoe case.

For cavalry the shoe-case is modified by removing the link from the back, and releasing the strap with the chape (this latter being reduced in width to the size of the strap) which is then used in a similar manner to the saddlery shoe-case strap.

Bit, bridoon.

Is an ordinary bridoon bit, but tinned to prevent rust. The mouthpiece is fitted at each end with a ring to receive the iron stops on the reins when the ordinary packsaddlery reins are used, or for universal saddlery reins to buckle to. The "T" pieces are secured to the rings by links and solid loops, and are for fitting under the leather loops on the packsaddlery head collar.

Breeching, Mark V.

Is used for preventing the packsaddle from slipping forward. The straps buckle to the body part of the breeching after being looped to the links on the pannels. It is supported by its hip strap, which passes through a loop on the crupper before buckling.

Collar, breast, Mark V.

Is used to prevent the load from slipping back. The straps, after passing through the links on the pannels, buckle to the body part of the breast collar. It is supported by its own neckstrap.

Collar, head, Mark IV.

Similar in design to the universal saddlery head collar, but the furniture is tinned iron, and it is fitted on the lower part of the headpiece with leather loops for the "T" of the bridoon bit to fit into, and with a ring on the noseband.

Crupper, Mark V.

Is made with forked straps, which, after being looped to the rear arch of the packsaddle, buckle to the body of the crupper. The use of the crupper is to assist in preventing the saddle slipping forward.

Girths, Mark V.

Girths are made of worsted web. They are fitted with chapes and buckles at either end to connect up with the girth straps. These girths have no connecting piece as in earlier patterns, but may be crossed when girthing up if desired.

Girth, leather.

Is a leather steadying girth, with a billet and buckle at each end. It can be lengthened by the "strap, extending."

Pannels, Mark V.

Each pannel consists of a leather back, with tan dowlas lining, the stuffing being horsehair. They are attached to the side-bars by leather pockets, the front pocket having a strap and buckle for securing purposes. An opening in the outer side admits of adjustment of the stuffing, the opening being covered by a flap.

Pannels are fitted with links to take the straps of the Mark V breast collar or breeching—the hooks attached to such links are intended for the chains of earlier marks.

The stuffing can be adjusted as required and kept in position by additional spot stitches if necessary.

Straps, girth, Mark II.

Are for buckling the packsaddle girths to. They are of leather, and made with a loop at one end.

(B 12486)

gone

[*Bottle, water, leather.*

Is made of leather rendered impervious to either air or water. It is fitted at one end with a metal screw stopper attached by a brass chain, which prevents the water coming out after filling. It holds about 5 quarts of water, and, when empty, weighs about $6\frac{1}{2}$ lbs.

Band, belly.

This belly band is a broad leather girth $52\frac{1}{2}$ inches in length by 3 inches in width, fitted at either end with a buckle and fixed leather loop to connect with the "*Straps, long*" and "*Straps, short*" which follow.

Straps, long (or Straps, short).

Are straps fitted at one end with a fixed leather loop. The long strap is 48 inches by $1\frac{1}{2}$ inch, and the short 40 inches by $1\frac{1}{2}$ inch.

Straps, supporting.

These are narrow straps, 13 inches by $\frac{7}{8}$ inch, which prevent the belly band dropping to the ground when the above-mentioned long and short straps are unbuckled to release the load.

Cap, shovel, Mark II.*

Is a leather cap made to fit on the "pan" of the G.S. shovel. It has a detachable strap (apart from the shovel straps which do not form part of the cap), which is used for securing it.

Girth, web, rack and hanger.

This is a web steadying girth, made of worsted web, and fitted at each end with a tinned iron dee carrying two chapes and buckles.

Hanger, Vickers' Gun, Cavalry.

The hanger consists of a wood bearing bar in two parts, joined together by metal plates, to which front and rear metal brackets are affixed for the gun to rest upon, as also a metal centre clip with laminated spring which retains the gun in position.

Attachment to the hooks of the spiral springs on the machine gun packsaddle, is by means of the chain of four links, fitted to the front and rear gun brackets.

Two girth straps are provided for attaching to the "girth, web, rack and hanger," and an emergency securing strap is fitted at the back of, and is secured by the bolts of the centre clip, in case of failure of the latter metal fitting. A leather fitting for the condenser to be attached to is provided at the lower edge of the bearing bar.

Hanger, gun, sling.

Is designed so that the machine gun may be slung in it to the hooks of the packsaddle.

It consists of a wood bearing bar, added to at the rear end by a wood block which keeps the muzzle away from the animal's hip. Leather slings, felt lined, are attached to the bearing bar, the front sling being wider and longer than that at the rear, in order that the breech of the gun may rest on it. Both slings are fitted at either end with metal dees for hooking to the packsaddle, and the upper dees are provided with strap and buckle for securing both dees after the gun is slung.

Hanger, tripod, sling.

Is constructed on the same principle as the gun hanger, but is intended for the carriage of the tripod. It differs from the gun hanger in the following respects:—

- (1) The bearing bar is added to at *either* end by wood blocks which extend below it, and keep the tripod sufficiently away from the side of the animal.
- (2) Both slings are of similar width.
- (3) A leather chape carrying a metal square is screwed to the centre of the bearing bar on the upper side for the "girth, leather" to buckle to when used with "Vickers' Cavalry" sets.

Racks, ammunition-in-belt, Mark III.

This is a canvas rack strengthened with leather, the body of which is attached directly to a wood bottom. Wire rope slings are provided for suspension purposes, which are spliced round metal thimbles attached to eyebolts, which pass down through the wood bottom and metal plate and are riveted over the nuts.

A wood bearing bar is riveted across the centre of the back to prevent friction on the canvas.

The rack is divided into three compartments, each of which holds one box of ammunition in belt—*i.e.*, 750 rounds in all.

Racks, boxes, ammunition-in-belt, Infantry Pattern.

Consists of a canvas body with wood bottom and rope slings. The body is bound with leather at the lower edge, as also at the four upper corners, and is attached directly to the wood bottom at its outside edges. No partitions are

arranged, but a shaped metal plate is inserted at each corner in order to strengthen them and define the shape at the top.

The rack is suspended by a rope sling at either end, which passes under the bottom and outside the ends. A metal square is attached to the wood bottom for the leather girth to attach to, and holes are made for drainage purposes.

Sticks, leading.

Is a stick fitted at one end with a billet and buckle, and at the other end with a leather loop. A loop in the centre is also provided for the rein to pass through.

The stick is intended for use with Cavalry, to prevent the animal carrying the gun from pressing in on the leg of the rider.

Straps, detachable—

Pick and helve; shovel; suspending, shoe-case; water-bottle.

Are for use with the articles shown in the "Detail of Sets" applicable to the arm (Cavalry or Infantry) concerned.

The "*Straps, pick and helve*," as also the waterbottle straps, are for suspending the articles in question as part of the load.

The "*Strap, shovel*" retains the handle of the shovel against the rear arch of the packsaddle.

The "*Strap, suspending, shoe-case*" is an additional strap for the suspension of the "Case, horseshoe, modified," between the arches of the packsaddle.

Trees, adjustable.

Consists of two steel arches (to which rigid hanging hooks are riveted) connected by side-bars made from pedouk or sabicu wood.

The arches are jointed to the side-bars to admit of them turning automatically, thus allowing of adjustment to the backs of large or small animals, or to meet loss of condition, and to obviate the necessity of several sizes.

Metal squares are provided on each arch into which the "Frame, wood, Mark II" can fit, when this article is issued.

The side-bars are slotted for the girth straps to loop on.

Trees, adjustable, Vickers' Gun, Cavalry.

The principle of the ordinary adjustable packsaddle tree is retained, but alterations and additions as under are made :—

- (1) The rigid hooks by which the load is suspended to the packsaddle are removed, and replaced by four encased spiral suspension springs with hooks, depending from the projecting part of the metal extension pieces which are bolted and riveted on each web of the angle of the arches.
- (2) In order to keep the arches of the tree rigid, a connecting bar of $\frac{1}{2}$ -inch steel rod is fitted between them. This bar passes through both the metal extension pieces and the web of the angle of the arches, and is then riveted.

Reins, bridoon.

The rein is made from Preller leather. It is fitted at each end with a tinned iron stop to connect with the rings of the bit.

Reins, bit.

These are of the Universal Saddlery pattern. They are only issued with machine gun packsaddlery for Cavalry.

TO ASSEMBLE THE PARTS.

GENERAL INSTRUCTIONS.

PACKSADDLE.

The *tree* is the frame of the packsaddle. The *pannels* are attached to the tree by means of front and rear pockets, into which the side-bars are inserted. The front pockets are fitted with buckles and straps for securing purposes.

The *girth straps* are looped to the side-bars over the upper edge, through the slots cut for the purpose.

The *girths* are buckled to the girth straps on the off-side in readiness for use.

The *crupper* straps are looped to the rear arch of the packsaddle and then buckled to the body of the crupper.

Bit, bridoon.

The *bridoon bit* at one end may be passed through the leather loop on the off-side of the head collar in readiness for "bitting" the animal.

Breechings, collars, breast.

The straps of the breeching are first looped to the links on the pannels and then buckled to the body part of the breeching. The straps of the breast collar, after passing through the loops of the pannels, are buckled to the body part of the breast collar.

INSTRUCTIONS SPECIAL TO CAVALRY SETS.

Girths, web, rack and hanger.

Buckle one end to the two girth straps on the gun hanger.

Stick, leading.

Is buckled to the square of the head collar. The bit rein of the led (gun) horse (doubled) passes through the loop on the centre of the stick, and then through the loop at the end.

Straps, detachable, shovel.

To be looped on the near and off sides of the rear arch of the ammunition set.

Straps, detachable, waterbottle.

To be looped to the bearing bar of the tripod hanger by passing them down behind, and then through their own fixed loops.

INSTRUCTIONS SPECIAL TO INFANTRY SETS.

Bands, belly, straps, long.

To be looped to the bearing bar of the gun hanger on the gun set, and the tripod hanger on the tripod set, by passing up behind the bearing bars of the respective hangers, and then through their own fixed loops, the loops remaining at the upper edge of the bearing bars.

Bands, belly, straps, short.

To be looped to the near-side bar of the adjustable tree on the gun set, and the off-side bar of the adjustable tree on the tripod set, in a similar manner to that for the long strap, but the loops are to remain at the lower edge of the side bars.

Bands, belly, straps, supporting.

To be looped up through the slot in the "lay" of the pannel on either side of gun or tripod sets.

The *belly band* is afterwards buckled to these straps, and is supported by them whenever it is released from its long and short straps ; it would otherwise drop to the ground.

Straps, detachable, pick and helve.

Looped to the bearing bar of the tripod hanger by passing down behind the bearing bar, and then through their own fixed loops.

Straps, detachable, shovel.

To be looped to the rear arch (near side) of the gun set, and the rear arch (off side) of the tripod set.

Straps, detachable, waterbottle.


To be looped to the bearing bar of the tripod hanger, by passing down behind and then through their own fixed loops.

Saddling.

Before saddling it is essential that the animal's back should be free from dirt, and any dried sweat or matted hair brushed out. The pannels should be thoroughly dried, beaten, and freed from any dirt or grit before being placed on the animal's back. Neglect of these precautions is the most fertile source of sore backs. Constant attention must be paid to the stuffing of the pannels, and care taken to prevent them from becoming hard and lumpy.


When possible, animals should not be kept standing longer than is necessary when saddled and loaded.

If a saddle has shifted, do not try to push it into a better position ; off-load, off-saddle, and resaddle properly.

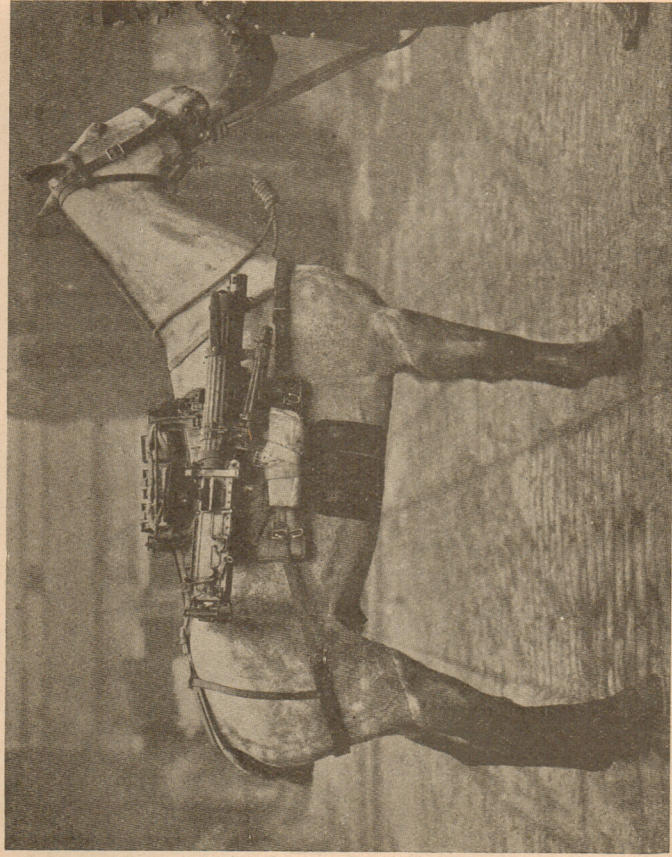


CAVALRY.—GUN HORSE, OFF SIDE.

[Face p. 92.]

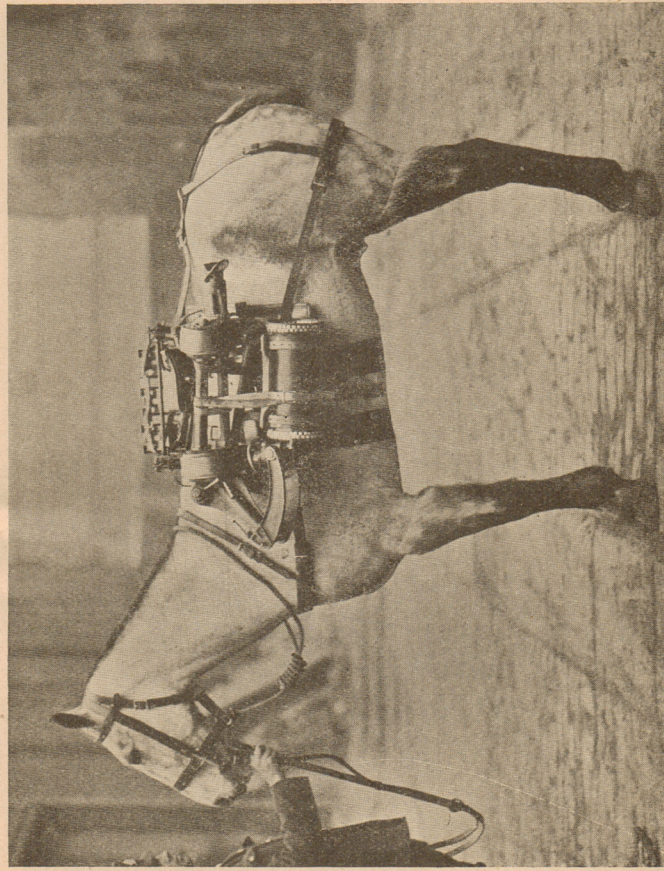


CAVALRY.—TRIPOD HORSE, NEAR SIDE.

[Face p. 93.]

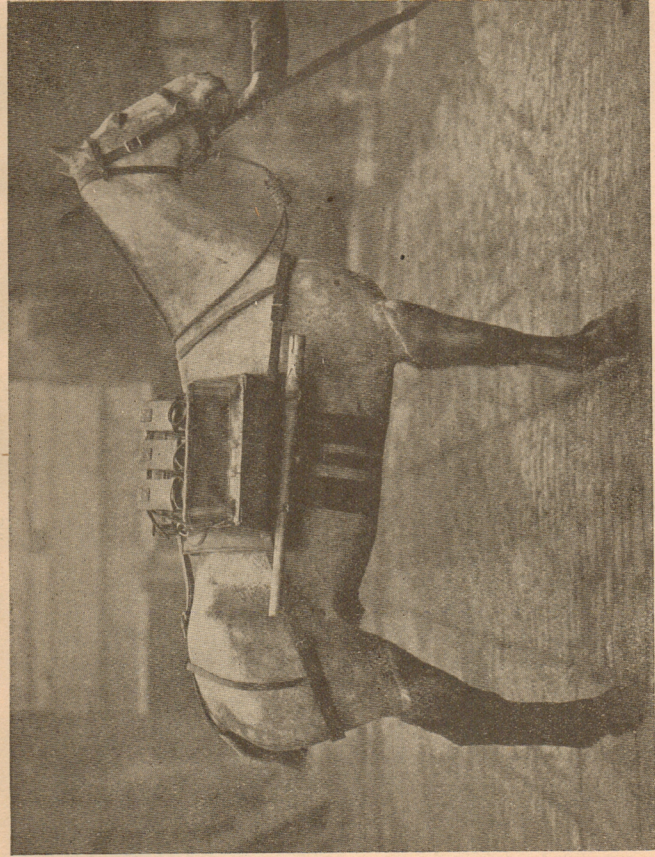

CAVALRY.—TRIPOD HORSE, OFF SIDE.

[Face p. 93.]

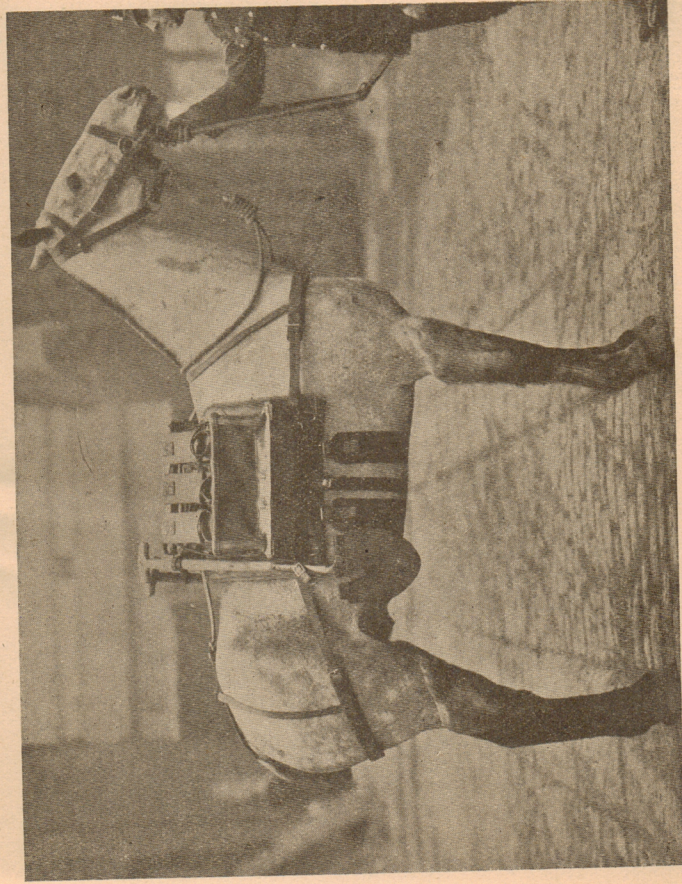

CAVALRY.—AMMUNITION HORSE, EITHER SIDE.

[Face p. 93.]

Tripod Horse.

<i>Near side.</i>		lbs.	<i>Off side.</i>	lbs.
Tripod, Mark IV ...	47	3 Belt boxes ...	63	
Hanger, tripod, sling ...	8	Rack, ammunition in belt, Mark III ...	7	
Water bottle ...	21	Pick and helve ...	8	
	—		—	
	76		78	
	—		—	

Top load.

Nosebag (with feed) ...	9	lbs.
Shoecase (filled) ...	3½	
	—	
	12½	
	—	

Ammunition Horse.

<i>Near side.</i>		lbs.	<i>Off side.</i>	lbs.
3 belt boxes ...	63	3 belt boxes... ..	63	
Rack, boxes, ammunition, in belt, Mark III ...	7	Rack, boxes, ammunition, in belt, Mark III ...	7	
Shovel... ..	5	Shovel	5	
	—		—	
	75		75	
	—		—	

Top load.

Nosebag (with feed) ...	9	lbs.
Shoecase (filled)... ..	3½	
	—	
	12½	
	—	

Notes on the above Load Tables.

The *gun* with the light tripod affixed is placed in the gun hanger with the breech to the rear. The short chains on the gun hanger allow of the hanger being kept at the height requisite for the conformation of the gun animal. In the event of the centre clip being damaged, the emergency strap can be used.

The *condenser* is attached to the leather fitting on the lower edge of the hanger by its own strap.

The *shoecase* is suspended between the front and rear arches of the packsaddle. The strap belonging to the shoecase is buckled to the front arch, and the suspending shoecase strap, after being passed through the fold of the shoecase, is buckled to the rear arch.


The *nosebag* with the gun horse is suspended from the rear arch of the packsaddle on the side shown in the table. On the other horses it is suspended between the arches by its own strap.

The "*tripod, Mark IV*" is placed in its hanger with the head down. The tripod hanger is previously suspended from the hooks of the packsaddle by the two links of the slings above the bearing bar, and the slings with the load are then hooked up and secured by the small cross straps.

The *water-bottle* is suspended by the detachable water-bottle straps which have been previously affixed. The straps go round the water-bottle under the handle, or, if room permits, through the links at the ends of the handle.


The *ammunition racks* are suspended by their rings to the hooks of the packsaddle on the side shown in the load table.

The *pick and helve* is kept in position by the three fixed straps under the ammunition rack on the tripod horse. The centre strap passes through and round the aperture in the pick head before buckling.

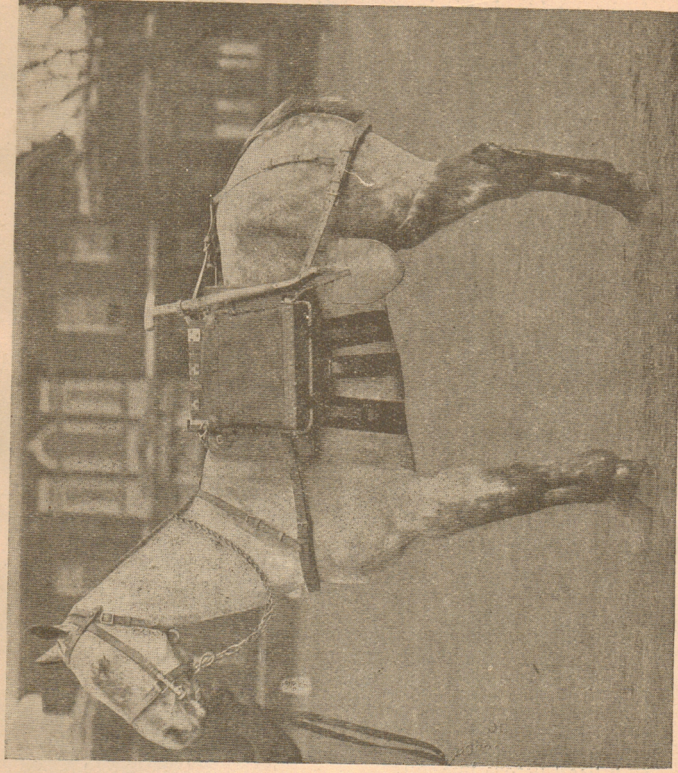

INFANTRY.—GUN HORSE, NEAR SIDE.

[Face p. 95.]

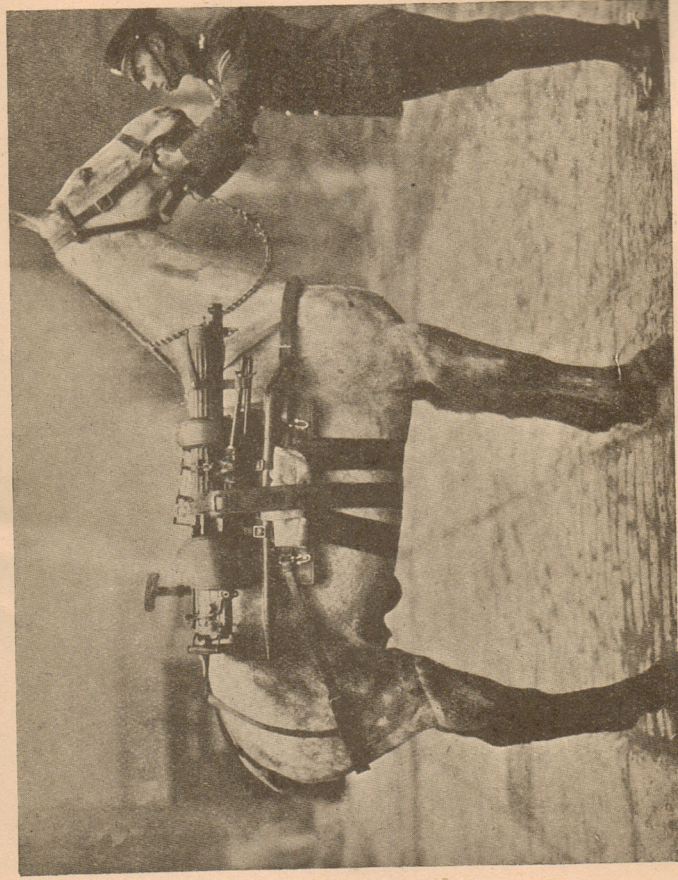

INFANTRY.—GUN HORSE, OFF-SIDE.

[Face p. 95.]

The *shovel* is secured by the strap of the shovel cap which buckles to the breeching strap where looped to the pannel, and by the detachable shovel straps, which have previously been affixed to the rear arch.

The loads are secured as follows:—

Gun load.—By the “girth, rack and hanger” which has previously been buckled to the two girth straps on the gun hanger. The other end is now buckled to the two outer straps under the ammunition rack, the “flesh” side of the straps out.

Tripod load.—By the “girth, leather,” and its extending strap. On the off side it buckles to the “dee” on the back of the ammunition rack above the centre strap, and on the near side round the tripod and through the aperture at the top of the rear leg, the extending strap providing the necessary length.

Ammunition load.—By the “girth, leather” which buckles to the “dees” on the back of the ammunition racks.

INFANTRY.

Gun Horse.

<i>Near side.</i>	lbs.	<i>Off side</i>	lbs.
1 rack, boxes, ammunition in belt, Infantry pattern ...	6	Vickers' M.G. (with water chamber filled) ...	38½
containing—		Auxiliary light tripod ...	8
		in—	
3 belt boxes (filled, 750 rounds ammunition) ...	63	Hanger, gun, sling ...	7
		Condenser ...	21¼
Shovel (in cap) ...	5	Spare barrel and cleaning rod ...	7
		Case, horseshoe (filled) ...	3½
		Nosebag (with feed) ...	9
	74		75½

Tripod Horse.

<i>Near side.</i>	lbs.	<i>Off side.</i>	lbs.
Tripod, Mark IV. ...	47	1 rack, boxes, ammunition in belt, Infantry pattern containing—	6
in—		3 belt boxes (filled, 750 rounds ammunition) ...	63
Hanger, tripod, sling ...	8	Shovel (in cap) ...	5
Bottle, water (filled) ...	21	Nosebag (filled) ...	9
Pick and helve ...	8	Case, horseshoe (filled) ...	3½
	84		86½

Top load.


	lbs.
Frame, wood, Mark II, with box, spare parts and implements. Weight about ...	5

Ammunition Horse.

<i>Near side.</i>	lbs.	<i>Off side.</i>	lbs.
1 rack, boxes, ammunition in belt, Infantry pattern ...	6	1 rack, boxes, ammunition in belt, Infantry pattern containing—	6
containing—		3 belt boxes (filled, 750 rounds ammunition) ...	63
3 belt boxes (filled, 750 rounds ammunition) ...	63		69
	69		—


Top load.

	lbs.
Nosebag, with feed ...	9
Case, horseshoe (filled) ...	3½
	12½

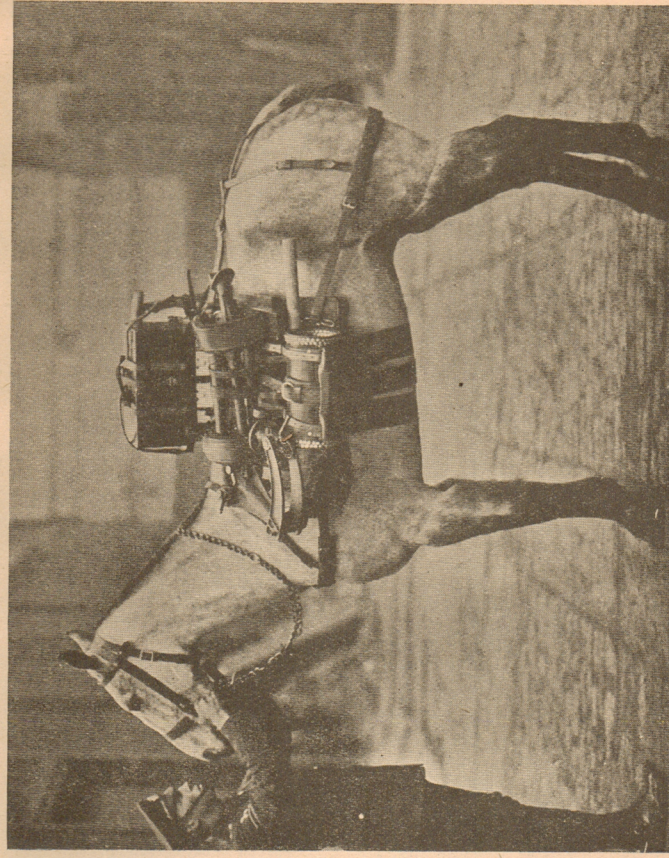

INFANTRY.—TRIPOD HORSE, NEAR SIDE.

[Face p. 96.]

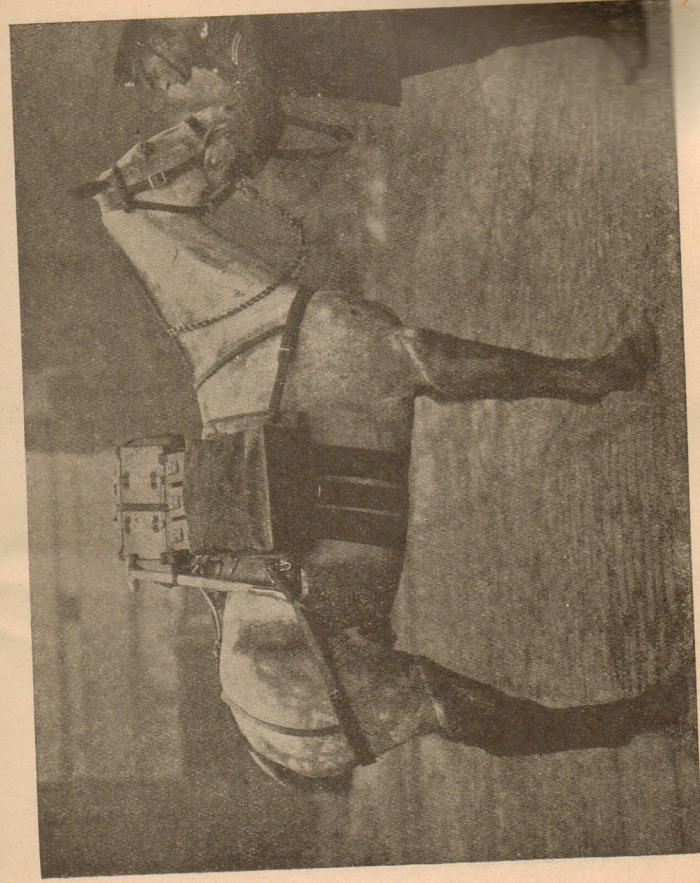

INFANTRY.—TRIPOD HORSE, OFF SIDE.

[Face p. 96.]

Notes on above Load Table.

The *gun* with the light tripod affixed, is placed in the gun hanger, (which has previously been suspended to the hooks on the off side of the packsaddle with the wide sling to the rear), and the slings with the load are then hooked up and secured by the small cross straps.

The *condenser* is carried suspended from the rear arch of the packsaddle (off side).

The *spare barrel and cleaning rod* is attached to the under edge of the gun hanger by the two straps of its leather case.

The *shoecases* of the gun and tripod sets are suspended from the rear arch of the packsaddle (off side). The shoe-case for the ammunition set is suspended centrally between the front and rear arches of the packsaddle, so that the link on the back of the shoe-case is facing the rear. The strap passes through the link on the crown of the rear arch before buckling.

The *nosebags* of the gun and tripod sets are suspended from the rear arch of the packsaddle (off side). The nose-bag for the ammunition set is suspended centrally between the front and rear arches of the packsaddle by the following method :—

The mouth is first secured in the ordinary manner, but without fastening away the spare part of the strap. The nosebag is then suspended, mouth to the front, between the arches of the packsaddle, the spare part of the strap passing through the link on the crown of the front arch, and then back along the top length of the nosebag to the link of the horse shoe-case, where it is pulled taut and secured. This method will keep the nosebag fast and steady, as also the shoe-case away from the animal's hind quarters.

The *ammunition racks* are suspended by their rings to the hooks of the packsaddle on the side shown in the load table.

The *shovel* is secured by the strap of the shovel cap which buckles to the breeching strap where looped to the pannel, and by the detachable shovel straps which have previously been affixed to the rear arch.

The "*tripod, Mark IV,*" is carried in a similar manner to that detailed for the Cavalry load.

The *waterbottle* is suspended by the detachable waterbottle straps (which have been previously affixed), in a similar manner to that for the Cavalry load.

The *pick and helve* are secured by detachable pick and helve straps previously affixed, the helve being arranged as much as possible in front of the pick. The centre of the three straps passes through and round the aperture in the pick head before buckling.

The *box, spare parts and implements* is carried on the "Frame, wood, Mark II," which is fitted on to the top of the packsaddle tree.


The loads are secured as follows:—

Gun load.—By the belly band and its two straps. The straps in question have already been affixed. The long strap passes over the gun between the barrel casing and feed block, and the short strap through the metal link on the underside of the ammunition rack; in both cases before buckling to the belly band.

Tripod load.—Also kept in position by the belly band and its two straps, which have already been affixed. The long strap passes round the leg and through the aperture at the top of the rear leg of the tripod, and the short strap through the metal link on the underside of the ammunition rack; in both cases before buckling to the belly band.

Ammunition load.—By the "girth, leather," which buckles at each end to the metal links on the underside of the ammunition racks.

Plate I.

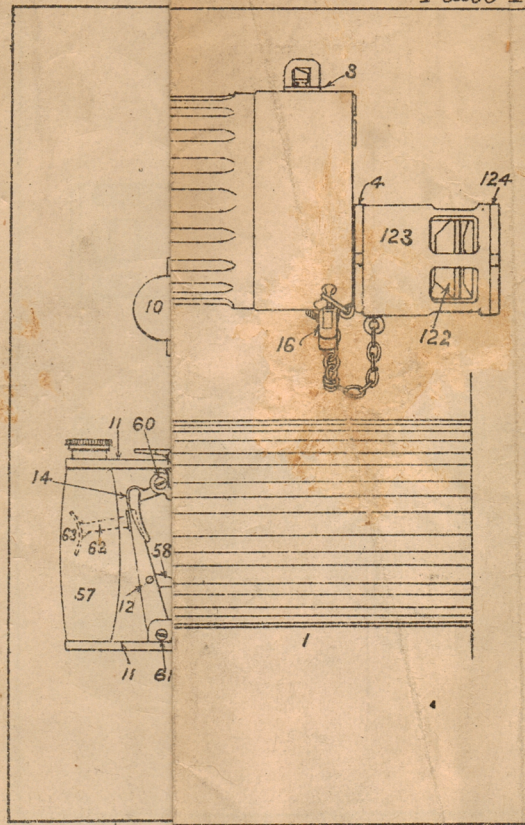



5727.11522 947. 20


Malby & Sons, Lith.

VICKERS GUN.

Plate I.

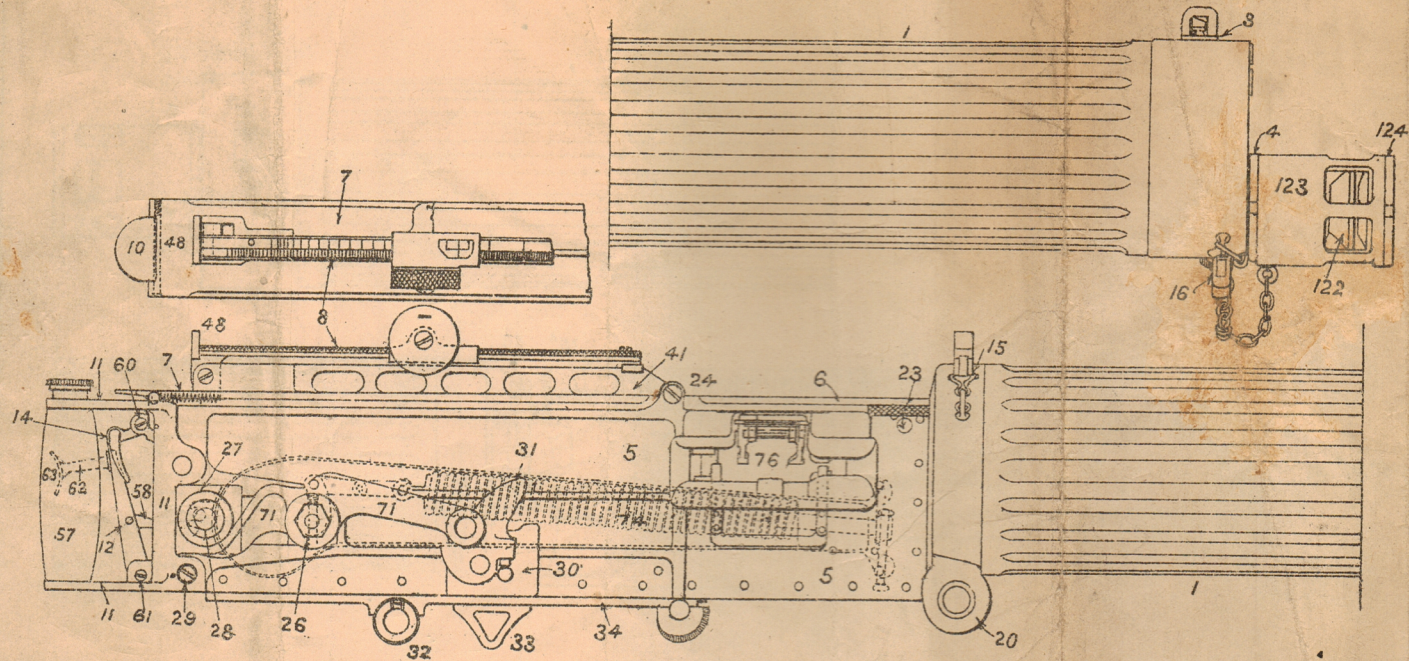


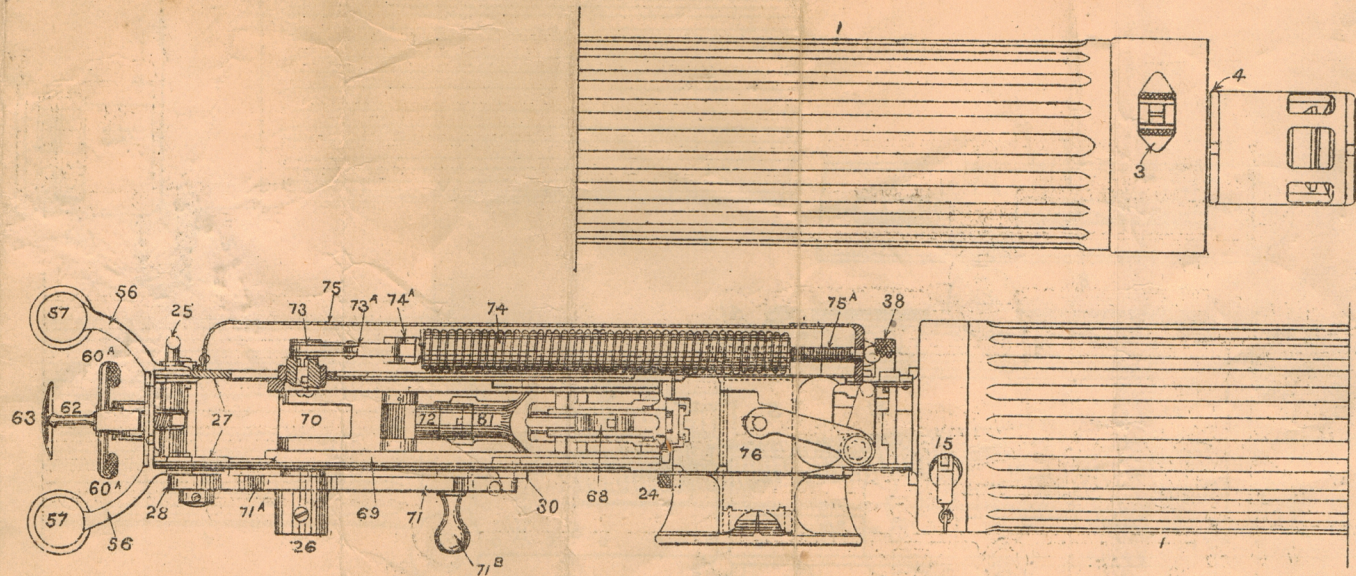

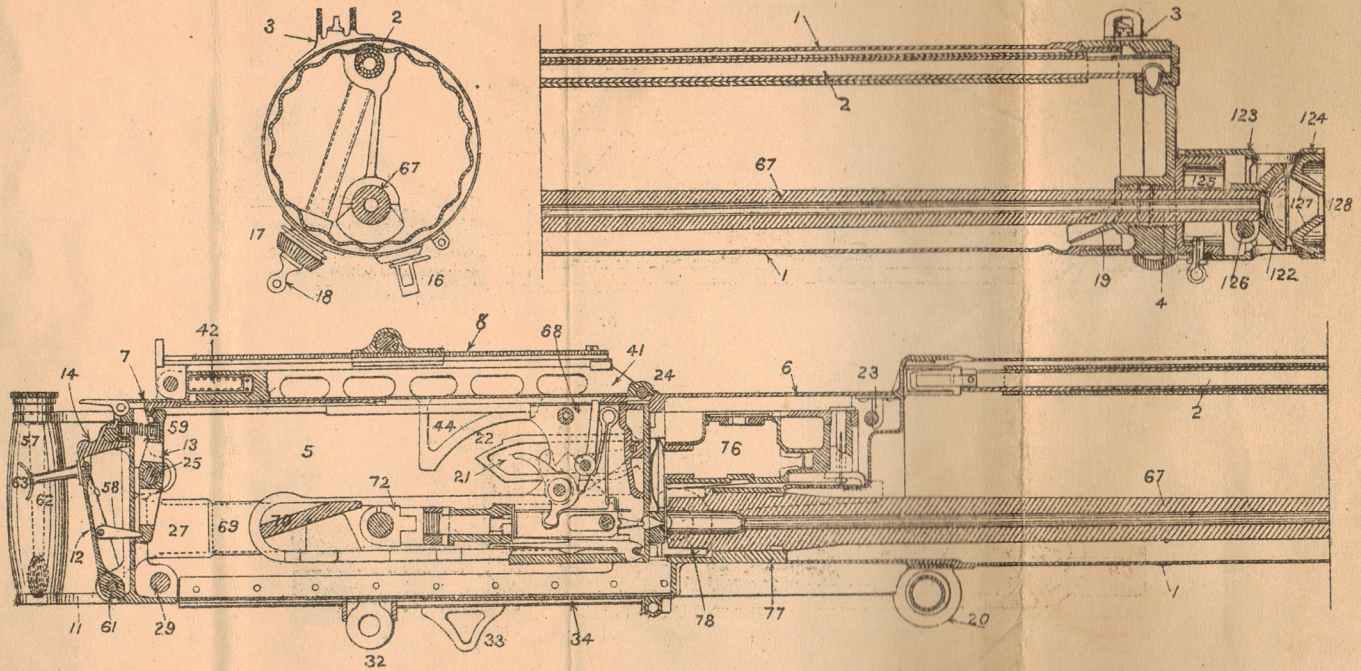


VICKERS GUN.


RECOILING PORTION OF GUN.

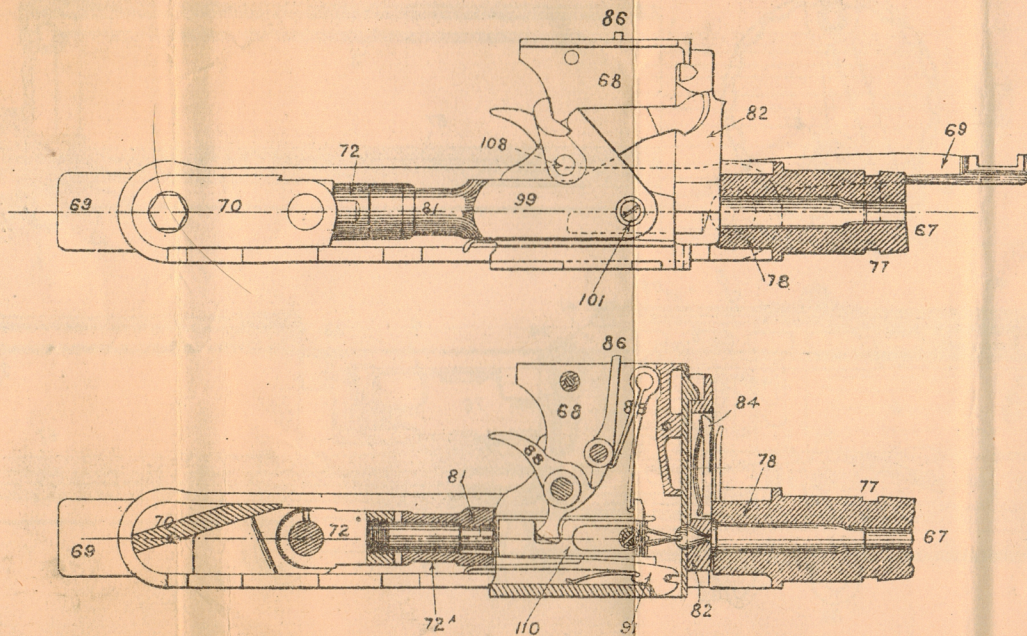


WORKING POSITIONS OF LOCK.

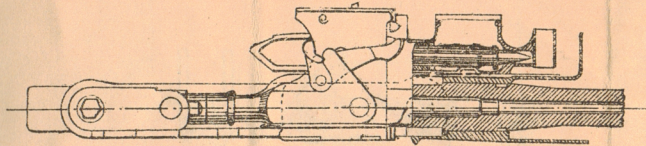


Lock fully home and just fired. Extractor engaging with empty case in chamber and cartridge in feed block.

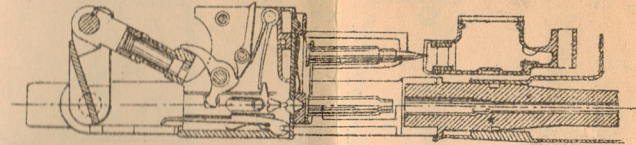

Lock and barrel recoiling. Extractor withdrawing empty case from chamber and a cartridge from the feed block. firing pin cocked and safety sear engaging.

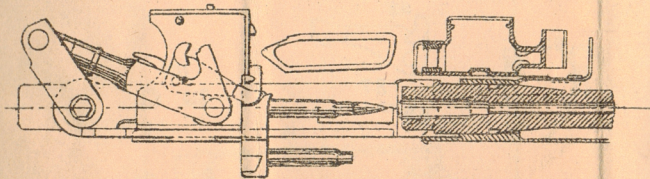


Lock in nearly fully recoiled position. Barrel returning. Extractor down, brings cartridge in line with chamber and empty case either falls off or is pushed off when extractor rises.

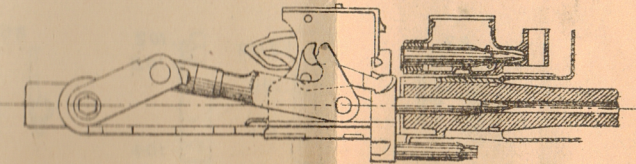


Lock returning, barrel home, extractor being raised by levers, leaving empty case to be ejected, cartridge in chamber, and about to engage with another in the feed block



VICKERS GUN.

PARTS OF THE LOCK.

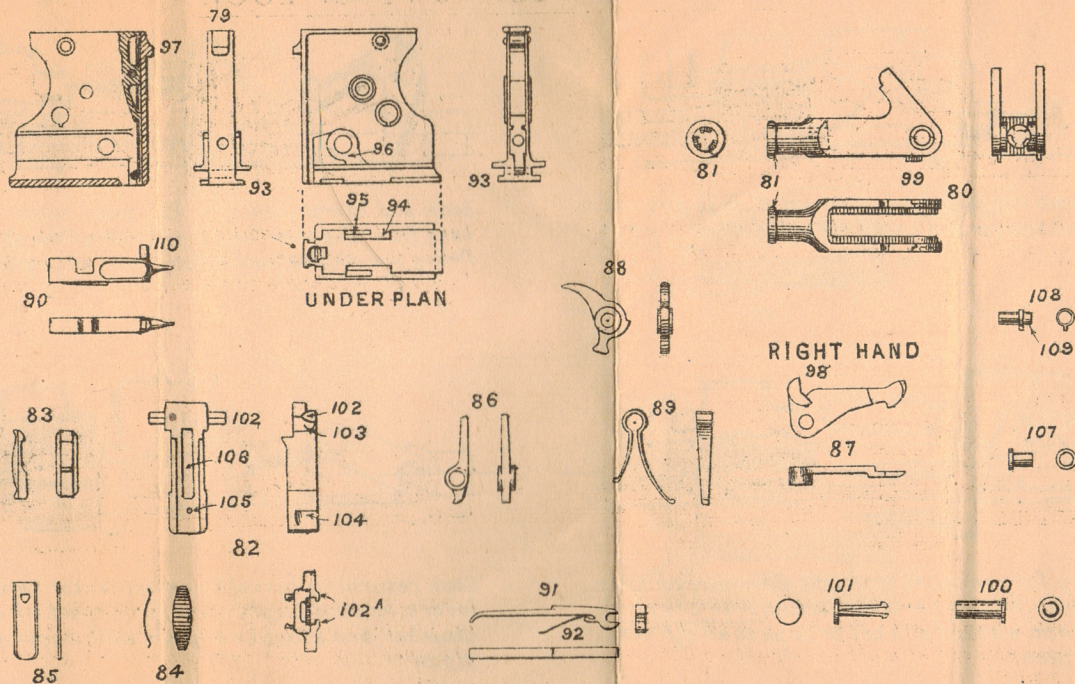


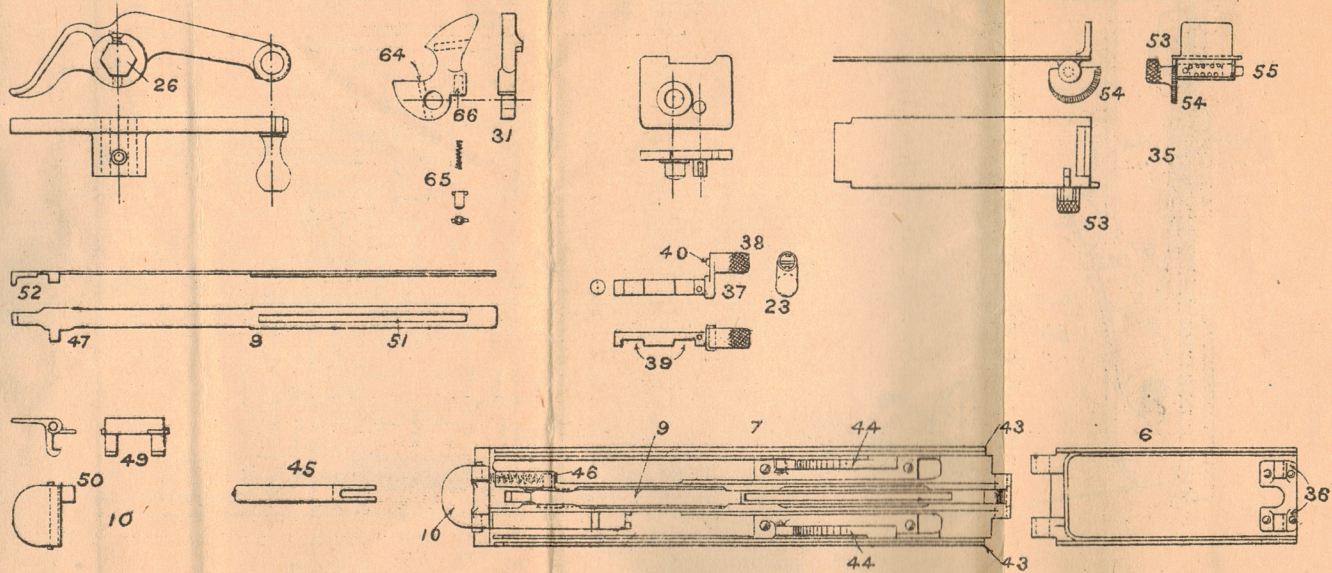

FEED BLOCK.

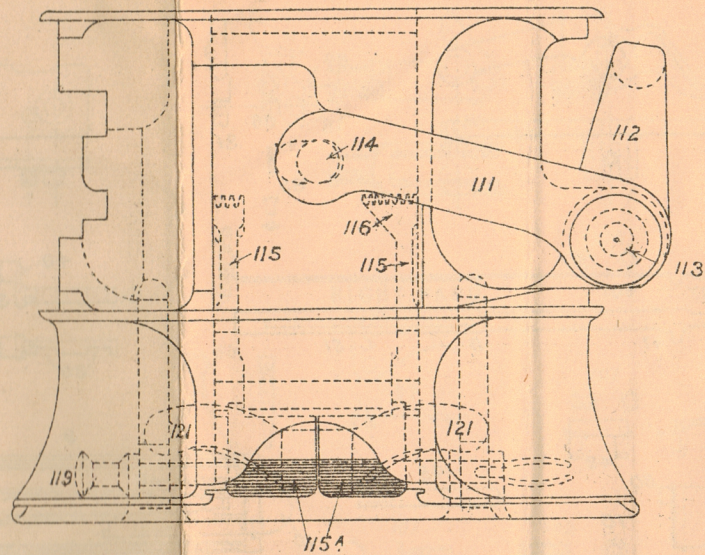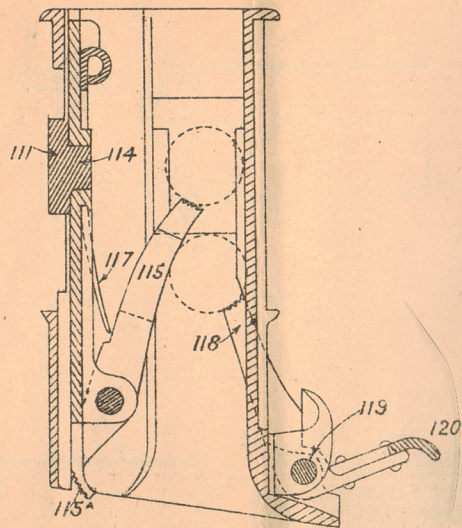

MACHINE FILLING BELTS MAXIM, 303, MARK II.

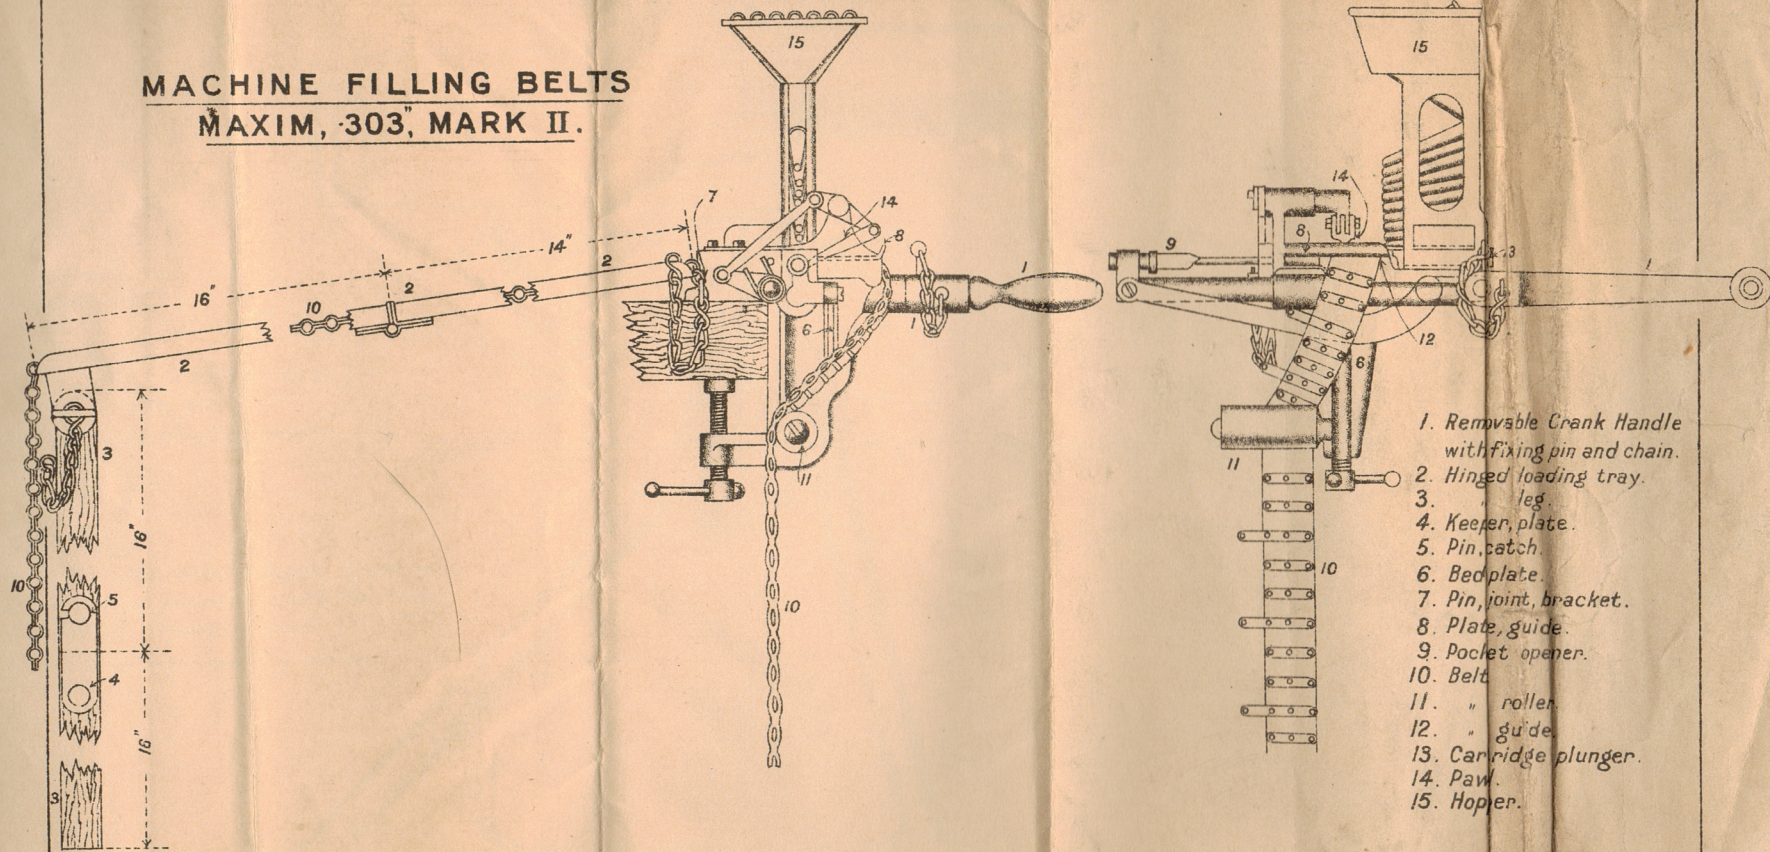


1. Removable Crank Handle with fixing pin and chain.
2. Hinged loading tray.
3. " leg.
4. Keeper, plate.
5. Pin, catch.
6. Bed plate.
7. Pin, joint, bracket.
8. Plate, guide.
9. Pocket opener.
10. Belt.
11. " roller.
12. " guide.
13. Carriage plunger.
14. Paw.
15. Hopper.

MOUNTING, TRIPOD. 303 INCH, MAXIM GUN MARK IV.

Plate X

SCALE = 1/8


- a. Crosshead.*
- b. Elevating gear.*
- c. Socket.*
- d. Arm, crosshead.*
- f. Screw, clamp, checking traverse.*
- g. Tumbler, elevating gear.*
- h. Bolt, jamming, elevating gear.*
- j. Front legs.*
- k. Rear leg.*
- m. Shoes.*
- n. Socket lugs.*
- s. Stud, joints, and jamming handle, front legs.*
- t. Joint pin and jamming handle rear leg.*
- v. Handwheel elevating gear.*
- w. Chain, securing elevating screw.*

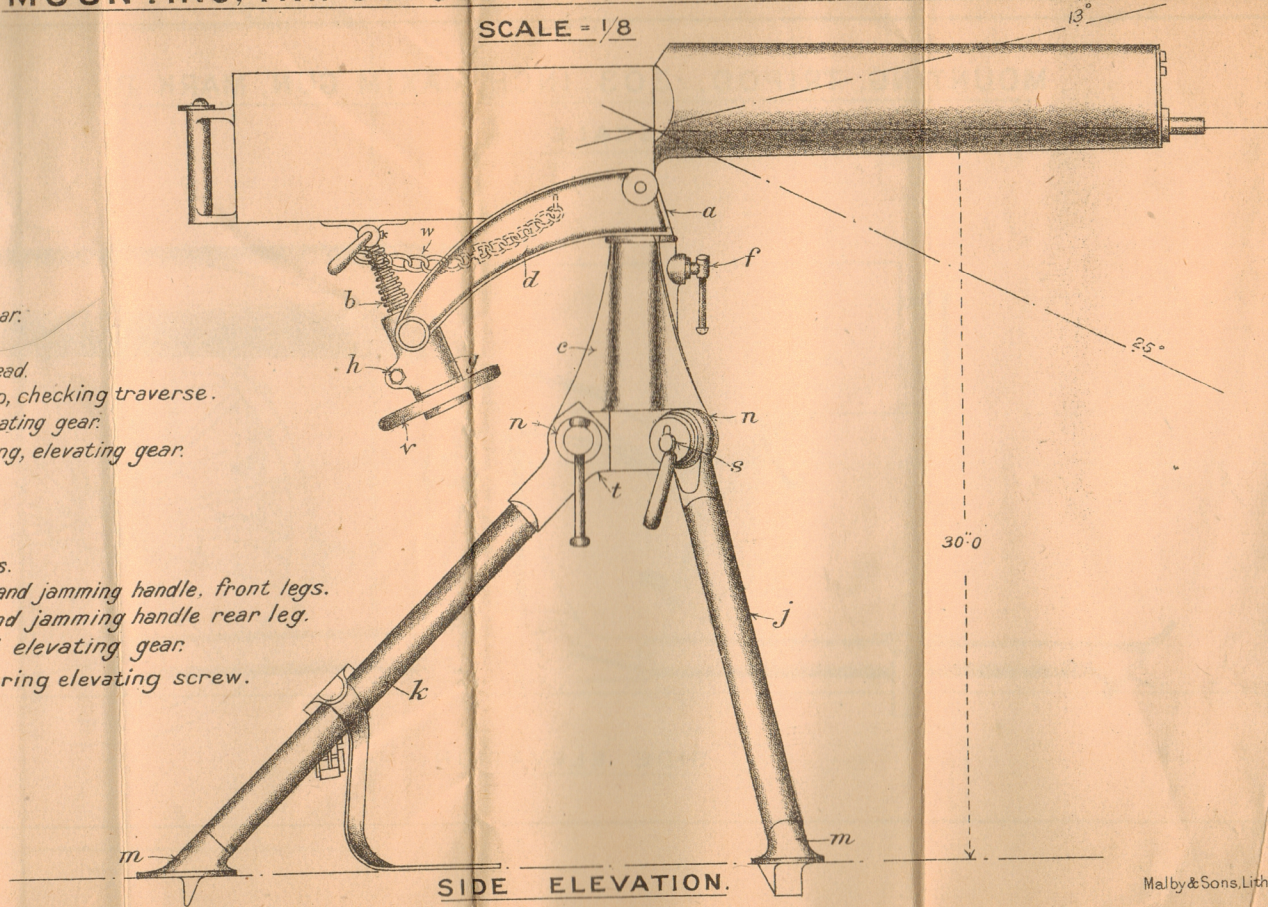

Malby & Sons, Lith.

MOUNTING, TRIPOD, .303 INCH, MAXIM GUN, MARK IV.


SCALE $\frac{1}{8}$.

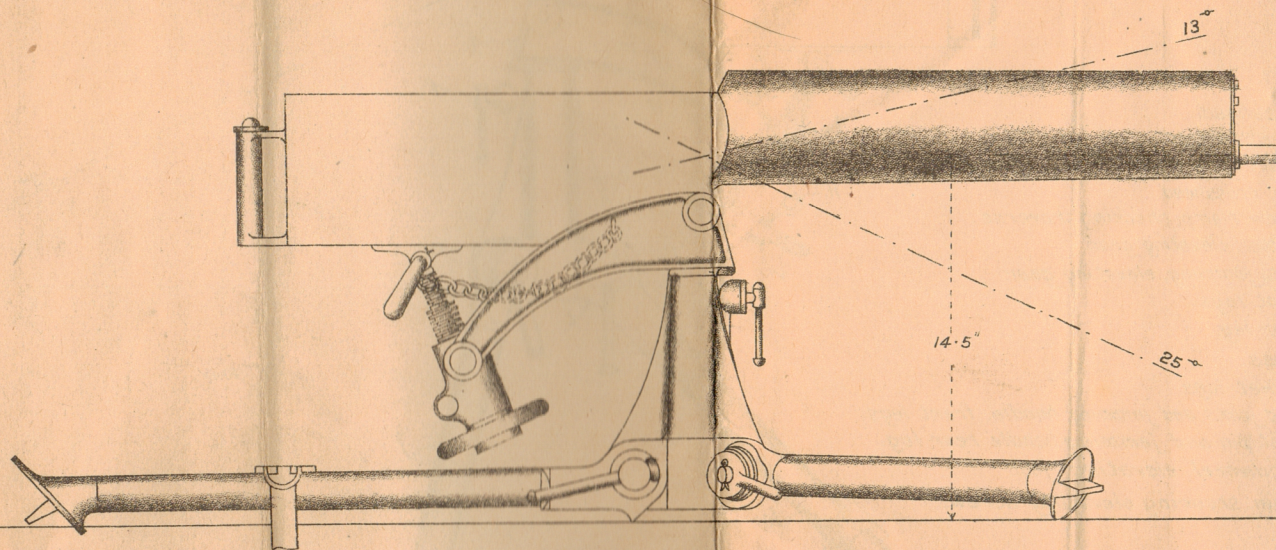

SIDE ELEVATION.

WAGON, LIMBERED, G. S.
PACKED FOR CAVALRY MACHINE GUN SECTION.

SCALE ABOUT $\frac{1}{24}$.

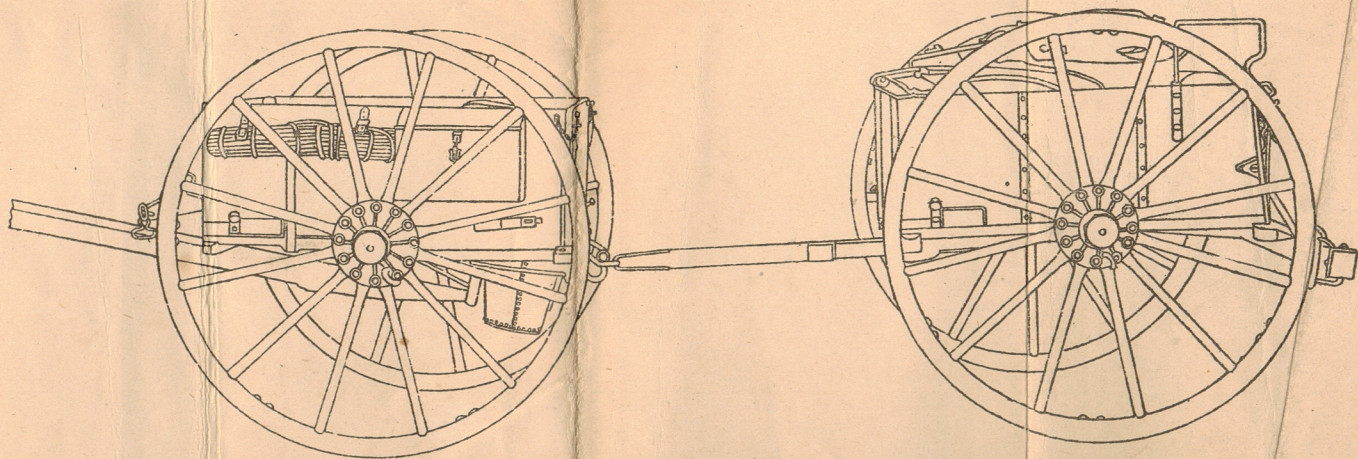

(As to prices in brackets, see top of page 2.)

Examination Papers—continued.

Entrance: R.M. Academy; R.M. College; Indian Army College, Wellington. Supplementary First Appointments in the Royal Marines. Appointments in the Indian Police Force. Appointments in the Police Force of Ceylon. Cadetships in the Royal Navy (Special Entry). June-July 1915. 1s. (11d.)

Entrance: R.M. Academy; R.M. College; Indian Army College, Wellington. Nov.-Dec. 1915. 1s. (10d.)

Entrance: R.M. Academy; R.M. College; Indian Army College, Wellington. Supplementary First Appointments in the Royal Marines. Cadetships in the Royal Navy (Special Entry). June-July 1916. 1s. (1s.)

Entrance: R.M. Academy; R.M. College; Indian Army College, Quetta. Nov. 1916. 1s. (1s.)

Freehand Drawing at the Army Entrance Examination of Nov. 1913. Specimen Paper to illustrate the kind of questions that will be set in. 6d. (6d.)

R.M. Academy, Fourth Class; R.M. College, Fourth, Third, and Second Divisions. July, Dec. 1904; June 1905. Each 1s.

R.M. Academy, Fourth Class; R.M. College, Senior Division. Dec. 1905; June, Dec. 1906; July, Dec. 1907. Each 1s.

Staff College. Admission. Aug. 1909; July 1911; June-July 1912; June-July 1913. Each 1s. (6d.)

Officers for Promotion. Dec. 1912; Dec. 1913; April 1914. Each 1s. (6d.)

Militia, Imperial Yeomanry, and University Candidates. March, 1904; Sept. 1905; Oct. 1906. Each 1s.

Special Reserve, Militia, Territorial Force, and University Candidates. Oct. 1911; March, Oct. 1912; March, Oct. 1913. Each 1s. (6d.)

Special Reserve, Militia, Territorial Force, Non-Commissioned Officers, and University Candidates. March 1914. 1s. (6d.)

Officers Training Corps:—
Cadets of the Senior Division. Certificate A. Dec. 1908. 6d. (5d.)
Cadets of the Junior and Senior Divisions. Certificates A and B. Spring of 1909; Nov. 1911; March, Nov. 1912; March, Nov. 1913; March 1914. Each 6d. (6d.)

Foreign Languages. Modern. Jan., June, Oct. 1910; Jan. 1911; June 1912; June 1913. Each 1s. (6d.)

Family Allowance. See SEPARATION ALLOWANCE.
Field Allowance to the Commander of an Army and to the Commander of an Army Corps or Group of Divisions; Promotion of Lieutenants of the Army Veterinary Corps, Special Reserve, and Territorial Force; Bounty to Soldiers. Special Army Order, June 20, 1916. 1d. (1d.)

Field Almanac. 1917. 1d. (1d.)

Field Service Manuals:—
Ammunition Column. Divisional. New Armies. 1915. 2d. (3d.)

Artillery. Field. Brigade. Q.F. 18-pr. 1915. 3d. (3d.)

Do. Do. Amendments. March 1916. 1d. (1d.)

Do. Heavy. (B.L. 60-pr.) Battery and Ammunition Column. Expeditionary Force. 1916. 3d. (3d.)

(As to prices in brackets, see top of page 2.)

Field Service Manuals—continued.

- Artillery, Horse, Brigade. 13-pr. Q.F. 1908. 3d. (31.)
 Cavalry Regiment. Expeditionary Force. 1913. 3d. (3d.)
 Engineers, Bridging Train. Expeditionary Force. 1915. 3d. (3d.)
 Do. Field Company. Expeditionary Force. 1915. 3d. (3d.)
 Do. Field Squadron. Expeditionary Force. 1914. 3d. (3d.)
 Do. Works Company. Expeditionary Force. 1910. 3d. (3d.)
 Headquarters Units. Expeditionary Force. 1911. 3d. (3d.)
 Infantry Battalion. Expeditionary Force. 1914. 3d. (3d.)
 Infantry (Mounted) Battalion. Expeditionary Force. 1913. 3d. (3d.)
 Medical Service, Army. Expeditionary Force. 1914. 3d. (3d.)
 Signal Service. Signal Company (Air-line). Expeditionary Force. 1913. 3d. (3d.)
 Do. Signal Company (Cable). Expeditionary Force. 1913. 3d. (3d.)
 Do. Signal Company (Divisional). Expeditionary Force. 1915. 3d. (3d.)

Field Service Pocket Book. 1914. (Reprinted, with Amendments, 1916). 1s. (11d.)

Field Service Regulations:—

- Part I. Operations. 1909. (Reprinted, with Amendments, 1914). 6d. (6d.)
 Part II. Organization and Administration. 1909. (Reprinted, with Amendments to Oct. 1914). 1s. (10d.)
 Do. Amendments, April 1915. 1d. (1d.)
 Do. Addendum, Jan. 1917, for the Guidance of Troops operating in France and Belgium. Duties and Responsibilities of the Quartermaster-General, the Director-General of Transportation and the General Officer Commanding Lines of Communication Area. 1d. (1d.)
 Do. Additions and Corrections, March, 1917. Duties and Responsibilities of the Engineer-in-Chief, and of Chief Engineers, &c. 1d. (1d.) (In the press)

Financial Instructions in relation to Army Accounts. 1910. (Reprinted, with Amendments to Sept. 1, 1914). 4d. (4d.)

Fire Manual. Army. 2d. (2d.)

Fire Manual for Hutment Camps. 1916. 1d. (1d.)

Flying Corps. Royal. Training Manual:—

- Part I. 1914. Provisional. 1s. (10d.)
 Do. Amendments, Jan. 1915. 1d. (1d.)

Foreign Languages. Study of. Regulations. 1913. 2d. (2d.)

Fortification. Permanent. For the Imperial Military Training Establishments and for the Instruction of Officers of all Arms of the Austro-Hungarian Army. 7th Edition. Translated. 4s. (2s. 11d.)

France. Disabled and Discharged Soldiers in. See DISABLED.

Franco-German War, 1870-71. Translated from the German Official Account:—

First Part—History of the War to the Downfall of the Empire—

Vol. 1 (Scens. 1 to 5). Outbreak of Hostilities to Battle of Gravelotte. (Out of print)

Vol. 2 (Scens. 6 to 9). Battle of Gravelotte to Downfall of the Empire. (Out of print)

(As to prices in brackets, see top of page 2.)

Franco-German War—continued.

Second Part—History of the War against the Republic—

Vol. 1 (Scens. 10 to 13). Investment of Paris to Re-occupation of Orleans by the Germans. £1 6s. (18s. 6d.)

Vol. 2 (Scens. 14 to 18). Events in Northern France from end of Nov. In North-west from beginning of Dec. Siege of Paris from commencement of Dec. to the Armistice. Operations in the South-east from middle of Nov. to middle of Jan. £1 6s. (18s.)

Vol. 3 (Scens. 19 and 20). Events in South-east France from middle of Jan. to Termination of Hostilities. Rearward Communications. The Armistice, Homeward March and Occupation. Retrospect. £1 11s. 6d. (£1 2s. 3d.)

Also separately, Sections in paper covers, and Plans unmounted:—

Section.

- Events in July. Plan. 3s. (2s. 2d.)
- Events to Eve of Battles of Wörth and Spicheren. 3rd ed. (Out of print)
- Battles of Wörth and Spicheren. 3rd edition. (Out of print)
- Advance of Third Army to the Moselle, &c. 2nd edition. (Out of print)
- Operations near Metz on 15th, 16th, and 17th August. Battle of Vionville—Mars la Tour. 2nd edition. (Out of print)
- Battle of Gravelotte—St. Privat. (Out of print)
- Advance of Third Army and of Army of the Meuse against Army of Chalons. (Out of print)
- Battle of Sedan. (Out of print)
- Proceedings on German Coast and before Fortresses in Alsace-Lorraine. Battle of Noisseville. General review of War up to Sept. 4s. 6d. (3s. 4d.)
- Investment of Paris. Capture of Toul and Strassburg. 6s. (4s. 6d.)
- Events before Paris, and at other points of Theatre of War in Western France until end of October. 5s. 3d. (3s. 11d.)
- Last Engagements with French Army of the Rhine. Occurrences after fall of Strassburg and Metz to middle of November. 4s. 6d. (3s. 5d.)
- Occurrences on Theatre of War in Central France up to Re-occupation of Orleans by the Germans. 6s. (4s. 6d.)
- Measures for Investment of Paris up to middle of December. 4s. (3s.)
- Measures for protecting the Investment of Paris and Occurrences before French Capital to commencement of 1871. 2s. 6d. (1s. 11d.)
- Proceedings of Second Army from commencement of 1871 until the Armistice. 3s. 6d. (2s. 8d.)
- Proceedings of First Army from commencement of 1871 until the Armistice. 3s. (2s. 3d.)
- Occurrences on South-eastern Theatre of War up to middle of Jan. 1871. Events before Paris from commencement of 1871 to the Armistice. 8s. (6s.)
- Occurrences on South-eastern Theatre of War from middle of Jan. 1871. Proceedings in rear of German Army and in Coast Provinces, from Nov. 1870 until the Armistice. 13s. 6d. (9s. 8d.)

(As to prices in brackets, see top of page 2.)

Franco-German War—continued.

Section.

20. General Retrospect of War from beginning of Sept. 1870 to Cessation of Hostilities. Armistice and Peace Preliminaries. Return of German Army and Peace of Frankfurt. The Occupation. The Telegraph. Post, Supply of Ammunition, Commissariat, Hospital Service, Divine Service, Military Justice, Recruitment, and Home Garrisons. Results. 5s. (3s. 9d.)

Analytical Index. 1s. 6d. (1s. 1d.)

Plans—

4. Battle of Colombey-Nouilly. 3d. (3d.)
5A. Battle of Vionville—Mars la Tour. Position of Contending Forces at Noon. 3d. (3d.)
5B. Battle of Vionville—Mars la Tour. Position of Contending Forces from 4 to 5 p.m. 3d. (3d.)
9A. Battle of Sedan. Position of Contending Forces towards Noon. 3d. (3d.)
9B. Battle of Sedan. Position of the Germans in the afternoon shortly before the end of the struggle. 3d. (3d.)

See also Siege Operations.

French Words and Phrases with English Pronunciation. Short Vocabulary of. Notes on French Measures. Abbreviations and Terms used on French Maps, with English Equivalents. 1d. (1d.)

German Army. Cavalry. Drill Regulations. 1909. 3d. (3d.)
Do. Foot Artillery. Drill Regulations. Part IV. THE FIGHT. 1909. 3d. (3d.)

Do. Manœuvres Regulations. 1908. 3d. (3d.)

Germany. The Campaign of 1866 in. With 22 plans in portfolio. 1872. (Reprinted 1907). 6s. (4s. 10d.)

Do. Moltke's Projects for. 1s. (10d.)

Do. Moltke's Correspondence during. Précis. With 4 Plans. 1s. (10d.)

Guernsey and Alderney Royal Militia. Regulations. With the Militia Laws relating to the Islands. Provisional. 8s. (5s. 2d.)

Guns. Drill for. (And see **Guns. Handbooks for**):—

60-pr. B.L. Mark I. Carriage. 1916. (Reprinted, with Amendments, 1917). 1d. (1d.)

60-pr. B.L. Mark II., 1916. Carriage. 1916. (Reprinted, with Amendments, 1917). 1d. (1d.)

18-pr. Q.F. 1916. Revised Edition. (Reprinted, with Amendments, 1917). 1d. (1d.) (In the press)

15-pr. B.L. 1914. 1d. (1d.)

15-pr. B.L.C. 1914. 1d. (1d.)

15-pr. Q.F. 1915. 1d. (1d.)

13-pr. Q.F. 1916. 1d. (1d.)

12-pr. 12-cwt. Q.F. Land Service. 1914. 1d. (1d.)

12-inch B.L. Howitzer. Mark I. (E.O.C.). 1915 (Reprinted with corrections). 1d. (1d.) (Under revision)

10-pr. B.L. 1914. 1d. (1d.)

(As to prices in brackets, see top of page 2.)

Guns. Drill for—continued.

9·2-inch B.L. Mark IX., on Mark IV. Mounting. Land Service. 1917. 1d. (1d.)

9·2-inch B.L. "C" Mark IX., on Marks V^a. and V^b. Mountings. Land Service. 1917. 1d. (1d.)

9·2-inch B.L. Marks X., X^v, and X^u, on Mark V. Mounting. Land Service. 1916. 1d. (1d.); Amendments. 1d. (1d.)

6-inch B.L. Marks VII. and VII^v. Land Service. 1914. 1d. (1d.)

6-inch B.L. 30-cwt. Howitzer. 1916. 1d. (1d.)

6-inch Q.F. Land Service. 1914. 1d. (1d.)

5-inch B.L. Howitzer. 1915. 1d. (1d.)

4·7-inch Q.F. on Travelling Carriages. 1912. 1d. (1d.)

4·7-inch Q.F. Fixed Armament. Land Service. 1914. 1d. (1d.)

4·7-inch Q.F. Heavy Batteries. 1916. 1d. (1d.)

4·5-inch Q.F. Howitzer. 1917. 1d. (1d.)

4-inch Q.F. Marks III. and III^u. Land Service. 1917. 1d. (1d.)

2·95-inch Q.F. 1914. 1d. (1d.)

Guns. Handbooks for. (And see **Guns. Drill for**):—

18-pr. Q.F. Land Service. 1915. 1s. (11d.); Addenda and Corrigenda. 2d. (2d.)

15-pr. B.L. Marks II. to IV., and Carriages, Marks II.* and IV., and Wagon and Limber, Mark IV. Field Batteries. 1914. Provisional. 1s. (10d.)

15-pr. B.L.C. Marks I., II., III*, and IV., with Mark I. Carriage, and Marks I., Ia., Ib., and Ic. Limbers and Wagons. Land Service. 1912. 1s. (10d.); Addendum. 2d. (2d.)

13-pr. Q.F. Land Service. 1913. (Reprinted, with Amendments, 1914). 1s. 3d. (1s. 1d.); Amendments, 1915, March 1916. Each 1d. (1d.)

10-pr. Jointed B.L. Mule Equipment. 1914. 1s. 6d. (1s. 2d.)

9·45-inch B.L. Howitzer. 1906. (Reprinted, with Amendments, 1915). 9d. (8d.)

9·2-inch B.L. Mark IX., "C" Mark IX., and Marks X., X^v, and X*. Land Service. 1912. 1s. (11d.)

8-inch R.M.L. Howitzer of 70 cwt. For Movable Armament and Armament of Works. Land Service. 1901. (Reprinted 1916). 2s. (1s. 6d.)

6-inch B.L. and B.L.C. Guns, Mountings, &c. 1904. 1s. 6d. (1s. 4d.)

6-inch B.L. Marks VII. and VII^v. Land Service. 1911. 9d. (8d.)

6-inch B.L. Marks VII. and VII^v, on Fixed Mountings. Land Service. 1916. 1s.

6-inch B.L. Marks VII. and VII^v, on Travelling Carriage. Land Service. 1915. 2s. (1s. 7d.) (Under revision)

6-inch B.L. 30-cwt. Howitzers. Marks I. and I*. 1917. 1s. 6d. (1s. 2d.)

6-inch "B" Q.F. Land Service. 1911. 1s. (10d.)

5·4-inch B.L. Howitzer. Mark I. 1902. 1s. 6d. (1s. 2d.)

5-inch B.L. Marks I.—V. 1904. 9d. (9d.)

5-inch B.L. Marks IV.—V. Land Service. 1903. 1s. 6d. (1s. 2d.)

5-inch B.L. Howitzer. 1915. 1s. (11d.)

4·7-inch Q.F. Fixed Armaments. Land Service. 1904. 1s. (11d.)

4·7-inch Q.F. "B" on Travelling Carriages. Land Service. 1917. (In the press)

(As to prices in brackets, see top of page 2.)

Guns. Handbooks for—continued.

- 4.5-inch Q.F. Howitzer. Land Service. 1915. 1s. (11d.); Amendments. 1d. (1d.); Addendum and Corrigenda. 2d. (2d.)
 2.95-inch Q.F. Mule Equipment and Man Transport Equipment. 1914. 2s. (1s. 6d.)
 303-inch Lewis Machine (Magazine Rifle Chamber). Part I. 1915. Provisional. With Addendum. 4d. (4d.); Amendment. 1d. (1d.)
 303-inch and 303-inch Converted Maxim Machine (Magazine Rifle Chamber), mounted on Carriages, M.G., Infantry, Parapet; Tripod and Cone Mountings. 1911. (Reprinted, with Amendments, 1915). 9d. (9d.); Addenda. 1d. (1d.); Amendments (for 303-inch Vickers' Gun as well). 3d. (3d.)
 303-inch Vickers Machine (Magazine Rifle Chamber), on Tripod Mounting. Mark IV. 1917. ed. (6d.)

See also MACHINE GUNS; MUSKETRY REGULATIONS, Part I.; and RIFLE, ROSS MAGAZINE.

Historical Records of the British Army:—

- Horse Guards. 5s. (3s. 7d.)
 Dragoon Guards, 3rd, 4th, 6th, and 7th. Each 4s. (3s.)
 Dragoons, 1st, 3rd, 7th, 14th, and 16th. Each 4s. (3s.)
 Do. 12th, and 13th. Each 3s. (2s. 3d.)
 Marine Corps. 3s. (2s. 2d.)
 Foot, 6th, 7th, 8th, 10th, 11th, 13th, 15th, 16th, 17th, 18th, 19th, 21st, 22nd, 36th, 39th, 46th, 53rd, 67th, 71st, 72nd, 73rd, 74th, 86th, 87th, and 92nd. Each 4s. (3s.)
 Do. 14th, 56th, 61st, 70th, and 88th. Each 3s. (2s. 3d.)

Histories, Short, of the Territorial Regiments of the British Army. 67 numbers, each 1d. In one volume, 5s. (3s. 9d.)

- Do. The Scots Guards. 1d. (1d.)
 Do. The 6th (Inniskilling) Dragoons. 1d. (1d.)
 Do. Revised Editions. 1d. (1d.) each:—
 Alexandra, Princess of Wales's Own (Yorkshire Regiment).
 The Bedfordshire Regiment.
 The Black Watch (Royal Highlanders).
 The Cameronians (Scottish Rifles).
 The Cheshire Regiment.
 The Duke of Cornwall's Light Infantry.
 The Duke of Wellington's West Riding Regiment.
 The Durham Light Infantry.
 The East Lancashire Regiment.
 The East Surrey Regiment.
 The Hampshire Regiment.
 The Highland Light Infantry.
 The King's Own (Royal Lancaster Regiment).
 The King's Own Yorkshire Light Infantry.
 The King's Own Scottish Borderers.
 The Lancashire Fusiliers.
 The Leicestershire Regiment.
 The Loyal North Lancashire Regiment.
 The Northamptonshire Regiment.
 The Oxfordshire and Buckinghamshire Light Infantry.
 The Prince of Wales's Leinster Regiment (Royal Canadians).
 The Prince of Wales's Own (West Yorkshire Regiment).
 The Prince of Wales's Volunteers (South Lancashire Regiment).
 The Princess Charlotte of Wales's (The Royal Berkshire Regiment),

(As to prices in brackets, see top of page 2.)

Histories, Short—continued.

- The Princess Louise's Argyll and Sutherland Highlanders.
 The Queen's (Royal West Surrey Regiment).
 The Royal Inniskilling Fusiliers.
 The Royal Sussex Regiment.
 The Royal Welsh Fusiliers.
 The South Staffordshire Regiment.
 The Suffolk Regiment.
 The Welsh Regiment.
 The Worcestershire Regiment.

Horses. Army. Notes on the Feeding, Management and Issue of. March 1916. 1d. (1d.) See also ANIMAL MANAGEMENT.

Hospitals. Military Families'. Nursing Staff Regulations. Dec. 1909. 1d. (1d.) See also NURSING SERVICE and TERRITORIAL FORCE.

Hostilities without Declaration of War from 1700 to 1870. 2s. (1s. 7d.)

Hygiene. Elementary Military. Manual of. 1912. 6d. (6d.) See also SCHOOLS.

Indian Empire. Our. A Short Review and some Hints for the use of Soldiers proceeding to India. (Under revision)

Infantry Training. (4-Company Organization.) 1914. 6d. (6d.) Do. Amendments, July, Aug. 1916. Each 1d. (1d.)

Injuries in War. Memorandum on the Treatment of, based on experience of the present Campaign. July 1915. 4d. (4d.)

Institutes. Garrison and Regimental. Rules for the Management of. 1916. 1d. (1d.)

Italian Cavalry Training Regulations. 1911. Training for Marches, Tactics of Minor Units, and Training of Patrols. Translated. 4d. (3d.)

Jamaica. Standing Orders. 1912. 1s. (9d.)

Jersey. Royal Militia of the Island of. Regulations. 1914. With the Jersey Militia Law, 1905. 1s. 3d. (11d.)

King's Regulations and Orders for the Army. 1912. (Reprinted, with Amendments published in Army Orders up to Aug. 1, 1914). 1s. (1s.); Amendments published in Army Orders between Sept. 1, 1914, and Aug. 1, 1916. 1d. (1d.)

Kit Plates:—

Artillery. Royal:—

6. Garrison. Kit laid out for Inspection. 1909. 2d. (2d.)
 10. Do. Kit in Barrack Room. 1909. 2d. (2d.)

Cavalry. 1891. 1d. (1d.)

Engineers. Royal:—

1. Dismounted. Detail of Shelf and Bedding, with Marching Order ready to put on. Detail of Shelf and Bedding, with Drill Order ready to put on. 1914. 1d. (1d.)
2. Dismounted. Full Kit laid out for Inspection in Barrack Room. 1914. 1d. (1d.)
4. Mounted N.C.O. or Driver and Field Troop Sapper. Full Kit laid out for Inspection in Barrack Room. 1910. 1d. (1d.)
5. Mounted. Detail of Shelf and Bedding. 1910. 1d. (1d.)
6. Driver, with pair of Horses. Field Kit laid out for Inspection on Parade, including Articles carried in Valise on Baggage Wagon. 1899. 1d. (1d.)

Infantry. Highland. 1884. 1d. (1d.)

(As to prices in brackets, see top of page 2.)

Kit Plates—continued.

Medical Corps. Royal Army. Kit in Barrack Room. 2d. (2d.)
Ordnance Corps. Army. For Guidance at Marching Order and Kit Inspections. 2d. (2d.)

Large Formations. The Operations of. (Conduite des Grandes Unités). Translated from the Field Service Regulations of the French Army, dated Oct. 28, 1913. 6d. (5d.)

Law. Military. Manual of. 1914. 2s. (1s. 9d.)

Law for the Reserve Forces and Militia. Manual of. 1886. 1s. 6d. (1s. 2d.)

Machine-Gun Company Training. Infantry. 1917. Provisional. 6d.

Machine Guns and Small Arms. '303-inch. Nomenclature of Parts, Stripping, Assembling, Action, Jams, Missiles, Failures, and Inspection of. Revised Edition. 1915. 3d. (3d.) (Under revision)

Magazines and Care of War Matériel. Regulations for. 1913. (Reprinted, with Amendments, 1917). 1s. 6d. (1s. 3d.)

Map Reading and Field Sketching. Manual. 1912. (Reprinted, with Additions, 1914). 1s. (11d.) See also SCHOOLS.

Medical Corps. Royal Army. See also TERRITORIAL FORCE:—

Admission to. Regulations for. Jan. 1912. 1d. (1d.)

Standing Orders. 1914. 1s. (10d.)

Training. 1911. 9d. (9d.)

Medical Department. Army. Index to Appendices of Reports from 1859 to 1896. 3d. (3d.)

Medical Diseases in the Mediterranean War Area. See DISEASES.

Medical Service. Army:—

Regulations. 1906. (Reprinted, with Amendments up to Sept. 30, 1914). 4d. (5d.)

Do. Amendment, Dec. 1916. Revised Appendix No. 51. Scale of Medical and Surgical Equipment for Units in the Field. 1d. (1d.)

Medical Service. Strategical and Tactical Employment of the, as carried out in an Army Corps; with a series of Problems. Translated from the Austrian. 4s. 6d. (3s. 4d.)

Medical Services. Army. Advisory Board for. The Treatment of Venereal Disease and Scabies. First Report, 1904. 1s. 6d. (1s. 3d.); Second Report, 1905. 2s. (1s. 6d.); Third Report, 1905. 1s. (10d.); Final Report, 1906 (Out of print).

Medical Services of Foreign Armies. Handbook of. Part I. FRANCE. 6d. (5d.); Part II. GERMANY. 6d. (5d.); Part III. AUSTRIA-HUNGARY. 6d. (5d.); Part IV. RUSSIA. 6d. (5d.); Part V. ITALY. 6d. (5d.); Part VI. THE NETHERLANDS AND BELGIUM. 6d. (5d.)

Mekometer Handbook. 1911. 6d. (5d.)

Mess Management. See ORDNANCE COLLEGE.

Military and other Terms. See SCHOOLS.

Military Lands Acts, 1892 to 1903. Bylaws. See ARTILLERY AND RIFLE RANGES ACT, &c.

Mounted Troops (Divisional) Training. June 1915. Provisional. 1d. (1d.)

(As to prices in brackets, see top of page 2.)

Musketry Regulations:—

Part I. 1909. (Reprinted, with Amendments, 1914). 6d. (7d.)

Do. Amendments, Nov. 1915. 1d. (1d.)

Do. Amendments, July 1916. Enfield 1914 Pattern Rifle. 1d. (1d.)

Do. Addendum, July 1916. Handbook of the Enfield 1914 Pattern

'303-inch Magazine Rifle. 1d. (1d.)

Do. Addendum No. 2, Dec. 1916. Hotchkiss Gun and Lewis Gun Course. 1d. (1d.)

Do. Addendum No. 3, Dec. 1916. Instructional Course for the Webley and other Pistol. 1d. (1d.)

Do. Addendum No. 4, April 1917. Annual General Musketry Course, and Musketry Course for Transport Workers' Battalions. 1d. (1d.)

Do. and Vickers' Machine-Gun Handbook. Amendments, June 1916. Range Tables for Vickers' Guns for Mark VII. Ammunition. 1d. (1d.)

Part II. Rifle Ranges and Musketry Appliances. 1910. (Reprinted, with Amendments to Oct. 31, 1914). 4d. (4d.)

Night Operations. Elementary Training in. 1911. 1d. (1d.)

Number of Troops to the Yard in the Principal Battles since 1850. Memo. on. With opinions of Modern Authorities on limits of extension at the present day. 1884. 9d. (7d.)

Nursing Service. Queen Alexandra's Imperial Military. Regulations for Admission to the. 1916. 1d. (1d.)

See also HOSPITALS and TERRITORIAL FORCE.

Officers Training Corps:—

Regulations. 1912. (Reprinted, with Amendments to April 1916). 2d. (2d.)

Do. (Inns of Court). 1d. (1d.)

Special A.O. March 16, 1908. 1d. (1d.)

Junior Division. Instructions for the Annual Camps. 1913. 2d. (2d.)

Operation Orders. A Technical Study, by Hans von Kiesling. Translated from the German. 1s. 6d. (1s. 3d.)

See also LARGE FORMATIONS. OPERATIONS OF.

Optical Manual or Handbook of Instructions for the Guidance of Surgeons. Third Edition. 1885. 1s. 6d. (1s. 3d.)

Orange Free State Topographical Survey, 1905-1911. Report on the. 10s. (7s.)

Ordnance College. See also ARTILLERY COLLEGE:—

Advanced Classes (up to the 33rd). Reports on. Each 1s. (9d.)

Do. 34th. 6d. (5d.)

Artificers. Military. Handbook for. 10th Edition. 1915. 9d. (9d.)

Dynamics. Notes on. Second Edition. 3s. (2s. 5d.)

Officers' Mess (Royal Artillery) Management and First Principles of Bookkeeping. 3d. (3d.)

Ordnance Courses. Reports on. Each 1s. (9d.)

Regulations. 1907. 2d. (2d.)

Ordnance Corps. Army. Standing Orders. 1912. (Reprinted, with Amendments, 1917). (in the press)

Ordnance Manual (War). 1914. 6d. (5d.)

(As to prices in brackets, see top of page 2.)

Ordnance Service. Treatise on. Seventh Edition. 1908. With volume of plates. 7s. 6d. (5s. 6d.); Amendments. June 1909, Dec. 1910, Dec. 1912. Each 1d. (1d.); Do., Dec. 1909, Dec. 1911. Each 2d. (2d.)

Ordnance Services. Army. Regulations:—

Part I. 1912. (Reprinted, with Amendments up to July 1, 1915). 6d. (7d.)

Part II. 1914. Instructions for Laboratories and Laboratory Operations, Examination of Explosives and Ordnance. (Reprinted, with Amendments, 1916). 1s. 6d.

Do. (*separately*). Amendments, Dec. 1916. (Including Appendices XI, XIV, and XV, as amended in the Regulations). 2d. (2d.)

Pathological Specimens in the Museum of the Army Medical Department. Netley. Descriptive Catalogue of. Third Edition. Vol. I. By Sir W. Aitken, M.D. 1892. 5s. (3s. 8d.)

Pay. Allotments of. *See* SEPARATION ALLOWANCE.

Pay, Appointment, Promotion, and Non-Effective Pay of the Army. Royal Warrant. 1914. 6d. (7d.)

Pay Duties of Officers Commanding Squadrons, Batteries, Companies, &c. Instructions. (Revised for the period of the War). I. Home and Colonies. II. In the Field. May 1915. 1d. (1d.) *See also* TERRITORIAL FORCE.

Photographs received from General Headquarters, France. *See* PICTURE POSTCARDS.

Physical Training. Manual of. (Reprint 1908 with Amendments published in Army Orders to Dec. 1, 1914). 9d. (9d.)

Physiology. *See* SCHOOLS.

Picture Postcards of Photographs received from General Headquarters, France. Price 1d. each:—

No.

S. 158. Ypres. Grande Place, from Cloth Hall, facing S.W.

S. 160. Do. Street off the Rue de Lille.

S. 171. Do. Au Capitole de Rome Est. St. Martin's Church in background.

S. 173. Do. Street leading to Square.

S. 174. Do. Shell Hole in Square.

S. 215. British Attack on Hohenzollern Redoubt.

S. 219. Wounded returning to Dressing Station after Attack.

S. 220. Do.

S. 233. Dug-out in Trench.

S. 234. Do.

S. 235. View in First-line Trenches.

S. 236. Do.

S. 243. The King visiting Hospital in France.

S. 244. The King's Car in Sight.

S. 247. The King inspecting Canadians.

S. 248. The King speaking to General Officers, Canadians.

S. 249. Do.

S. 250. The King speaking to French and Belgian Officers.

S. 251. The King and some Generals.

S. 252. The King inspecting 2nd Corps.

S. 256. The King speaking to General Officers, 2nd Corps.

Portable Sub-target (Mark I.), and How to Use it. 1911. (Reprinted, with Amendments, 1914). 1d. (1d.)

(As to prices in brackets, see top of page 2.)

Postal Services. Army. Manual of. War. 1913. (Reprinted, with Amendments, 1915). 3d. (3d.)

Projection, &c. Linear Perspective. A Text Book for use of the R.M. Academy. Part I.—Text. Part II.—Plates. 1904. 6s. (4s. 5d.)

Promotion of Lieutenants of the Army Veterinary Corps, Special Reserve, and Territorial Force. *See* FIELD ALLOWANCE.

Publications (Recent) of Military Interest. List of. Quarterly. Nos. 1 to 8 (except 1, 3, 5 and 6, out of print). 2d. (2d.) each; Nos. 9 to 17, 4d. (4d.) each. *Continued by* THE ARMY REVIEW.

Railway Distances, Ireland. Handbook of. Third Edition. 1884. 7s. 6d. (5s. 3d.)

Railway Manual (War). 1911. (Reprinted, with Amendments, 1914). 6d. (5d.)

Range-Finder Handbooks:—

Infantry No. 1. (Marindin). 1913. (Reprinted 1915). 3d. (3d.)

Infantry No. 2. (Barr and Stroud). 31.5-inches base. 1916. 6d. (5d.)

Range Finding. Coast Defence:—

Manual of. Part I. 9d. (8d.)

Do. Amendments, June 30, 1914. 1d. (1d.)

Do. Addendum, 1915. Self-contained-Base Instruments. 1d. (1d.)

Do. Addenda, 1916. 1d. (1d.)

Ranges. Miniature Cartridge. (Reprinted from THE ARMY REVIEW, January, 1914). 3d. (3d.)

Rangefinders. Instructions for the Training of, with the Artillery Range-finder. 1d. (1d.)

Ranging. Examples of. *See* ARTILLERY, TRAINING, FIELD.

Recruiting for the Regular Army and the Special Reserve. Regulations. 1912. (Reprinted, with Amendments to Aug. 31, 1914). 3d. (3d.)

Remount Regulations. 1913. 3d. (3d.)

Reserve. *See also* SPECIAL RESERVE AND TERRITORIAL FORCE:—

Army Reserve. Class I. Regulations. 1911. 1d. (1d.)

Do. Amendments, June 1913. 1d. (1d.)

National Reserve. Regulations. 1913. Provisional. 1d. (1d.)

Rifle. Enfield 1914 Pattern. *See* MUSKETRY REGULATIONS, Part I.

Rifle Ranges, Training Ground, and Musketry Camp, Penally, (Western Coast Defences). Standing Orders. 1910. 2d. (2d.)

Rifle. Ross Magazine .303-inch, Mark IIIB. Handbook of the. 1915. 1d. (1d.); Amendments, March 1916. 3d. (3d.)

Rifles, &c. Cleaning of. Notes on the. 1911. 2s. for 6d. (7d.)

Rifles, Short and Charger-loading, Magazine, Lee-Enfield. Handbook for Sergeant Instructors of Special Reserve, Officers Training Corps, and Territorial Force in regard to the Care, Inspection, etc., of. 3d. (3d.)

Russo-Japanese War:—

Medical and Sanitary Reports from Officers attached to the Japanese and Russian Forces in the Field. 1908. 5s. (3. 10d.)

(As to prices in brackets, see top of page 2.)

Russo-Japanese War—continued.

Official History. Part I. Causes of the War. Opening events up to and including the Battle of the Ya-lu. Second Edition. 1909. 1s. 6d. (1s. 3d.); Part II. From the Battle of the Ya-lu to Liao-yang, exclusive. 1908. 5s. (3s. 8d.); Part III. The Siege of Port Arthur. 1909. 4s. 6d. (3s. 4d.); Part IV. Liao-yang. 1910. 4s. (3s.); Part V. Sha Ho. 1911. 4s. 6d. (3s. 5d.)

Official History (Naval and Military). Vol. I. To Aug. 24, 1904. With case of Maps. 1910. 15s. (10s. 7d.); Vol. II. Liao-yang, The Sha-ho, Port Arthur. With case of Maps. 1912. 15s. (10s. 10d.)

Reports from British Officers attached to the Japanese and Russian Forces in the Field. In three vols., with two cases of Maps (not sold separately). 21s. (15s.)

Salisbury Plain. Southern Command. Standing Orders applicable to all Troops encamped on Salisbury Plain, and applicable generally to Troops Quartered at Bulford and Tidworth. 1913. (Reprinted, with Amendments, 1915.) 3d. (3d.)

"Sam-Browne" Belt, Scabbard and Sword Knot. Specification and Drawings. 1899. 1d. (1d.) See also EQUIPMENT and VALISE EQUIPMENT.

Scabies. See MEDICAL SERVICE.

Schools. Army:—

Annual Reports on. 1911-12; 1912-13. Each 1s. (9d.)

Map Reading. Notes on. 1915. 3d. (3d.)

See also MAP READING and FIELD SKETCHING.

Military and other Terms, and Words which Occur in Orders. Lists of. 1914. 2d. (2d.)

Physiology. Elementary. Handbook. 1901. 1d. (1d.)

Regulations. 1911. 4d. (4d.)

School Hygiene. Handbook of. For Teachers. 6d. (6d.) See also HYGIENE.

Singing in. Regulations for Teaching. 1911. 1d. (1d.)

Standing Orders for Inspectors, Examiners, and Teachers. 1910. 6d. (5d.)

Type Exercises of Extracts from Regimental Orders for use of Candidates for Third-class Certificates of Education. 1912. 3d. (3d.)

Scouts. Training and Use of. Lecture by Col. F. C. Carter. 1905. 2d. (2d.)

Screws. Standard Leading. Provision of, for Screw-cutting Lathes. Report of Committee. 1905. 1s. (10d.)

Separation Allowance, Allotments of Pay, and Family Allowance. Army. Regulations for the Issue of, during the present War. Nov. 1916. 3d. (3d.)

Service Corps. Army:—

Regimental Standing Orders. 1911.

(Out of print)

Do. Amendments. 1d. (1d.); A.S.C. Memorandum, No. 25. 1d. (1d.)

Training. Part I. 1909. (Reprinted, with Amendments, 1915.) 9d. (9d.)

Do. Part II. Supplies. 1909. (Reprinted, 1914, with new Appendix XII.) 1s. 3d. (1s. 1d.)

Do. Part III. Transport. 1911. (Reprinted, with Amendments to April 1915.) 9d. (9d.)

Do. Part IV. Mechanical Transport. (Out of print)

(As to prices in brackets, see top of page 2.)

Sevastopol. Siege of. 1854-55. 3 vols., with Case of Maps and Plans. Half Morocco, £5 4s. Cloth, £4 4s.

Or separately:—Vol. I. Engineer Operations. £1 6s.; Vol. II. Do. With Case of Maps and Plans. £2 10s.; Vol. III. Artillery Operations. 10s.

Sewage. Practical Treatment of. The latest development of. 1903. 6d. (5d.)

Shoeburyness Garrison. Standing Orders. 1913. 1s. 6d. (1s. 1d.)

Siege Operations in the Campaign against France, 1870-71. (Von Tiedemann.) Translated. 4s. 6d. (3s. 8d.)

Signalling Training Manual. 1915. Provisional. 6d. (6d.) (Under revision); Amendments, Aug. 1916. 1d. (1d.)

Signal Service. The Army. 1d. (1d.)

Signal Service. Army. Manual of. War. Provisional. 1914. 2d. (2d.)

Small Wars. Their Principles and Practice. Third Edition. 1906. (Reprinted 1909.) 4s. (3s.)

Soldiers Disabled and Discharged, in France. See DISABLED.

Somaland:—

Military Report on. 1907. Vol. I. Geographical, Descriptive, and Historical. 2s. (1s. 7d.)

Operations in, 1901-04. Official History. Vol. I. 3s. (2s. 4d.); Vol. II. 4s. (3s.)

South African War, 1899-1902:—

Medical Arrangements. 7s. 6d. (5s. 6d.)

Medical History. An Epidemiological Essay. (Reprinted from "The Journal of the Royal Army Medical Corps.") 3s. 9d. (2s. 9d.)

Railways. 4s. (3s.)

Surgical Cases Noted. 7s. 6d. (5s. 6d.)

Telegraph Operations. 10s. (7s. 1d.)

Voluntary Organizations in aid of the Sick and Wounded. Report of the Central British Red Cross Committee on. 1902. 3s. (2s. 5d.)

Special Reserve (see also ENTRANCE; EXAMINATION; RESERVE):—

Regulations for Officers of the Special Reserve of Officers, and for the Special Reserve. 1911. 4d. (5d.)

Scheme for the Provision, Organization, and Training of the Special Reserve required to supplement the Regular Army, and the Application of the Scheme to the existing Militia. (Special A.O., Dec. 23, 1907.) 2d. (2d.)

Scheme for the Provision, Organization, and Training of that portion which will be drawn from the Territorial Force to supplement the Regular Army on Mobilization being ordered. (Special A.C., Nov. 20, 1908.) 2d. (2d.)

Staff College (Camberley) Regulations. 1905. Reprinted with Amendments up to Nov. 30, 1910. 1d. (1d.)

Stations of Units of the Regular Forces, Militia, Special Reserve, and Territorial Force. Quarterly up to No. 45, July 1914. Each 2d. (2d.)

(Subsequent publication suspended)

Statutes relating to the War Office and to the Army. 1880. 5s. (3s. 9d.)

Statutory Powers of the Secretary of State, Ordnance Branch. 1919. 5s. (3s. 9d.)

Steam Engines and Boilers, and Gas and Oil Engines. Management of. Notes and Memoranda. 1911. 1s. (1d.)

‘As to prices in brackets, see top of page 2.)

- Sudan Almanac.** 1917. Compiled in the Intelligence Department, Cairo. Astronomical Calculations made in the Computation Office of the Survey Department, Egyptian Ministry of Finance. 1s. (9d.)
- Sudan. The British Force in the.** Standing Orders. 1914. 9d. (7d.)
- Sudan. The Anglo-Egyptian.** A compendium prepared by Officers of the Sudan Government :—
- Vol. I. Geographical, Descriptive, and Historical (with Eighty-two Illustrations). 10s. (7s. 4d.)
- Vol. II. Routes. 7s. 6d. (5s. 5d.) (Not containing Chapter VII. Supplement (A)).
- Do. In Separate Chapters. 1s. (10d.) each :—
- I. and II., *Nil*. III. North-Eastern Sudan. IV. Eastern Sudan. V. Central Sudan. VI. South-Eastern Sudan. VII. Bahr-el-Ghazal. VIII. Kordofan. IX. North-Western Sudan.
- Do. Chapter VII. Supplement (A). Bahr-el-Ghazal. Additional Routes. 1s. (10d.)
- Sudan Campaign.** History of the. Two parts, and Maps. 1890. 15s. (10s. 11d.)
- Supply Manual (War).** 1909. 6d. (6d.)
- Supply, Re-organized System of, and of Ammunition Supply of the** Expeditionary Force in War, consequent on the introduction of Mechanical Transport. Memorandum explaining the. Feb. 1912. 1d. (1d.)
- Supply, Transport, and Barrack Services.** Regulations. 1915. 6d. (6d.)
- Surveying. Topographical and Geographical.** Text Book of. Second Edition. 1913. 7s. 6d. (5s. 6d.)
- Do. 1905. Appendix XI. Tables for the Projection of Graticules for Squares of 1° side on Scale of 1 : 250,000, and for Squares of $\frac{1}{2}$ ° side on Scale of 1 : 125,000; with other Tables used in Projecting Maps. 4d. (4d.)
- Do. 1905. Appendix XII. Tables for the Projection of Graticules for Maps on the Scale of 1 : 1,000,000. 1910. 2d. (2d.)
- Tactical Rides and Tours on the Ground.** The preparation and Conduct of. Translated from the German. 1s. 3d. (1s. 1d.)
- Telegraphy and Telephony. Army.** Instruction in :—
- Vol. I. Instruments. (Reprinted, with Corrections, 1914). 1s. 6d. (1s. 4d.)
- Vol. II. Lines. 1909. (Reprinted, with Corrections, 1914). 1s. (11d.)
- Do. Revised Chapter I. Field Cables. Provisional. 1d. (1d.)
- Territorial Force.** (See also EQUIPMENT and EXAMINATION) :—
- Cadet List.** A List of all Cadet Units which have received Official Recognition on Dec. 31, 1915. 1s. (11d.) (Under revision)
- Cadet Units in the British Isles.** Regulations governing the Formation, Organization, and Administration of. 1914. (Reprinted, with Amendments in Army Orders to April 1, 1917). 1d. (1d.)
- Field Kits.** Officers and Men. 1d. (1d.)
- Hospitals, General, of the.** Regulations for. 1912. 2d. (2d.)
- Medical Corps, Royal Army.** Syllabus of Training. 1914. 1d. (1d.)
- Mobilization of a Territorial Infantry Battalion.** (Reprinted from THE ARMY REVIEW, July 1913). 3d. (3d.)
- Nursing Service.** Standing Orders. 1912. (Reprinted, with Amendments, 1914). 1d. (1d.)
- See also HOSPITALS and NURSING SERVICE.
- Pay Duties during Embodiment.** Instructions in. 2d. (2d.)

(As to prices in brackets, see top of page 2.)

Territorial Force—continued.

- Regulations for the (including the Territorial Force Reserve), and for County Associations.** 1912. (Reprinted, with Amendments published in Army Orders to Dec. 1, 1914). 6d. (7d.)
- Voluntary Aid :—**
- Scheme for the Organization of, in England and Wales. Dec. 1910. (Out of print)
- Do. do., Amendments. 1d. (1d.)
- Do., in Scotland. Oct. 1911. 2d. (2d.)
- Do. do., Amendments. 1d. (1d.)
- Tractor Trials** held by the Experimental Sub-Committee of the Mechanical Transport Committee at Aldershot, Sept. and Oct. 1903. Report on. 6d. (5d.)
- Training and Manœuvre Regulations.** 1913. 4d. (5d.)
- Transport, Mechanical :—**
- Heavy Pontoon Bridge for use by. 1914. Provisional. 2d. (2d.)
- Regulations for the Appointment of Inspectors of. 1d. (1d.)
- Transport. Pack.** (Reprinted, with Amendments, 1916). Notes on. 1d. (1d.)
- Troops.** See MOUNTED and NUMBER.
- Trumpet and Bugle Sounds for the Army.** With Instructions for the Training of Trumpeters and Buglers. 1914. 9d. (3d.); Amendment. (In the press)
- Type Exercises.** See SCHOOLS.
- Typhoid (Anti-) Committee.** Report. 1912. 2s. 6d. (1s. 11d.)
- Typhoid (Anti-) Inoculation Committee.** Report on Blood Changes following Typhoid Inoculation. 1905. 1s. 6d. (1s. 2d.)
- Urdu-English Primer.** For the use of Colonial Artillery. 1899. 15s. (10s. 2d.)
- Valise Equipment.** Instructions for Fitting. Bandolier pattern. 1903. 2d. (2d.) See also EQUIPMENT and “SAM BROWNE” BELT.
- Valparaiso.** The Capture of, in 1891. 1s. (10d.)
- Veneral Disease.** See Medical Services.
- Veterinary Corps. Army.** Standing Orders. 1906. 4d. (4d.)
- Veterinary Manual (War).** 1915. 1d. (1d.)
- Veterinary Services. Army.** Regulations. 1906. (Reprinted, with Amendments to Dec. 1, 1914). 3d. (3d.)
- Volunteer Acts, 1863, 1869, 1895, 1897, and 1900,** except where repealed. Reprint of; Extracts from Regulation of the Forces Acts, 1871 and 1881, and Reserve Forces Act, 1890; and Orders in Council of Feb. 5, 1872. 1d. (1d.)
- Voluntary Aid.** See TERRITORIAL FORCE.
- War Office List, and Administrative Directory** for the British Army. 1914. Sold by Harrison & Sons, 45, Pall Mall. 5s. net.
- Women's War Work in Maintaining the Industries and Export Trade of the United Kingdom.** Information officially compiled for the use of Recruiting Officers, Military Representatives, and Tribunals. Sept. 1916. Illustrated. 1s. (1s.)
- Works Manual. (War).** 1913. Provisional. 4d. (4d.); Appendix I. 1914. 1d. (1d.)
- Yeomanry and Mounted Rifle Training.** Parts I and II. 1912. (Reprinted, with Amendments, 1915). 6d. (6d.)
- Zulu War of 1879.** Narrative of the Field Operations connected with the. 1881. (Reprinted 1907). 3s. (2s. 4d.)